


# OWNERS MANUAL

MANUAL NO. 683712

9/9/2013

# KOYKER<sup>®</sup>

# 785 LOADER

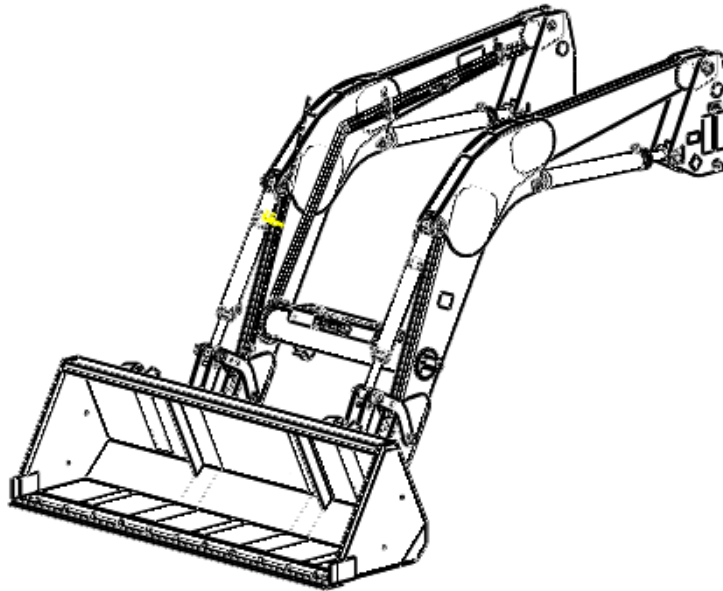

**IMPORTANT-KOYKER DEALER  
BE SURE THIS MANUAL IS GIVEN TO THE  
PURCHASER FOR FUTURE REFERENCE  
KOYKER MANUFACTURING CO., P.O. BOX 409  
LENNOX, SD 57039**

Phone 1-800-456-1107 E-mail [koyker@koykermfg.com](mailto:koyker@koykermfg.com)



# CONTENTS

CONTENTS	PAGE
Introduction.....	1
<b>SAFETY INFORMATION</b>	
Safety Alert Symbol.....	2
Safety Information .....	3-5
Safety Decals .....	6
Tractor & Safety Pointers .....	7
<b>ASSEMBLY INSTRUCTIONS</b>	
Attaching Loader .....	8
Attaching Bucket (Euro).....	9
Attaching Bucket (Koyker FA).....	10
Detaching Loader.....	11
Detaching Bucket (Euro).....	12
Detaching Bucket (Koyker FA).....	13
<b>OPERATING INSTRUCTIONS</b>	
Operational .....	14-15
<b>SERVICE AND MAINTENANCE</b>	
Specifications.....	16
Loader Inspection, Service, and Maintenance .....	17
Hydraulic System Parts List .....	18
Hydraulic System Parts Diagram.....	19
“785” Loader Parts Diagram.....	20
Parts Identification Schedule .....	21-22
Euro Adapter Parts Diagram.....	23
Euro Adapter Parts Identification Schedule.....	24
Koyker FA Adapter Parts Diagram.....	25
Koyker FA Adapter Identificatiion Schedule .....	26
Bucket Parts Diagram .....	27
Bucket Parts Identification Schedule .....	28-29
Manual Accumulator Kit Parts Diagram .....	30
Manual Accumulator Kit Parts Identification Schedule .....	31
Electric Accumulator Kit Parts Diagram .....	32
Electric Accumulator Kit Parts Identification Schedule .....	33
Hydraulic Cylinder Information .....	34
Hydraulics Information.....	35
3 1/4” Cylinder Service Kit .....	36
3 1/2” Cylinder Service Kit.....	37
Hydraulic Cylinder Parts List .....	38
Hydraulic Cylinder Parts Diagram .....	39
Piston and Gland Diagram .....	40
<b>LIMITED WARRANTY INFORMATION</b>	
Limited Warranty.....	41
<b>TORQUE SPECIFICATIONS</b>	
Torque Specifications .....	42

## INTRODUCTION

During a considerable period of time, Koyker Manufacturing Company of Lennox, South Dakota, made a study of the farm loader industry and concluded that the farmer needs a loader that provides fast attachment, quality, dependability, few parts, ruggedness, good delivery, and ease of maintenance, all at a fair price. The fast attaching "785" Farm Loader has achieved these goals. With proper care and handling, it will give many years of good service in normal farm operations.

Please be sure to follow the manual and give it proper care.

## TO THE PURCHASER

You have purchased an excellent product. With proper care and use, it will give you years of good safe service. Use only **KOYKER** or **KOYKER** approved parts in the general maintenance and repair of your equipment. **Please fill out ownership registration card as soon as possible.**

Should you have any questions, comments, improvements, or suggestions regarding the contents of any of the manuals provided, please contact Koyker Manufacturing Company. (800-456-1107 or E-mail [koyker@koykermfg.com](mailto:koyker@koykermfg.com))

**We care about your safety!**

**Remember ALL safety decals are no charge from the factory. Please replace all safety decals if missing or damaged. Your safety is important to us.**

## SAFETY ALERT SYMBOL

The symbol shown below is used to call your attention to instructions concerning your personal safety. Watch for this symbol it points out important safety precautions. It means **ATTENTION! Become Alert! Your Personal Safety Is Involved!**

Read the message that follows and be alert to the possibility of personal injury or death.

**DANGER:** Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

**WARNING:** Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.

**CAUTION:** Indicates a potentially hazardous situation that, if not avoided may result in minor or moderate injury.



**WARNING!**

Anyone who will operate or work around a front-end loader should first read this manual.

# SAFETY

Improper use of a loader can cause serious injury or death. The following safety precautions, and those given on the tractor mount installation instructions, should be thoroughly understood before attempting to operate this machine.

## **BEFORE OPERATING:**

Carefully study and understand this manual, the specific tractor mount instructions, and the attachment(s) manual(s).

Prior to operation, inspect the loader for system leaks and damaged, missing, or malfunctioning components in an effort to avoid the possibility of a dangerous failure involving structural members or hydraulic system components.

Be certain any repairs necessary are completed prior to loader operation.

Follow recommended maintenance procedures and precautions on Page 17.

Completely familiarize yourself and others involved with the operation of the hydraulic control valve before operating the loader.

Be certain all bystanders are clear of the machine and operation area prior to operation.

It may be necessary to add wheel ballast or rear weights as recommended by the tractor manufacturer to maintain stability of the machine to prevent tipping or upset which could result in serious injury or death. See mounting instructions for specific information.

It is recommended that both front and rear wheel treads be set to the widest recommended width to prevent tipping or upset which could result in serious injury or death.

This loader is designed for farm type operations such as snow removal, barn and feedlot cleaning, light commercial or light grading and digging. It's design is **NOT** intended for industrial use.

## **DURING OPERATION:**

Never operate the machine other than from the tractor operator's seat.

Be sure operating area is clear of others during machine operations.

Never lift, hoist, or carry humans in the bucket or on any portion of the loader or loader attachments. Failure to heed, may result in serious injury or death.

## **SAFETY CONTINUED**

Transport the machine load at the slowest speed possible and with the loader boom at the lowest transport position to avoid tipping or upsetting, which may result in serious injury or death.

Be extremely careful when working on inclines or near loose fill, rocks, and holes as they can cause tipping or upsetting which may result in serious injury or death.

Be certain to avoid overhead electrical wires when operating loader. Contact with power lines may cause serious injury or death.

Avoid sudden stops when lowering or lifting the loader boom to prevent loss of control over the machine and/or load, which may result in serious injury or death.

Use maximum ballast and the widest recommended wheel setting on your tractor when handling large shiftable loads.

Never attempt to ram with the bucket at high speed or full tractor power. Sudden impact may result in structural failure and possible serious injury or death.

Never adjust or perform maintenance on the loader or tractor with the unit in motion, or without power source locked out.

Never get under bucket or lift arms or reach through the lift arms or bucket linkage when the loader is in operation. Inadvertent movement may cause serious injury or death.

### **FOLLOWING OPERATION:**

Whenever the machine is not in operation, lower the loader boom and set the tractor brakes, disengage drive, shut the engine off, and remove the ignition key before dismounting the tractor.

If loader is to be disengaged from tractor, be sure the loader is securely supported on a hard, level surface and the stand is securely engaged. Be certain all connections between tractor and loader are free before disengaging.

### **TRANSPORTING:**

Use safety lights and SMV emblem in addition to whatever local codes require when equipment is being transported on the road or highway. Check with proper authorities for legal limitations.

Transport all loads at a slow and safe speed.

Carry the load as low as possible and maintain adequate visibility and good round clearance at all times.

## SAFETY CONTINUED

### PERFORMING MAINTENANCE:

Carefully review, understand, and follow the “maintenance” section in this owners manual before attempting to service loader.

Lower the bucket or attachment to the ground, shut off tractor engine, and relieve pressure in the hydraulic system before adjusting, or servicing the loader.

Escaping hydraulic oil under pressure can penetrate the skin. Never use any part of your body to check for hydraulic leaks. Use cardboard when checking for leaks. See Fig. 5-1. Relieve hydraulic pressure before disconnecting any hydraulic line. Failure to heed may result in serious injury or death.

Before disconnecting hydraulic lines, lower the loader and attachments. Lock out the hydraulic supply and relieve all hydraulic pressure.

Replace any damaged or painted-over decals. See Page 6 for replacement decals.

### REMEMBER:

1. Move Slowly!
2. Always use care and common sense!
3. Be careful for your own sake and for that of others!
4. Koyker Mfg. Co. includes all reasonable means for accident prevention except a safe and careful operator.


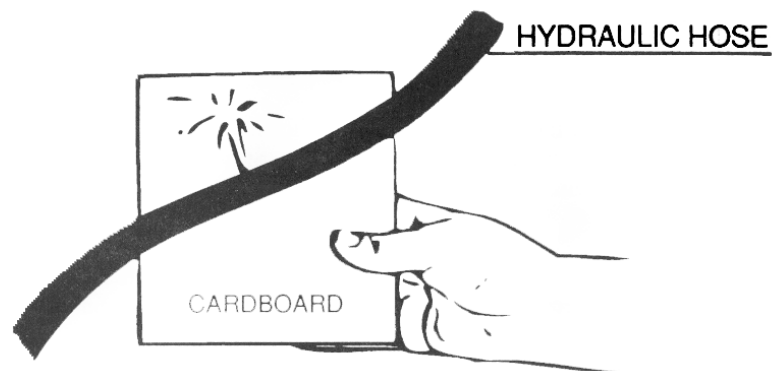


FIG. 5-1

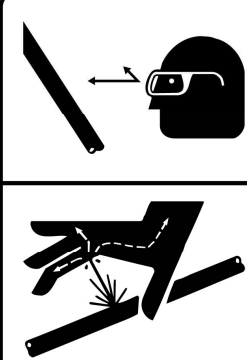

# SAFETY DECALS

	<b>⚠ WARNING</b>
	<p style="text-align: center;"><b>HIGH-PRESSURE FLUID HAZARD</b></p> <p>To prevent serious injury or death:</p> <ul style="list-style-type: none"> <li>Relieve pressure on hydraulic system before servicing or disconnecting hoses.</li> <li>Wear proper hand and eye protection when searching for leaks. Use wood or cardboard instead of hands.</li> <li>Keep all components in good repair.</li> <li>Refer to owners manual if injury should occur.</li> </ul>
	666943



<b>⚠ WARNING</b>

<p>To avoid injury or death caused by falling loads:</p> <ul style="list-style-type: none"> <li>Do not handle round bales unless loader is equipped with approved bale handling attachments.</li> <li>Handle raised loads with caution</li> <li>Carry load low</li> <li>Read operators manual</li> </ul>
<b>⚠ WARNING</b>

<p>To avoid injury from falls:</p> <ul style="list-style-type: none"> <li>Do not work from or allow riders on loaders or its attachments</li> </ul> <p><b>KOYKER MFG CO. INCLUDES ALL REASONABLE MEANS FOR ACCIDENT PREVENTION EXCEPT A SAFE AND CAREFUL OPERATOR.</b></p>
666944

<b>⚠ WARNING</b>

<p>To avoid injury from falling loader:</p> <ul style="list-style-type: none"> <li>Do not walk or perform service under a raised loader.</li> <li>Lower loader to ground when parked.</li> </ul> <p><b>KOYKER MFG CO. INCLUDES ALL REASONABLE MEANS FOR ACCIDENT PREVENTION EXCEPT A SAFE AND CAREFUL OPERATOR.</b></p>
666946
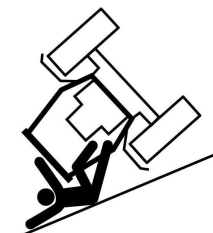
<b>⚠ DANGER</b>

<p>Serious injury or death can result from rollovers.</p> <ul style="list-style-type: none"> <li>Use rops and seatbelt at all times.</li> <li>Add required rear ballast.</li> <li>Move wheels to widest recommended setting.</li> <li>Operate tractor at low seeds.</li> <li>Carry all loads close to ground.</li> </ul>
<b>⚠ DANGER</b>

<p>Serious injury or death can result from contact with electric lines.</p> <p><b>KOYKER MFG CO. INCLUDES ALL REASONABLE MEANS FOR ACCIDENT PREVENTION EXCEPT A SAFE AND CAREFUL OPERATOR.</b></p>
666945

## **TRACTOR & SAFETY POINTERS**

The use of good judgment and common sense is necessary by the operator in using this loader. The front and rear wheels should be set for the widest wheel tread to assure best stability. Use extra caution when rear wheel weights and tire ballast are added to a loader-equipped tractor. **DO NOT** ram into frozen dirt piles, frozen manure piles, ice, etc., with great momentum where sudden shock loads are encountered. Serious and costly damage may result to both the loader and the tractor.

When scraping or back dragging do not extend the attachment cylinders more than one half of the cylinder's stroke. A limited amount of leveling may be done, when the loader valve is arranged with a float control. This will prevent damage to cylinder rods. Never ride in the bucket.

Before operating the loader, be sure no one is standing near it. Only one person, the operator, should be on the tractor. Remain at the controls and under no circumstances leave the tractor unattended with the bucket in a raised position.

Never lift a person in the bucket or walk under a raised bucket.

Never drive your loader-equipped tractor down a hill that is steeper than 15 degrees. Carry all loads low and use care on side hills.

Always keep unused PTO shaft clutch levers disengaged.

Keep hands, feet, and clothing away from all moving parts.

Hydraulic oil, under pressure, can cause injury. Be sure that all connections are tight and that all pressure is relieved before disconnecting any lines.

Care must be taken with your loader cylinders. Nicks, scratches, rust, or other shaft damage can result in worn packing causing cylinder leakage and subnormal performance.

**MOVE SLOWLY**

**USE COMMON SENSE**

**BE CAREFUL FOR YOUR OWN SAKE AND THAT OF OTHER PEOPLE**

# ATTACHING LOADER



## IMPORTANT:

Never attempt loader attachment on grades which are not reasonably level.



Fig 8-1



Fig 8-2



Fig 8-3



Fig 8-4



Fig 8-5



Fig 8-6

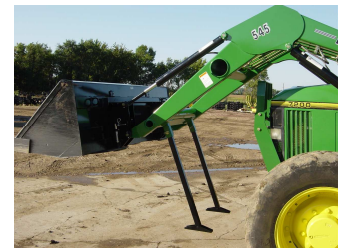


Fig 8-7

1. Check to be sure that the surfaces of the mounts are free of obstructions. (Fig 8-1)
2. Drive the tractor slowly and carefully in between the loader arms only far enough to permit hook-up of the hydraulic system hoses. (Fig. 8-2)
3. Once all hoses have been properly coupled drive the tractor forward checking to insure that the top pivot shaft on each loader upright clears the top cradle on each mount tower. (Fig. 8-3)
4. Allow the top pivot shaft to settle into the cradle on the top of each mount tower. After the uprights slide into the mount raise the loader slowly to engage firmly into the mount cradles. (Fig. 8-4)
5. To lock the loader onto the mount, install the two 669712 – 1 3/8" diameter mount pins into the outside of the upright through the mount tightener, and pin with hitch pin on other side. (Fig. 8-5)
6. To secure the loader to the mount tighten the 1" bolt at the back of the mount tower. (Fig. 8-6) Re-check bolts after first three hours of use.
7. After both uprights are secured to the mounts, raise the loader still further to disengage and store the loader stands in the torque tube of the loader frame. (Fig 8-7)
8. Prior to operation, be certain to review all safety and operation information contained within this manual. Check bolts on back of mount or the first 3 hours of use, then check periodically during normal maintenance procedure.

## ATTACHING BUCKET

1. Prior to attaching the bucket, prepare the adapter for engagement by pulling the adapter handle back (towards the operator) into it's cocked position. With the bucket positioned on level ground, tilt the bucket adapter forward approximately 45°. (Fig 9-1) Slowly drive forward into the bucket, centering the adapter with the bucket as you go and position the top mount bar of the adapter just below the hooks on the back side of the bucket. (Fig 9-2) Slowly raise the loader paying attention that both hooks are engaged. With the top mount bar fully engaged, slowly roll the bucket back. The bottom mount bar of the adapter will come in contact with the bottom of the bucket. (Fig 9-3) Move the adapter handle over and lock in place.



Fig. 9-2

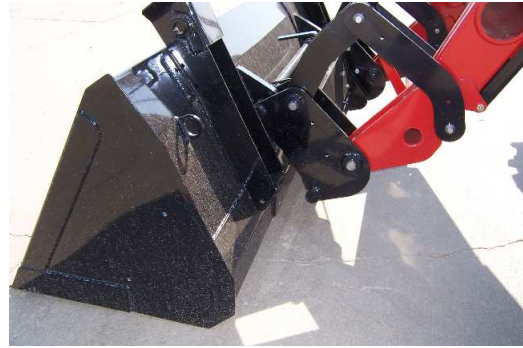


Fig. 9-1



Fig. 9-3



## ATTACHING THE FAST ATTACH BUCKET

1. For Fast Attach Buckets, first tilt the bucket adapter forward so the top round pipe slides into the receiver on the bucket (Fig. 9-1). Rotate the bucket back so the two rear pins line up with the holes on the base plates of the bucket (Fig. 9-2). Turn both pins on bucket adapter so they drop through the holes in the base plate of the bucket (Fig. 9-3). Put #6 hitch pin in place (Fig 9-4).



Fig 9-1

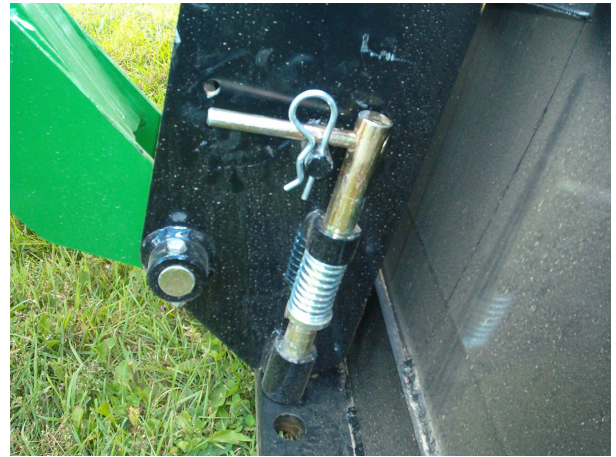


Fig 9-2

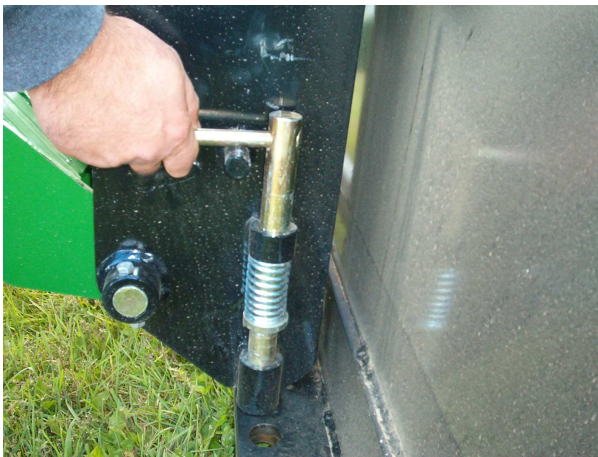


Fig 9-3



Fig 9-4

# DETACHING LOADER



## IMPORTANT:

Never attempt loader attachment on grades which are not reasonably level.



Fig 11-1

1. Raise loader frame slightly to permit loader stand reengagement. (Fig. 11-1)
2. Lower bucket to ground and tip slightly forward to apply pressure to mount connection. Note: This will prevent the loader from inadvertently rocking forward when the mount pins are removed and uprights are disengaged from it's cradle. (Fig. 11-2)
3. Loosen the 1" bolt at the back of the mount enough to permit the removal of the mount pins. (Fig. 11-3)

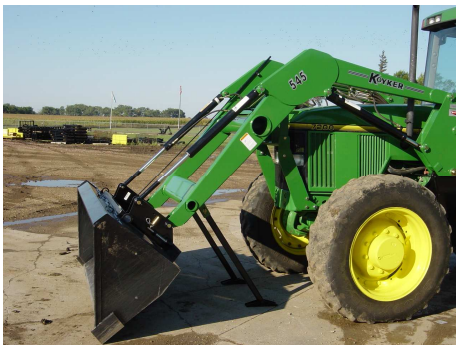


Fig 11-2

4. Use the lift cylinders to disengage the bottom anchor bar from the mount tower. Then tilt the bucket back to rotate the top of the upright up and out of the cradle, and into a storage position. (Fig. 11-4)
5. Before completely backing out, disconnect and store the loader system hydraulic hoses. It is important that the hoses be properly stored to keep the hose couplers as clean as possible. (Fig. 11-5)

## IMPORTANT:

Never store the detached loader where insufficient soil bearing capacity exists. Good firm clay or firmly packed dirt are sufficient, providing the area is dry. If you are unsure, use blocking under the stand foot to disperse the load. Failure to heed, may allow the loader to settle and prevent attachment at later date.



Fig 11-3



Fig 11-4

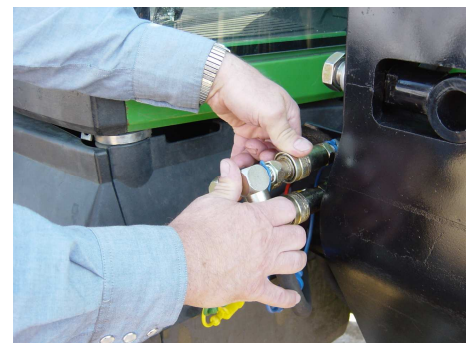


Fig 11-5



## DETACHING BUCKET

1. Prior to detaching the bucket, prepare the adapter for disengagement by pulling the adapter handle back (towards the operator) into its unlocked position (Fig 11-1 & Fig 11-2). The bucket should be resting on level ground. Slowly lower and dump your way out of the bucket (Fig 11-3). Slowly back away from the bucket until you are clear of the bucket and safe to maneuver (Fig 11-4).



Fig 11-1



Fig 11-2



Fig 11-3



Fig 11-4

## DETACHING THE FAST ATTACH BUCKET

1. With the bucket resting on the ground, first remove #6 Hitch pin clip (Fig 12-1). Then lift and turn both pins on the bucket so that they rest on top of the Latch Stop Pin (Fig 12-2). Put the #6 Hitch pin clip back in place to prevent the locking pins from engaging (Fig 12-3). Slowly lower and dump your way out of the bucket (Fig 12-4). Slowly back away from the bucket until you are clear of the bucket and safe to maneuver.



Fig 12-1



Fig 12-2



Fig 12-3



Fig 12-4



## OPERATION



### WARNING:

Never allow anyone to operate the loader until they have carefully reviewed and understood this owners manual.

### FILLING THE BUCKET:

When material is piled on a slope, it is best to drive tractor up the slope straight into the pile. Operating sideways on a slope has a tendency to tip the loading unit. Drive tractor straight into the pile, raise the bucket about six inches, then drop bucket and drive forward until the bucket is filled. Tilt bucket completely back, raise main frame and back away from the material pile.

### DUMPING THE BUCKET:

When dumping, bring the bucket to proper dumping height which is just high enough so it will not strike objects as the load is being dumped. With the bucket tipped, drive tractor forward and raise the bucket at the same time to distribute the load evenly.

### RAISING THE BUCKET:



### WARNING:

Make sure material in bucket cannot spill out on to tractor when loader boom is raised. Keep clear of overhead obstructions such as trees, limbs or power lines when raising the bucket.

Side cutting is the best method of reducing large stockpiles. If the sides of the pile are too high, use the loader to pull them down and reduce the possibility of slides.

**Make sure you keep all lines, cylinders, and complete hydraulic system free of all sand, dirt, and foreign matter. Use only clean oil in the hydraulic system. When removing the loader from the tractor, be sure to plug all open ports. If the loader will be out of service for several days or longer, grease the exposed polished piston shafts on the bucket and the lift cylinders.**

### WARNING:



**NEVER** attempt to operate the loader with someone near the loader frame or bucket.

**If this loader is equipped with a Grapple fork, be sure Grapple teeth are closed before leaving seat of tractor.**

## OPERATION CONTINUED

### SOFT RIDE FEATURE:

The soft ride feature was designed to diminish the stresses on the tractor, mounts, loader and operator while transporting heavy loads to and from the field. The soft ride feature incorporates a pre-charged nitrogen accumulator to act as a shock absorber similar to that of an automobile. While in operation the loader may feel “squishy” or soft.

### MOUNTING SOFT RIDE KIT:

1. Mount the loader and plumbing kit. Relieve the lift cylinder pressure on the loader.
2. Locate the lift hose (bottom steel line) on the loader. Disconnect the hose. **See in Fig. 1-1.**
3. Install the run tee. Point the tee down.
4. Attach the accumulator block to the bracket. Secure with two 1/4” x 3” HH cap screws, lock washers and nuts.
5. Attach the fittings (one on top and two on bottom of block). Install the accumulator. (See page 26 or 28)
6. Using three 3/8” x 1 3/4” HH cap screws, flat washers and hex lock nuts attach the accumulator bracket to the mount of the loader .
7. Run hydraulic hose from accumulator block to the previously installed tee fitting (see line 3).  
**TIGHTEN ALL THE CONNECTIONS SECURELY!**
8. Start the tractor. Actuate the loader to charge the hydraulic system. Add hydraulic fluid as required using the recommended amount for your tractor.

### WARNING:



**Make sure that all pressure is relieved from the hydraulic system and accumulator before removing for service. The manual valve must be opened to relieve pressure from the accumulator. The manual valve then needs to be closed before removing the accumulator. Failure to relieve pressure can cause injury.**



Fig 1-1

# SPECIFICATIONS

## KOYKER PRO 785 LOADER SPECIFICATIONS

### Description of Equipment Rated

Loader Model.....	PRO 785
Attachment Adapter & Bucket Size.....	7'
Rated Flow .....	25 GPM
Maximum Pressure .....	2900 PSI
Lift Cylinder Dia.....	3 1/2" Bore
Attachment Cylinder Dia.....	3 1/4" Bore
Tractor Horsepower Range .....	145-275 HP

### Dimensional Specifications

(A) *Maximum Lift Height to Pivot Pin.....	15' 6"
(B) *Lift Height under Level Bucket.....	14' 8"
(C) *Clearance with Bucket Fully Dumped.....	12' 5"
(D) *Reach at Maximum Lift Height.....	DNA
(E) Maximum Dump Angle .....	45°
(F) *Reach with Bucket on Ground.....	DNA
(G) Maximum Rollback Angle .....	34°
(H) *Digging Depth .....	7"
(J) *Overall Height in Carry Position .....	7' 1"

### Operational Specifications

(U) *Lift Capacity to Maximum Height at Pivot Pin .....	7035 lbs.
(V) *Lift Capacity to Maximum Height 31.5" Forward of Pivot Pin.....	4960 lbs.
(Y) *Breakout Force at Ground Line at Pivot Pin .....	8881 lbs.
(Z) *Breakout Force at Ground Line 31.5" Forward of Pivot Pin.....	6691 lbs.
*Raising Time .....	6 seconds
*Lower Time.....	4 seconds
*Attachment Dumping Time .....	4 seconds
*Attachment Rollback Time .....	3 seconds

\*Specifications based on ASABE standards S301.3 (Front-End Agricultural Loader Ratings) The above information is based on testing done by Koyker Mfg. Variations in maximum lift height and other specs for different tractors are due to tire sizes, variations in loader mounting locations and hydraulic system efficiency.

Specifications are subject to change without notice and without liability therefore.

# LOADER INSPECTION, SERVICE, AND MAINTENANCE

Lower the bucket to the ground, shut off tractor engine, and relieve the pressure in the hydraulic system before adjusting, lubricating, or servicing the loader.

Periodically check all bolts for looseness and re-torque if necessary.

Before storage, be certain all hydraulic cylinders are fully collapsed so that the rod will not be exposed to the elements or damaged.

Be certain hydraulic system remains sealed at all times to prevent contamination.

Check and maintain an adequate fluid level in the tractor reservoir prior to use.

Inspect all hydraulic system hoses and fittings. Replace prior to further operation if damaged.

Periodically inspect the two grease fittings for the engagement pins. See page 21 for adapter parts diagram.



## WARNING!

Escaping hydraulic oil under pressure can penetrate the skin. Never use body to check for hydraulic leaks. Use cardboard when checking for leaks. See Fig. 13-1. Relieve hydraulic pressure before disconnecting any hydraulic line. Failure to heed may result in serious injury or death.


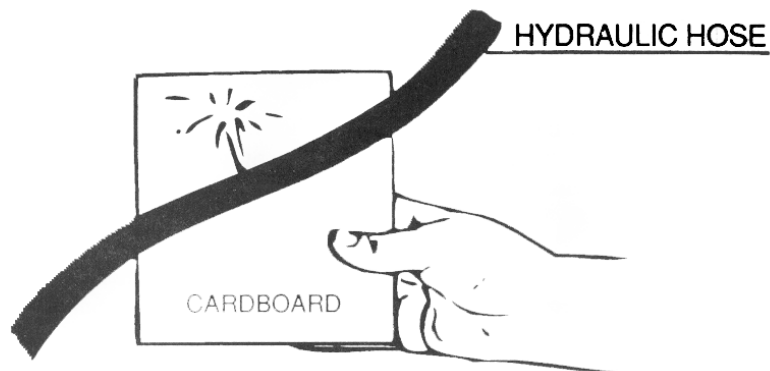


FIG. 13-1

## HYDRAULIC SYSTEM PARTS LIST

<b>ITEM NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>QTY.</b>
1	683704	3 1/2" LIFT CYLINDER	2
2	683705	3 1/4' BUCKET CYLINDER	2
3	681193	1ST OIL LINE	1
4	681194	2ND OIL LINE	1
5	681195A	3RD OIL LINE (A)	1
6	681195B	3RD OIL LINE (B)	1
7	681531A	4TH OIL LINE (A)	1
8	681531B	4TH OIL LINE (B)	1
9	681157	20" HYDRAULIC HOSE	2
10	681158	24" HYDRAULIC HOSE	2
11	681551	28" HYDRAULIC HOSE	2
12	681159	42" HYDRAULIC HOSE	2

# HYDRAULIC SYSTEM PARTS DIAGRAM

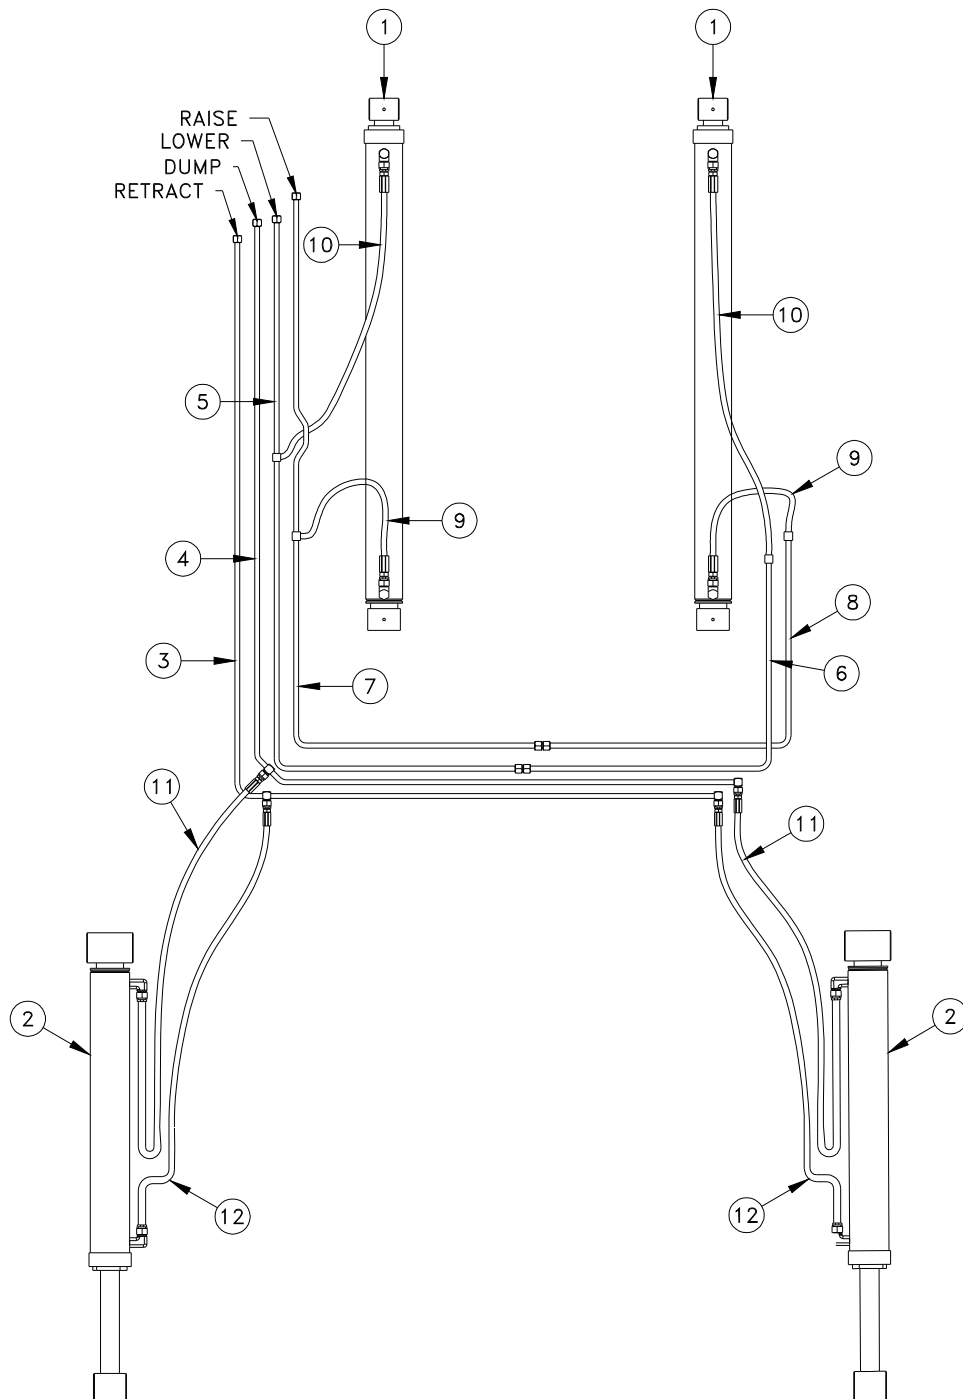



## PARTS IDENTIFICATION SCHEDULE


ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	683700	MAINFRAME	1
2	683701	RH UPRIGHT	1
3	683702	LH UPRIGHT	1
4	683703	EURO ADAPTER ASSEMBLE	1
5	683704	LIFT CYLINDER	2
6	683705	ATTACHMENT CYLINDER	2
7	683706	FRONT LINKAGE	2
8	683707	PIVOT PIN	4
9	683709	RH OUTER LINKAGE	1
10	683710	LH OUTER LINKAGE	1
11	683711	PIVOT PIN	4
12	683713	LOADER STAND	2
13	659713	PIVOT PIN	4
14	680752	INDICATOR PLATE	1
15	681517	INDICATOR ROD	1
16	681540	OIL LINE COVER	1
17	681193	1ST OIL LINE	1
18	681194	2ND OIL LINE	1
19	681195A	3RD OIL LINE RH	1
20	681195B	3RD OIL LINE LH	1
21	681531A	4TH OIL LINE RH	1
22	681531B	4TH OIL LINE LH	1
23	640671	#3 HITCH PIN	2
24	666946	CRUSHED WARNING DECAL	2
25	666944	FALLING WARNING DECAL	1
26	657632	GREASE ZERK	8
27	660006	HITCH PIN	2
28	679789	HOSE CLAMP	1
29	666943	HYDRAULIC PRESSURE WARNING DECAL	5
30	672275	IMPORTANT "CHECK BOLT" DECAL	2
31	680205	KOYKER DECAL	1
32	640128	NUT - .3125-18	8
33	700560	NUT - .375-16	4
34	673336	NUT INSERT; .3125-18	7
35	676798	NUT INSERT; .3125-18	4
36	672503	OIL LINE CLAMP	18
37	659712	PIN	2
38	641119	PIN	2
39	666945	ROLLOVER/SHOCK DANGER DECAL	1
40	673615	SCREW; .3125-18 x 2.000	5



## PARTS IDENTIFICATION SCHEDULE

ITEM NO.	PART NO.	DESCRIPTION	QTY.
41	676797	SCREW; .3125-18 X 2.500	4
42	658951	SCREW; .3125-18 X 2.75	8
43	680743	SCREW; .375-16 X 2.500	1
44	640042	SCREW; .375-16 X 3.00	4
45	666941	SERIAL NUMBER	1
46		RH KOYKER DECAL	1
47		LH KOYKER DECAL	1
48		"785" LOGO DECAL	2
49	681581	BUSHING	12


# EURO ADAPTER PARTS DIAGRAM

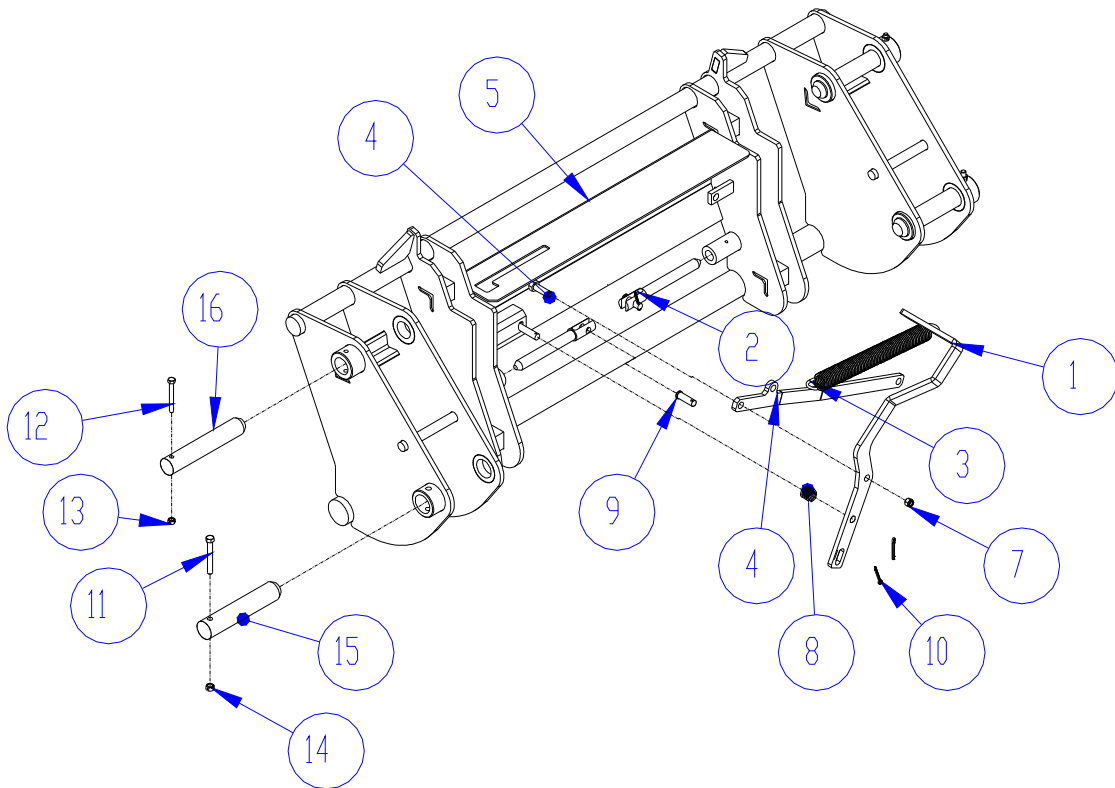

## EURO ADAPTER PARTS IDENTIFICATION SCHEDULE

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	680769	EURO ADAPTER HANDLE (PAINTED)	1
2	679304	PIVOT PIN - .79" (20MM) X 8"	2
3	679308	EXTENSION SPRING	1
4	680766	CROSS MEMBER WLDT	1
5	683746	EURO ADAPTER WLDT	1
6	657632	GREASE ZERK-1/4-28	2
7	654121	NUT - .375 - 16 GR 2 LOCK NYLON INSERT	1
8	680767	COMPRESSION SPRING	1
9	680761	CLEVIS PIN .5" X 1.5"	2
10	680768	COTTER PIN - .156 X 1.50	3
11	640042	SCREW-.375-16 X 3.00 GR 5 HHC	2
12	658951	SCREW-.3125-18 X 2.75 GR 5 HHC	2
13	640128	NUT - .313-18 GR 2 CENTER LOCK	2
14	700560	NUT - .375-16 GR 2 CENTER LOCK	2
15	683707	PIVOT PIN (ZINC)	2
16	685214	PIVOT PIN 1.375 x 7.875 (ZINC)	2



# KOYKER FA ADAPTER PARTS DIAGRAM

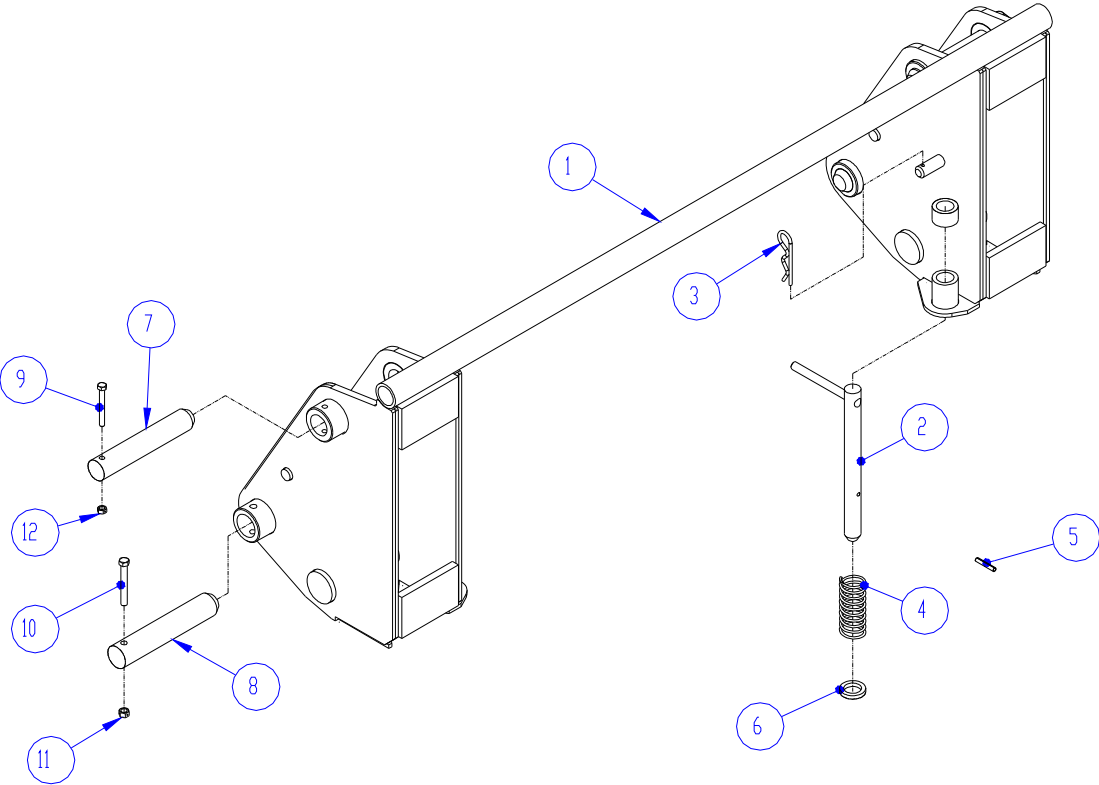

<b>KOYKER FA ADAPTER PARTS IDENTIFICATION SCHEDULE</b>
--

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	683293	BUCKET ADAPTER WELDMENT	1
2	654699	LATCH PIN WLDT	2
3	640246	#6 HITCH PIN	2
4	650388	SPRING .135 WIRE X 1.460ID X 4	2
5	650389	PIN-ROLL .25 X 1.5	2
6	650390	WASHER	2
7	685214	PIVOT PIN 1.375 x 7.875 (ZINC)	2
8	685216	PIVOT PIN; 1.500 X 8.125 (ZINC)	2
9	658951	SCREW-.3125-18 X 2.75 GR 5 HHC	2
10	640042	SCREW-.375-16 X 3.00 GR 5 HHC	2
11	700560	NUT - .375-16 GR 2 CENTER LOCK	2
12	640128	NUT - .313-18 GR 2 CENTER LOCK	2

# BUCKET PARTS DIAGRAM

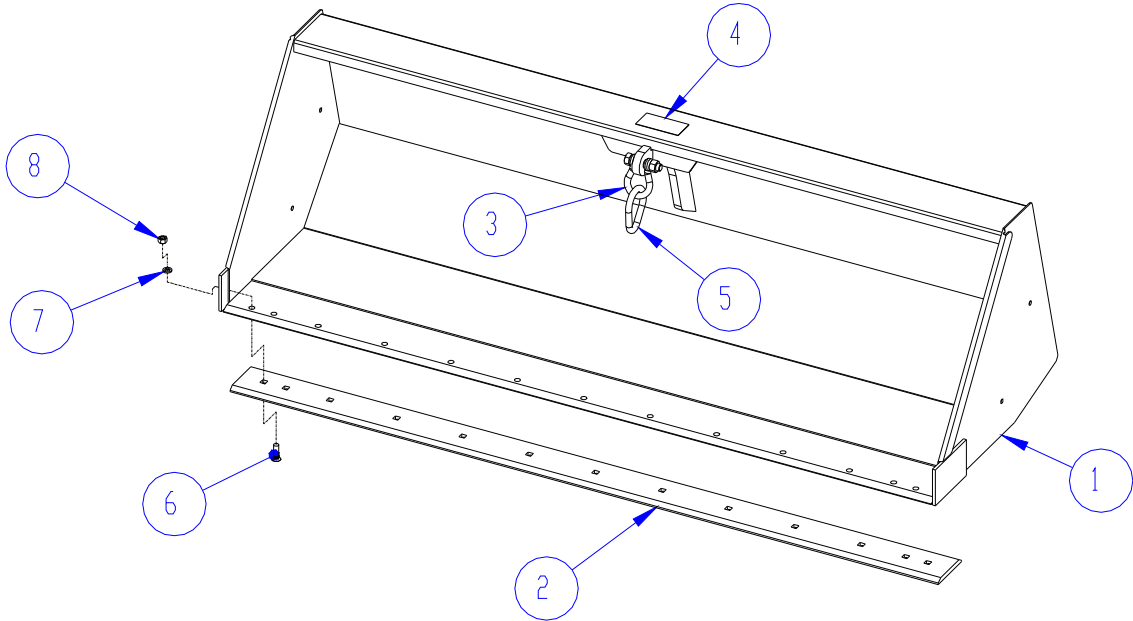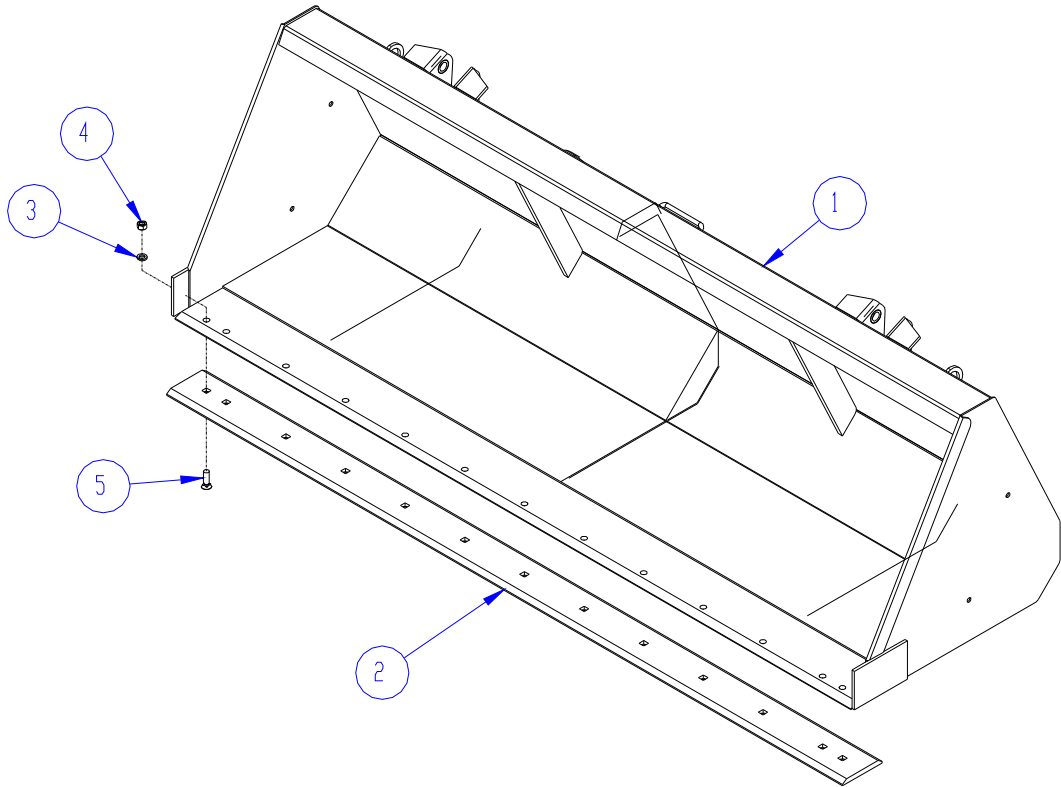

# BUCKET PARTS IDENTIFICATION SCHEDULE

## Optional Euro Buckets with Bolt-on Blade

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	682871	84" EURO BUCKET WELDMENT	1
2	672847	84" BOLT ON BUCKET BLADE	1
3	640159	WASHER - 5/8" SPRING LOCK	11
4	640142	NUT-.625-11 GR 5 HEX	11
5	673366	SCREW - .625-11 X 2.00 GR 5 PH	11

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	682872	96" EURO BUCKET WELDMENT	1
2	672848	96" BOLT ON BUCKET BLADE	1
3	640159	WASHER - 5/8" SPRING LOCK	13
4	640142	NUT-.625-11 GR 5 HEX	13
5	673366	SCREW - .625-11 X 2.00 GR 5 PH	13

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	682873	102" EURO BUCKET WELDMENT	1
2	679772	102" BOLT ON BUCKET BLADE	1
3	640159	WASHER - 5/8" SPRING LOCK	13
4	640142	NUT-.625-11 GR 5 HEX	13
5	673366	SCREW - .625-11 X 2.00 GR 5 PH	13

## BUCKET PARTS IDENTIFICATION SCHEDULE (Cont')

### Optional Euro Buckets with Bolt-on Blade & Clevis


ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	672844	84" FAST ATTACHING BUCKET WELDMENT	1
2	672847	84" BOB	1
3	672852	BUCKET CLEVIS	1
4	672981	WARNING DECAL	1
5	673286	SLING LINK	1
6	673366	SCREW - .625-11 X 2.00 GR 5 PH	11
7	640159	WASHER - 5/8" SPRING LOCK	11
8	640142	NUT-.625-11 GR 5 HEX	11

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	672845	96" FAST ATTACHING BUCKET WELDMENT	1
2	672848	96" BOB	1
3	672852	BUCKET CLEVIS	1
4	672981	WARNING DECAL	1
5	673286	SLING LINK	1
6	673366	SCREW - .625-11 X 2.00 GR 5 PH	13
7	640159	WASHER - 5/8" SPRING LOCK	13
8	640142	NUT-.625-11 GR 5 HEX	13



# MANUAL ACCUMULATOR KIT PARTS DIAGRAM

KIT NUMBER 681530

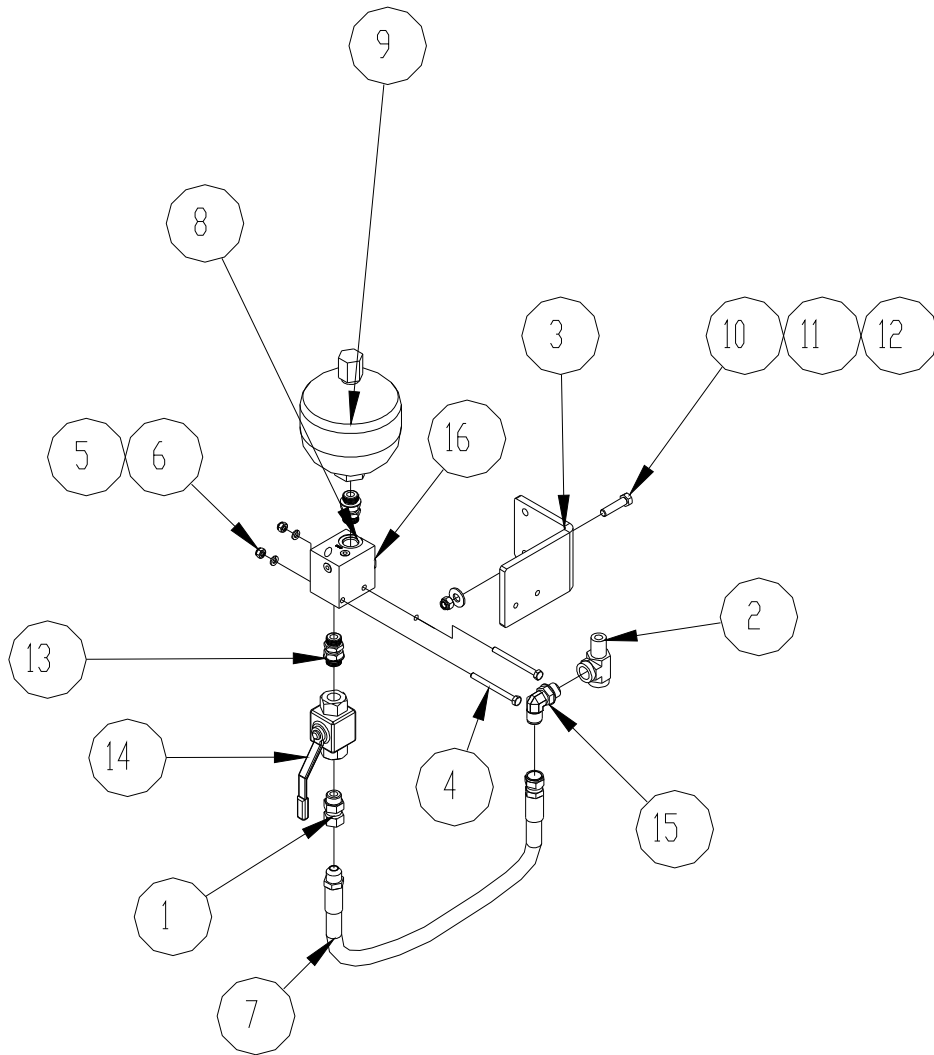


# MANUAL ACCUMULATOR KIT PARTS IDENTIFICATION

KIT NUMBER 681530

KEY	PART NUMBER	DESCRIPTION	QTY
1	653624	HYD FITTING 8ORM-8FJX	1
2	679792	#8 HYD TEE	1
3	682690	PLATE-BRACKET SOFT BRACKET	1
4	640956	SCREW-.250-20 X 3.00 GR 5 HHC	2
5	640149	WASHER - 1/4" SPRING LOCK	2
6	654453	NUT - .250-20 GR 2 LOCK NYLON INSERT	2
7	675463	HOSE-.5-18 8FJX-8MJX	1
8	679791	ACCUMULATOR BLOCK	1
9	679726	SOFT RIDE ACCUMULATOR	1
10	640034	SCREW-.375-16 X 1.50 GR 5 HHC	3
11	640154	WASHER - 3/8" FLAT	3
12	654121	NUT - .375 - 16 GR 2 LOCK NYLON INSERT	3
13	679796	FITTING 8ORM X 8ORM	2
14	680744	1/2" BALL VALVE	1
15	663201	FITTING-HYD 90 ELB 8 MJX - 8 ORM	1
16	681178	DIRECT ACTING CHECK VALVE	1

# ELECTRIC ACCUMULATOR KIT PARTS DIAGRAM

KIT NUMBER 681163

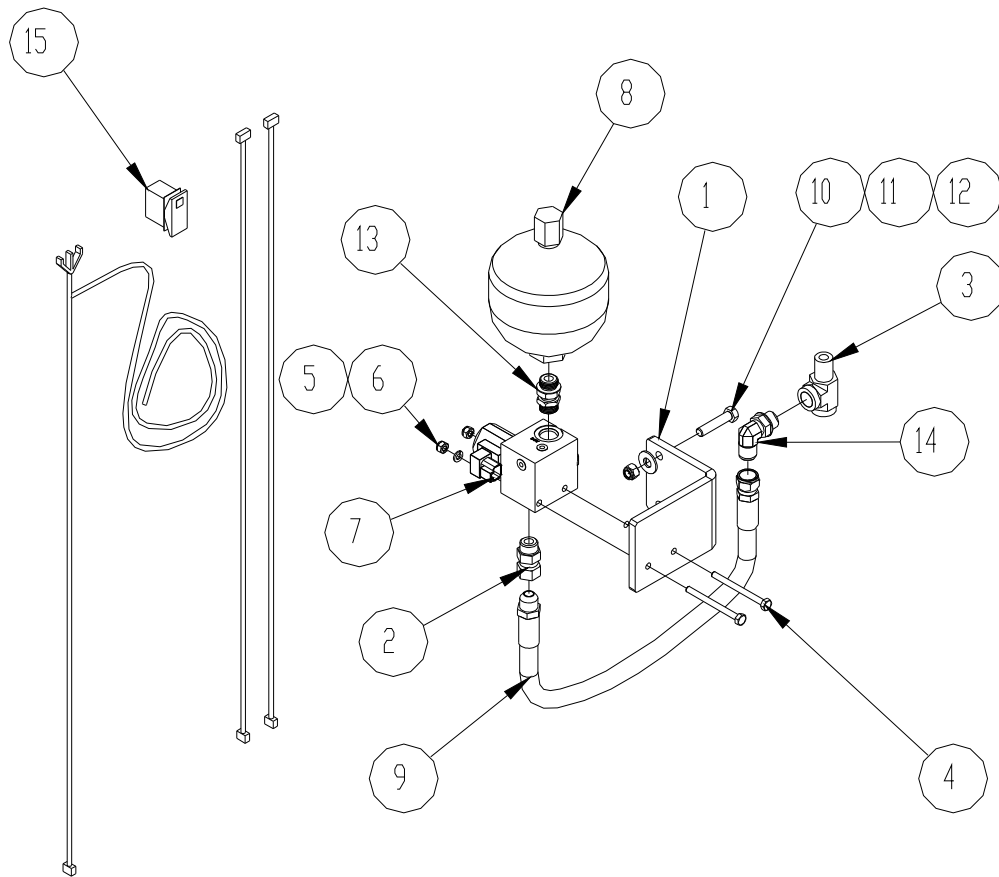

# ELECTRIC ACCUMULATOR KIT PARTS IDENTIFICATION

KIT NUMBER 681163

KEY	PART NUMBER	DESCRIPTION	QTY
1	682690	PLATE-BRACKET SOFT BRACKET	1
2	653624	HYD FITTING 8ORM-8FJX	1
3	679792	#8 HYD TEE	1
4	640956	SCREW-.250-20 X 3.00 GR 5 HHC	2
5	640149	WASHER - 1/4" SPRING LOCK	2
6	654453	NUT - .250-20 GR 2 LOCK NYLON INSERT	2
7	681181	MANIFLOD BLOCK ASSY	1
8	679726	SOFT RIDE ACCUMULATOR	1
9	675463	HOSE-.5-18 8FJX-8MJX	1
10	673012	SCREW-.375-16 X 1.75 GR 5 HHT	3
11	640154	WASHER - 3/8" FLAT	3
12	654121	NUT - .375 - 16 GR 2 LOCK NYLON INSERT	3
13	679796	FITTING 8ORM X 8ORM	1
14	663201	FITTING-HYD 90 ELB 8 MJX - 8 ORM	1
15	681470	KIT-WIRING SOFT RIDE	1

## CYLINDERS

**IMPORTANT: Read these service tips before beginning assembly of cylinder gland or piston.**

1. Keep seals clean from the time they are removed from package until they are installed.
2. Clean the groove or bore into which the seal is to be fitted before installing the seal.
3. Never touch the seal lip in handling. Always pick up the seal by its outer member.
4. Inspect each seal lip carefully for nicks, scratches, and dirt at time of installation. If dirty use a soft, clean cloth and carefully wipe off seal. **DO NOT wipe seal with fingers, this only imbeds dirt in the seal.**



**NEVER clean rubber related seals with a mineral based solvent! Clean rubber seals in denatured alcohol or non-mineral based solvents only.**

NOTE: Seals can be made more pliable and easier to install, if first heated in hydraulic oil to 160°F. Never use direct heat on any seals.

## HYDRAULIC SYSTEM

The hoses from the tractor valves are attached to the oil lines which are on the inside of the loader main frame.

Re-check all joints to prevent leakage after loader is mounted and in operation.

### KEEP SYSTEM CLEAN - USE ONLY CLEAN OIL



**CAUTION!** It is of utmost importance that the hydraulic system of this loader be kept free from dirt and foreign matter.

**All internal parts to the hydraulic system of your loader have been carefully cleaned, inspected, and plugged with protective caps before shipment. All protective caps should be kept in place until the hydraulic system is connected.**

**NOTE:** Over 75 percent of all hydraulic failure and service is caused by dirt, etc. in the system.

**REMEMBER - CLEAN OIL MEANS LONGER LIFE!**

## 3 1/4" CYLINDER SERVICE KITS WITH 1 3/4" SHAFT

### **KIT NO. 681616:**

Complete kit with all seals needed to service one (1) 3 1/4" Cylinder. Consists of:

1 each	3 1/4" Gland "O" Ring
1 each	3 1/4" Backup Ring
1 each	1 3/4" U-cup Seal
1 each	1 3/4" Rod Wiper
2 each	3 1/4" U-cup Seal
1 each	1 1/8" Rod "O" Ring
1 each	1 1/8" Locknut

### **KIT NO. 681617:**

Complete assembled 3 1/4" Cylinder Gland with all seals. Consists of:

1 each	3 1/4" Aluminum Gland
1 each	3 1/4" Gland "O" Ring
1 each	3 1/4" Backup Ring
1 each	1 3/4" U-cup Seal
1 each	1 3/4" Rod Wiper
1 each	1 1/8" Locknut

### **KIT NO. 681618:**

Complete assembled 3 1/4" Cylinder Piston with all seals. Consists of:

1 each	3 1/4" Aluminum Piston
2 each	3 1/4" U-cup Seal
1 each	1 1/8" Rod "O" Ring
1 each	1 1/8" Locknut

### **KIT NO. 681619:**

All seals needed to service one (1) 3 1/4" Cylinder Gland. Consists of:

1 each	3 1/4" Gland "O" Ring
1 each	3 1/4" Backup Ring
1 each	1 3/4" U-cup Seal
1 each	1 3/4" Rod Wiper
1 each	1 1/8" Locknut

### **KIT NO. 681620:**

All seals needed to service one (1) 3 1/4" Cylinder Piston. Consists of:

2 each	3 1/4" U-cup Seal
1 each	1 1/8" Rod "O" Ring
1 each	1 1/8" Locknut

## 3 1/2" CYLINDER SERVICE KITS WITH 2" SHAFT

### **KIT NO. 681555:**

Complete kit with all seals needed to service one (1) 3 1/2" Cylinder. Consists of:

1 each	3 1/2" Gland "O" Ring
1 each	3 1/2" Backup Ring
1 each	2" U-cup Seal
1 each	2" Rod Wiper
2 each	3 1/2" U-cup Seal
1 each	2" Wear Ring
1 each	1 1/8" Rod "O" Ring
1 each	1 1/8" Locknut

### **KIT NO. 681556:**

Complete assembled 3 1/2" Cylinder Gland with all seals. Consists of:

1 each	3 1/2" Aluminum Gland
1 each	3 1/2" Gland "O" Ring
1 each	3 1/2" Backup Ring
1 each	2" U-cup Seal
1 each	2" Rod Wiper
1 each	2" Wear Ring
1 each	1 1/8" Locknut

### **KIT NO. 683331:**

Complete assembled 3 1/2" Cylinder Piston with all seals. Consists of:

1 each	3 1/2" Aluminum Piston
2 each	3 1/2" U-cup Seal
1 each	1" Rod "O" Ring
1 each	1 1/8" Locknut

### **KIT NO. 681557:**

All seals needed to service one (1) 3 1/2" Cylinder Gland. Consists of:

1 each	3 1/2" Gland "O" Ring
1 each	3 1/2" Backup Ring
1 each	2" U-cup Seal
1 each	2" Rod Wiper
1 each	2" Wear Ring
1 each	1 1/8" Locknut

### **KIT NO. 683332:**

All seals needed to service one (1) 3 1/2" Cylinder Piston. Consists of:

2 each	3 1/2" U-cup Seal
1 each	1 1/8" Rod "O" Ring
1 each	1 1/8" Locknut



# HYDRAULIC CYLINDER PARTS LIST


## LIFT CYLINDER (Part No. 683704)

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	683755	TUBE WELDMENT	1
2	680100	NUT - 1.125-12 GR C LOCK THIN	1
3	682792	PISTON ASSEMBLY	1
4	681615	1 1/8" O-RING	1
5	680343	GLAND ASSEMBLY	1
6	683756	ROD WELDMENT	1


## BUCKET CYLINDER (Part No. 683705)

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	683750	TUBE WELDMENT	1
2	680100	NUT - 1.125-12 GR C LOCK THIN	1
3	681613	PISTON ASSEMBLY	1
4	681615	1 1/8" O-RING	1
5	675570	GLAND ASSEMBLY	1
6	683751	ROD WELDMENT	1

# HYDRAULIC CYLINDER PARTS DIAGRAM


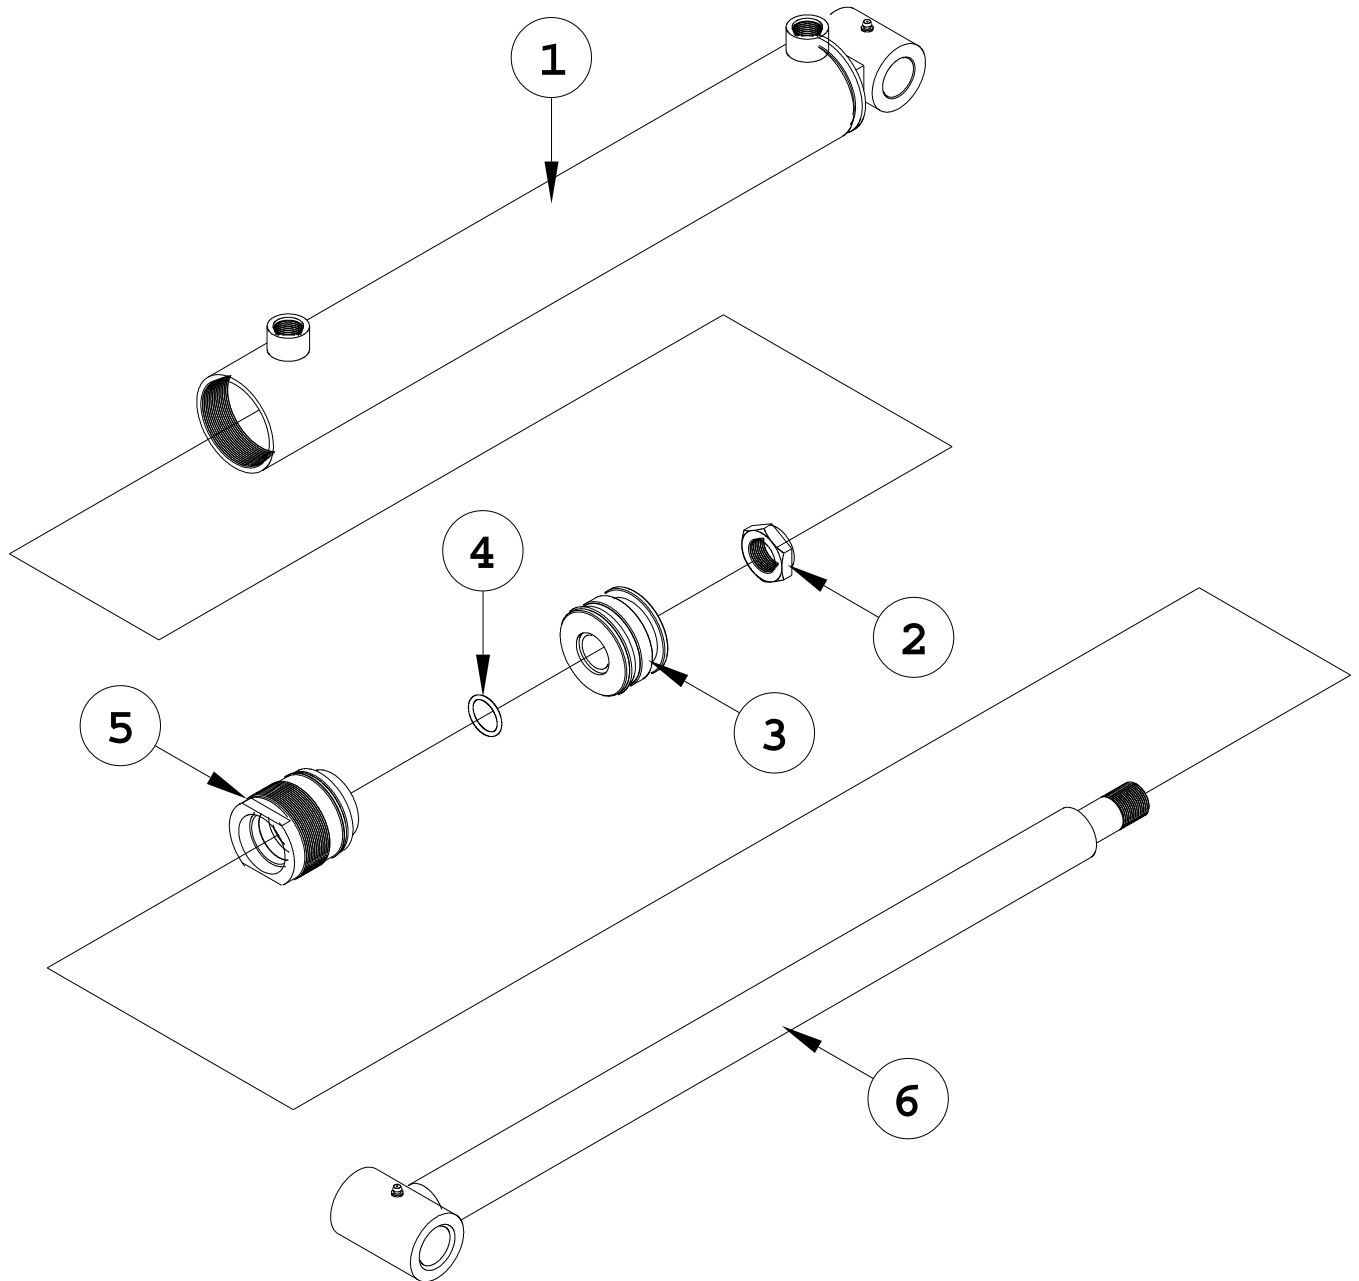


# CYLINDER GLAND SERVICE DIAGRAM

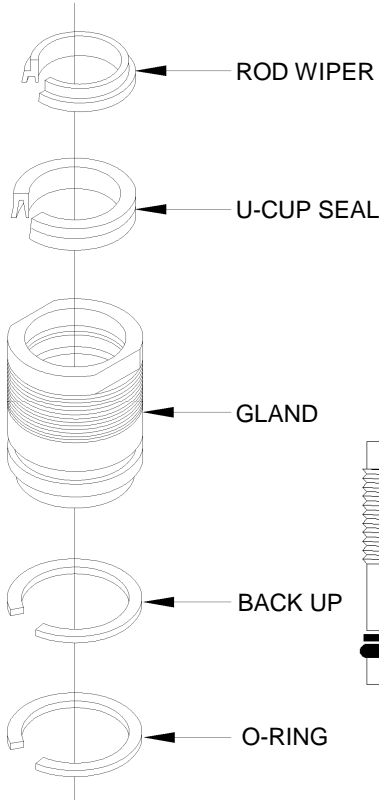

All gland seals shown with a section removed to facilitate correct installation.

Note: To install rod wiper and U-cup seal, fold similar to shape shown below, slip into gland bore and locate each in its respective groove. Tools are used to fold seals, take care not to damage sealing surfaces.

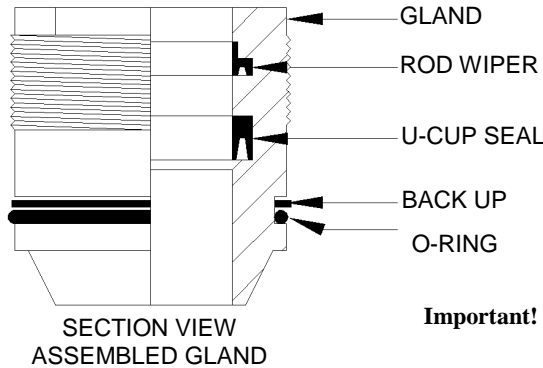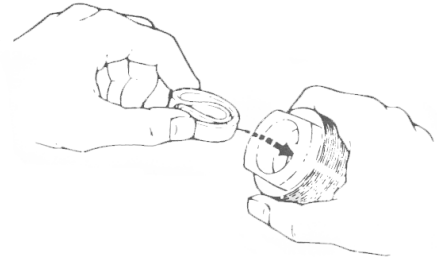


**Important!** Be sure all gland and piston seals have been installed correctly before cylinder is assembled!

# CYLINDER PISTON SERVICE DIAGRAM


To Remove Seals:

Carefully cut across each seal with a sharp knife. Be sure not to scratch sealing surfaces of aluminum piston. If a sharp knife is not available. An electric soldering gun or hot iron may be used to melt throughout seals.

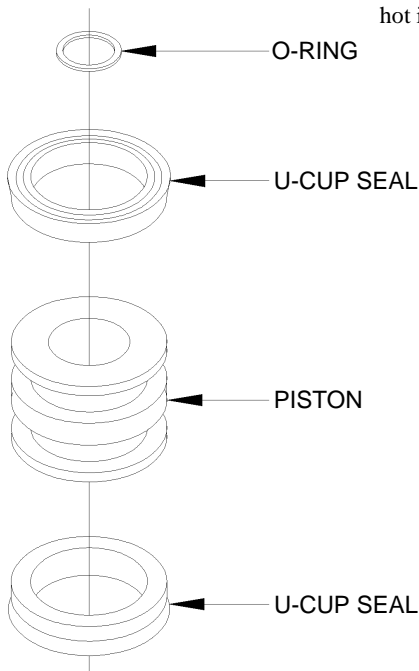

To Install Seals:

1. Thoroughly clean piston sealing surface of all foreign matter.
2. Heat new seals in hydraulic oil to 160° F. Never use a direct flame or heated water on hydraulic seals.
3. Remove seals from oil, wipe dry and install in piston grooves as shown in illustration at left. Be sure seals have completely seated in piston grooves before allowed to cool.
4. Replace piston on cylinder shaft and assemble cylinder when seals have cooled to room temperature.

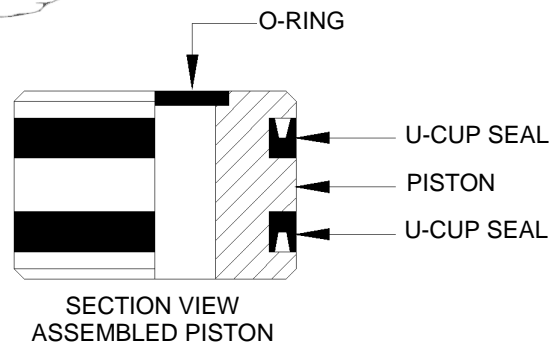



**NEW KOYKER FRONT-END LOADER WARRANTY**

<b>LIMITED WARRANTY FOR NEW KOYKER MANUFACTURING COMPANY PRODUCTS</b>		
<p><b>A. GENERAL PROVISIONS.</b> "Koyker" means Koyker Manufacturing Company, 200 N. Cleveland, P.O. Box 409, Lennox, South Dakota 57039. The warranties described below are provided by Koyker to the original purchasers of new products purchased from Koyker or from an authorized Koyker Dealer (the "Products"). Under these warranties, Koyker will, at its option, repair or replace at its factory any Product covered under these warranties which is found to be defective in material and workmanship during the applicable warranty term or refund the purchase price paid for the defective Product. Customer will be responsible for labor charges for removing the defective Product and re-installing the repaired or replacement Product, any premium charge for overtime labor requested of Koyker and shipping charges to and from Koyker's factory. These warranties are not transferrable.</p>		
<p><b>B. WARRANTY PERIOD.</b> Subject to exclusions and limitations set forth herein, each new Product is warranted for the number of years specified below. Each warranty term begins from the date of purchase regardless of delay in receipt of the Product by Customer due to the time required to process, handle, ship, assemble, construct and install the Product. Customer must retain proof of the date of purchase. Replacement parts for and repairs to the Product will be warranted only for the remainder of the original warranty term. The replacement parts for or repairs to the Product will not extend the warranty term beyond the original warranty term. Products include all parts, components and accessories.</p>		
<b>PRODUCTS</b>		
Koyker Front-End Loaders	Consumer Use	2 years
	Commercial or Government Use	1 year
<p><b>C. ITEMS COVERED SEPARATELY.</b> The Koyker warranties do not cover any parts, components or materials that are part of the Product, or used in conjunction with the Product, that are not manufactured by Koyker. Such parts, components and materials will be subject to the warranties provided by the manufacturer, if any.</p>		
<p><b>D. WHAT IS NOT WARRANTED.</b> Koyker does not warrant and is not responsible for the following: (1) used Products; (2) modification or alteration of the Products; (3) Products that have not been properly installed or not installed in accordance with the instruction manual, improper assembly, or improper construction by any persons other than Koyker employees; (4) depreciation, damage or loss caused by the use of parts, components or accessories not provided by Koyker, unauthorized repairs, normal wear, lack of necessary and proper maintenance, a failure to follow operating instructions/recommendations, misuse, lack of proper protection during storage, vandalism or theft, exposure to the elements or corrosive materials, accidents or acts of nature including lightning, flooding, hail, straight winds and tornadoes; and (5) cosmetic damage or damage that does not hinder the functionality of the Products.</p>		
<p><b>E. LIMITATIONS OF WARRANTIES AND CUSTOMER'S REMEDIES.</b> To the extent permitted by law, neither Koyker, the Dealer nor any person or company affiliated with either of them makes any warranties, representations, conditions or promises express or implied as to the quality, performance or freedom from defects of the Products covered by these warranties other than those set forth herein. THERE ARE NO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. NEITHER KOYKER, THE DEALER, NOR ANY PERSON OR COMPANY AFFILIATED WITH EITHER OF THEM WILL BE LIABLE FOR ANY DAMAGES, INCLUDING, BUT NOT LIMITED TO, INCIDENTAL, SPECIAL, EXEMPLARY, CONSEQUENTIAL, LOST PROFITS AND REVENUES, LOST USE OF THE PRODUCTS OR ANY OTHER PROPERTY, BODILY INJURY OR PROPERTY DAMAGE CLAIMS OF ANY PERSON, LOST COMMODITIES, REMOVAL OR STORAGE COSTS FOR THE PRODUCTS, OTHER EQUIPMENT AND COMMODITIES, DAMAGE TO THE ENVIRONMENT ARISING FROM OR IN ANY MANNER RELATED TO ANY RELEASE OF HAZARDOUS MATERIALS, AND REMEDIATION EXPENSES THEREFORE, WHETHER BASED ON CONTRACT, TORT, STRICT LIABILITY OR ANY OTHER LEGAL BASIS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO INSTANCE WILL KOYKER, THE DEALER OR ANY PERSON OR COMPANY AFFILIATED WITH EITHER OF THEM BE LIABLE TO CUSTOMER OR ANY PERSON IN AN AMOUNT IN EXCESS OF THE PURCHASE PRICE PAID BY CUSTOMER FOR THE PRODUCT.</p>		
<p><b>F. NO DEALER WARRANTY.</b> THE DEALER HAS NO AUTHORITY TO MAKE ANY WARRANTY, REPRESENTATION, CONDITION OR PROMISE ON BEHALF OF KOYKER, OR TO MODIFY THE TERMS OR LIMITATIONS OF THIS WARRANTY IN ANY WAY.</p>		
<p><b>G. GOVERNING LAW/VENUE.</b> These warranties, and all terms set forth herein, are governed by the laws of the State of South Dakota and, where applicable, the laws of the United States of America. Any and all disputes arising from these warranties, the purchase and use of the Products, bodily injury and property damage claims or otherwise must be venued in the South Dakota Circuit Court sitting in Minnehaha County, South Dakota. Customer agrees to such venue and waives any challenge to such court's jurisdiction based upon lack of personal jurisdiction or inconvenience.</p>		
<p><b>H. SECURING WARRANTY SERVICE.</b> In order to receive warranty services, customer must give Koyker written notice of a warranty claim within 30 days of the date of discovery of the defective materials or workmanship, and Customer must complete the following steps:</p>		
(1)	Obtain from Koyker a Return Materials Authorization Number ("RMA Number") by calling the <b>Customer Service Department at 1-800-456-1107</b> or <b>e-mail Koyker at koyker@koykermfg.com</b> , and providing the following information:	
	An explanation as to why the Product is being returned.	
	The name of the territory representative, Dealer or Koyker salesperson from whom the Product was purchased.	
	The Dealer's identification number.	
	The invoice number and date of purchase.	
	Customer's name, phone number, fax number, mailing address and email address.	
	The date that the Product will be returned.	
(2)	Pay the shipping charges to ship the Product to Koyker's factory, and the return shipping charges.	
(3)	Ship the Product to Koyker at 200 N. Cleveland, Lennox, South Dakota 57039.	

# TORQUE SPECIFICATIONS

## 1. Tightening Bolts & Nuts

Check all loader bolts and nuts for tightness every 50 working hours. The movement of the loader over rough terrain may cause bolts to come under pressure and over a long period of time some slight stretching of the bolt may occur. The slack created may need to be taken up by tightening. Please refer below for recommended torque settings.

### Metric Recommended Torque Settings

Size	Class 8.8				Class 10.9			
	Lubricated		Dry		Lubricated		Dry	
	N*m	Lb-ft	N*m	Lb-ft	N*m	Lb-ft	N*m	Lb-ft
M6.....	9	6.5	11	8.5.....	13	9.5	17	12
M8.....	22	16	28	20.....	32	24	40	30
M10.....	43	32	55	40.....	63	47	80	60
M12.....	75	55	95	70.....	110	80	140	105
M14.....	120	88	150	110.....	175	130	225	165
M16.....	190	140	240	175.....	275	200	350	225
M18.....	260	195	330	250.....	375	275	475	350
M20.....	375	275	475	350.....	530	400	675	500
M22.....	510	375	650	475.....	725	540	925	675
M24.....	650	475	825	600.....	925	675	1150	850
M27.....	950	700	1200	875.....	1350	1000	1700	1250
M30.....	1300	950	1650	1200.....	1850	1350	2300	1700
M33.....	1750	1300	2200	1650.....	2500	1850	3150	2350
M36.....	2250	1650	2850	2100.....	3200	2350	4050	3000

### SAE Recommended Torque Settings

Size	Grade 5				Grade 8			
	Lubricated		Dry		Lubricated		Dry	
	N*m	Lb-ft	N*m	Lb-ft	N*m	Lb-ft	N*m	Lb-ft
1/4.....	9.5	7	12	9.....	13.5	10	17	12.5
5/16.....	20	15	25	18.....	28	21	35	26
3/8.....	35	26	44	33.....	50	36	63	46
7/16.....	55	41	70	52.....	80	58	100	75
1/2.....	85	63	110	80.....	120	90	150	115
9/16.....	125	90	155	115.....	175	130	225	160
5/8.....	170	125	215	160.....	215	160	300	225
3/4.....	300	225	375	280.....	425	310	550	400
7/8.....	490	360	625	450.....	700	500	875	650
1.....	725	540	925	675.....	1050	750	1300	975
1-1/8.....	900	675	1150	1200.....	2050	1500	2600	1950
1-3/8.....	1700	1250	2150	1550.....	2700	2000	3400	2550
1-1/2.....	2250	1650	2850	2100.....	3600	2650	4550	3350



DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only and include a +/- 10% variance. Check tightness of fasteners periodically. DO NOT use air powered wrenches. Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.