

# OWNERS MANUAL


MANUAL NO. 665708

9/9/2013

# KOYKER<sup>®</sup>

## 160

## LOADER

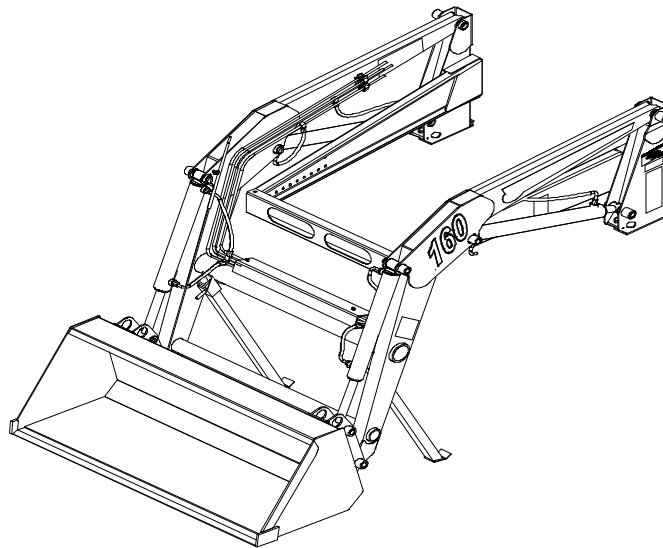

**IMPORTANT-KOYKER DEALER  
BE SURE THIS MANUAL IS GIVEN TO THE  
PURCHASER FOR FUTURE REFERENCE  
KOYKER MFG. CO., P.O. BOX 409  
LENNOX, SD 57039**

Phone 1-800-456-1107 E-mail [koyker@koykermfg.com](mailto:koyker@koykermfg.com)



# CONTENTS

<b>CONTENTS</b>	<b>PAGE</b>
Introduction.....	1
<b>SAFETY INFORMATION</b>	
Safety Alert Symbol .....	2
Safety Information .....	3-5
Safety Decals .....	6
Tractor & Safety Pointers .....	7
<b>ASSEMBLY INSTRUCTIONS</b>	
Attaching Loader .....	8
Attaching Bucket .....	8
Detaching Loader.....	9-10
<b>OPERATING INSTRUCTIONS</b>	
Operation.....	11
<b>SERVICE AND MAINTENANCE</b>	
Specifications.....	12-13
Loader Inspection, Lubrication, and Maintenance .....	14
Hydraulic System Parts Schedule.....	15
Hydraulic System Parts Diagram.....	16
“160” Loader Parts Diagram .....	17
Parts Identification Schedule .....	18-19
“160” Skid Steer Adapter Diagram .....	20
Parts Identification Schedule .....	21
Hydraulic Cylinders Information.....	22
1 3/4” Cylinder Service Kit .....	23
2” Cylinder Service Kit .....	24
Cylinder Parts Schedule.....	25
Cylinder Parts Diagram .....	26
Piston and Gland Diagram .....	27
Dinoil Valve Hookup.....	28
<b>LIMITED WARRANTY INFORMATION</b>	
Limited Warranty.....	29
<b>TORQUE SPECIFICATIONS</b>	
Torque Specifications .....	30

# INTRODUCTION

For years, Koyker Manufacturing Company of Lennox, South Dakota, has provided the loader industry with innovative ideas for a more efficient and dependable means of material handling. Now, with the increasing popularity of the MFWD (Mechanical Front Wheel Drive) tractors, Koyker has again met the challenge and provided the market with a loader that will allow the efficient use of these tractors in material handling. The KOYKER 160 Loader provides you with state-of-the-art design and innovation for your material handling chores.

Features such as quality construction, ease of maintenance, and high performance operating capacities, all at a low price, make the new 160 Loader one of the most efficient loaders ever. With proper care and handling, it will provide many years of dependable service.

This manual is designed to provide you with important information regarding the basic loader and bucket. Our sincere intent, in providing this manual, is to help you or those involved better understand the machine and to prevent accidents.

Should you have any questions, comments, improvements, or suggestions regarding the contents of any of the manuals provided, please contact Koyker Manufacturing Company (800-456-1107 or E-mail [koyker@koykermfg.com](mailto:koyker@koykermfg.com)).

**We care about your safety!**

**Remember ALL safety decals are no charge from the factory. Please replace all safety decals if missing or damaged. Your safety is important to us.**

## SAFETY ALERT SYMBOL

The symbol shown below is used to call your attention to instructions concerning your personal safety. Watch for this symbol, it points out important safety precautions. It means **ATTENTION! Become Alert! Your Personal Safety Is Involved!**

Read the message that follows and be alert to the possibility of personal injury or death.

**DANGER:** Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

**WARNING:** Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.

**CAUTION:** Indicates a potentially hazardous situation that, if not avoided may result in minor or moderate injury.



**WARNING!**

Anyone who will operate or work around a front-end loader should first read this manual.

# SAFETY

Improper use of a loader can cause serious injury or death. The following safety precautions, and those given on the tractor mount installation instructions, should be thoroughly understood before attempting to operate this machine.

## **BEFORE OPERATING:**

Carefully study and understand this manual, the specific tractor mount instructions, and the attachment(s) manual(s).

Prior to operation, inspect the loader for system leaks and damaged, missing, or malfunctioning components in an effort to avoid the possibility of a dangerous failure involving structural members or hydraulic system components.

Be certain any repairs necessary are completed prior to loader operation.

Follow recommended maintenance procedures and precautions on Page 12.

Completely familiarize yourself and others involved with the operation of the hydraulic control valve before operating the loader.

Be certain all bystanders are clear of the machine and operation area prior to operation.

It may be necessary to add wheel ballast or rear weights as recommended by the tractor manufacturer to maintain stability of the machine to prevent tipping or upset which could result in serious injury or death. See mounting instructions for specific information.

It is recommended that both front and rear wheel treads be set to the widest recommended width to prevent tipping or upset which could result in serious injury or death.

This loader is designed for farm type operations such as snow removal, barn and feedlot cleaning, light commercial or light grading and digging. It's design is **NOT** intended for commercial and/or industrial use.

## **DURING OPERATION:**

Never operate the machine other than from the tractor operator's seat.

Be sure operating area is clear of others during machine operations.

Never lift, hoist, or carry humans in the bucket or on any portion of the loader or loader attachments. Failure to heed, may result in serious injury or death.

## **SAFETY CONTINUED**

Transport the machine load at the slowest speed possible and with the loader boom at the lowest transport position to avoid tipping or upsetting, which may result in serious injury or death.

Be extremely careful when working on inclines or near loose fill, rocks, and holes as they can cause tipping or upsetting which may result in serious injury or death.

Be certain to avoid overhead electrical wires when operating loader. Contact with power lines may cause serious injury or death.

Avoid sudden stops when lowering or lifting the loader boom to prevent loss of control over the machine and/or load, which may result in serious injury or death.

Use maximum ballast and the widest recommended wheel setting on your tractor when handling large shiftable loads.

Never attempt to ram with the bucket at high speed or full tractor power. Sudden impact may result in structural failure and possible serious injury or death.

Never adjust or perform maintenance on the loader or tractor with the unit in motion, or without power source locked out.

Never get under bucket or lift arms or reach through the lift arms or bucket linkage when the loader is in operation. Inadvertent movement may cause serious injury or death.

### **FOLLOWING OPERATION:**

Whenever the machine is not in operation, lower the loader boom and set the tractor brakes, disengage drive, shut the engine off, and remove the ignition key before dismounting the tractor.

If loader is to be disengaged from tractor, be sure the loader is securely supported on a hard, level surface and the stand is securely engaged. Be certain all connections between tractor and loader are free before disengaging.

### **TRANSPORTING:**

Use safety lights and SMV emblem in addition to whatever local codes require when equipment is being transported on the road or highway. Check with proper authorities for legal limitations.

Transport all loads at a slow and safe speed.

Carry the load as low as possible and maintain adequate visibility and good round clearance at all times.

## SAFETY CONTINUED

### PERFORMING MAINTENANCE:

Carefully review, understand, and follow the “maintenance” section in this owners manual before attempting to service loader.

Lower the bucket or attachment to the ground, shut off tractor engine, and relieve pressure in the hydraulic system before adjusting, lubricating, or servicing the loader.

Escaping hydraulic oil under pressure can penetrate the skin. Never use any part of your body to check for hydraulic leaks. Use cardboard when checking for leaks. See Fig. 5-1. Relieve hydraulic pressure before disconnecting any hydraulic line. Failure to heed may result in serious injury or death.

Before disconnecting hydraulic lines, lower the loader and attachments. Lock out the hydraulic supply and relieve all hydraulic pressure.

Replace any damaged or painted-over decals. See Page 7 for replacement decals.

### REMEMBER:

1. Move Slowly!
2. Always use care and common sense!
3. Be careful for your own sake and for that of others!
4. Koyker Mfg. Co. includes all reasonable means for accident prevention except a safe and careful operator.


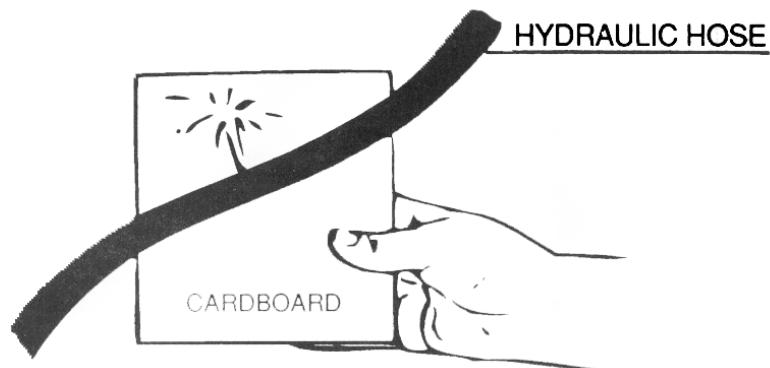


FIG. 5-1

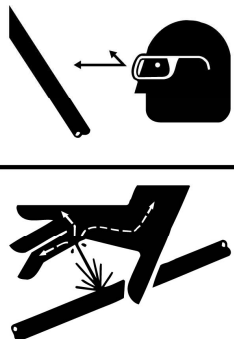

# SAFETY DECALS

	<div style="background-color: orange; text-align: center; padding: 5px;"><b>⚠ WARNING</b></div> <p style="text-align: center;"><b>HIGH-PRESSURE FLUID HAZARD</b></p> <p>To prevent serious injury or death:</p> <ul style="list-style-type: none"> <li>• Relieve pressure on hydraulic system before servicing or disconnecting hoses.</li> <li>• Wear proper hand and eye protection when searching for leaks. Use wood or cardboard instead of hands.</li> <li>• Keep all components in good repair.</li> <li>• Refer to owners manual if injury should occur.</li> </ul> <p style="text-align: right; font-size: small;">666943</p>
---	--

**⚠ WARNING**



To avoid injury or death caused by falling loads:

- Do not handle round bales unless loader is equipped with approved bale handling attachments.
- Handle raised loads with caution
- Carry load low
- Read operators manual

**⚠ WARNING**



To avoid injury from falls:

- Do not work from or allow riders on loaders or its attachments

**KOYKER MFG CO. INCLUDES ALL REASONABLE MEANS FOR ACCIDENT PREVENTION EXCEPT A SAFE AND CAREFUL OPERATOR.**

666944

**⚠ WARNING**




To avoid injury from falling loader:

- Do not walk or perform service under a raised loader.
- Lower loader to ground when parked.

**KOYKER MFG CO. INCLUDES ALL REASONABLE MEANS FOR ACCIDENT PREVENTION EXCEPT A SAFE AND CAREFUL OPERATOR.**

666946


**⚠ DANGER**

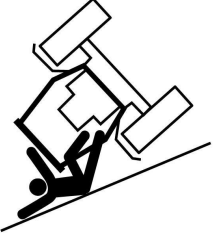

Serious injury or death can result from rollovers.

- Use rops and seatbelt at all times.
- Add required rear ballast.
- Move wheels to widest recommended setting.
- Operate tractor at low seeds.
- Carry all loads close to ground.

**⚠ DANGER**



Serious injury or death can result from contact with electric lines.

**KOYKER MFG CO. INCLUDES ALL REASONABLE MEANS FOR ACCIDENT PREVENTION EXCEPT A SAFE AND CAREFUL OPERATOR.**

666945

## **TRACTOR & SAFETY POINTERS**

The use of good judgment and common sense is necessary by the operator in using this loader. The front and rear wheels should be set for the widest wheel tread to assure best stability. Use extra caution when rear wheel weights and tire ballast are added to a loader-equipped tractor. **DO NOT** ram into frozen dirt piles, frozen manure piles, ice, etc., with great momentum where sudden shock loads are encountered. Serious and costly damage may result to both the loader and the tractor.

When scraping or back dragging do not extend the attachment cylinders more than one half of the cylinder's stroke. A limited amount of leveling may be done, when the loader valving is arranged with a float control. This will prevent damage to cylinder rods. Never ride in the bucket.

Before operating the loader, be sure no one is standing near it. Only one person, the operator, should be on the tractor. Remain at the controls and under no circumstances leave the tractor unattended with the bucket in a raised position.

Never lift a person in the bucket or walk under a raised bucket.

Never drive your loader-equipped tractor down a hill that is steeper than 15 degrees. Carry all loads low and use care on side hills.

Always keep unused PTO shaft clutch levers disengaged.

Keep hands, feet, and clothing away from all moving parts.

Hydraulic oil, under pressure, can cause injury. Be sure that all connections are tight and that all pressure is relieved before disconnecting any lines.

Care must be taken with your loader cylinders. Nicks, scratches, rust, or other shaft damage can result in worn packing causing cylinder leakage and subnormal performance.

**MOVE SLOWLY**

**USE COMMON SENSE**

**BE CAREFUL FOR YOUR OWN SAKE AND THAT OF OTHER PEOPLE**

## ATTACHING THE LOADER



### **IMPORTANT:**

Never attempt loader attachment on grades which are not reasonably level.

1. Check to be sure that the top surface of both mounting shoes are free of bolts, screws or other obstructions.
2. Drive the tractor slowly and carefully in between the loader arms only far enough to permit hook-up of the hydraulic system hoses.
3. Once all hoses have been properly coupled, drive the tractor forward checking to insure that the bottom of each upright clears the mount shoes.
4. To allow the upright base to settle into the mount shoe, tip the bucket down slowly. After the upright contacts the shoe, engage the upright anchor bar into the rear of the shoe by driving the tractor ahead slowly.
5. To secure the loader, install the 661983 - 3/4" diameter pins. Tighten the 3/4" diameter bolt on the front of the upright to draw the upright to the rear of the shoe.
6. After both uprights are secured to the shoes, raise the loader slowly to disengage and store the loader stand.
7. Prior to operation, be certain to review all safety and operation information contained within this manual.

1. For pin on buckets, assemble pins and retaining bolts as shown in the Parts Diagram of this manual.

## ATTACHING THE BUCKET

Make sure all retaining bolts are secure and lubricate necessary points. Inspect pin and bolts periodically for tightness and wear.

# DETACHING THE LOADER



## IMPORTANT:

Never attempt loader detachment on grades which are not reasonably level.



Fig. 1-1



Fig. 1-2

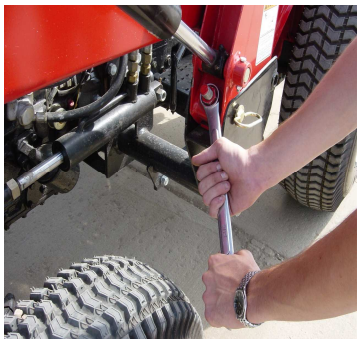


Fig. 1-3

1. Raise loader frame slightly to permit loader stands to be placed into the stand tubes (see Fig. 1-1) attached to the torque tube, then pined in place.
2. Lower loader until stands are firmly on the ground then rotate bucket forward until cutting edge contacts the ground (see Fig. 1-2).  
**NOTE:** This will prevent the loader from inadvertently rocking forward when the attachment screws are removed.
3. Loosen the 3/4" bolt on the front of both uprights (see Fig. -3).

## DETACHING THE LOADER CONTINUED

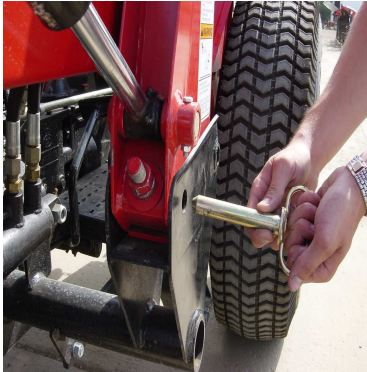


Fig. 1-4



Fig. 1-5



Fig. 1-6

4. Then remove the 661983 - 3/4" diameter locking pin (see Fig. 1-4).
5. Carefully, and very slowly, back out far enough to permit separation of the upright anchor (see Fig. 1-5), then rotate bucket back to lift uprights off rear mounts (Fig. 1-6).  
**NOTE:** Should the loader move when tractor is backed up, try rotating the bucket up or down.
6. Before completely backing out, disconnect and store the loader system hydraulic hoses. It is important that the hoses be properly stored to keep the hose couplers as clean as possible.

### IMPORTANT:

Never store the detached loader where insufficient soil bearing capacity exists. Good firm clay or firmly packed dirt are sufficient, providing the area is dry. If stability is in question, use blocking under the stand foot to disperse the load. Failure to heed, may allow the loader to settle and prevent attachment at a later date.

**NOTE:** Loader should be stored with the bucket rotated all the way back to assure maximum weight transfer.

### WARNING:



Re-couple any hydraulic hose together for your particular hydraulic system when necessary to prevent damage to tractor hydraulics. See your particular mount or hydraulic hook-up instructions.

## OPERATION



### **WARNING:**

Never allow anyone to operate the loader until they have carefully reviewed and understood this owners manual.

### **FILLING THE BUCKET:**

Approach and enter the pile with the bucket level.

Roll bucket back gradually as the loader moves through the pile.

### **RAISING THE BUCKET:**



### **WARNING:**

Make sure material in bucket cannot spill out on to tractor when loader boom is raised. Keep clear of overhead obstructions such as trees, limbs or power lines when raising the bucket.

Side cutting is the best method of reducing large stockpiles. If the sides of the pile are too high, use the loader to pull them down and reduce the possibility of slides.



### **WARNING:**

**NEVER** attempt to operate the loader with someone near the loader frame or bucket.

# SPECIFICATIONS

## KOYKER 160 LOADER SPECIFICATIONS

### Description of Equipment Rated

Loader Model .....	160
Bucket Size .....	4'
Rated Flow .....	8 GPM
Maximum Pressure .....	2200 PSI
Lift Cylinder Dia. ....	1 3/4" Bore
Attachment Cylinder Dia. ....	1 3/4" Bore
Tractor Horsepower Range .....	20-45 HP

### Dimensional Specifications

(A) *Maximum Lift Height to Pivot Pin.....	8' 5"
(B) *Lift Height under Level Bucket.....	7' 10"
(C) *Clearance with Bucket Fully Dumped.....	6' 7"
(D) *Reach at Maximum Lift Height.....	1' 10"
(E) Maximum Dump Angle .....	50°
(F) *Reach with Bucket on Ground .....	4' 1"
(G) Maximum Rollback Angle .....	23°
(H) *Digging Depth .....	5"
(J) *Overall Height in Carry Position .....	4' 9"

### Operational Specifications

(U) *Lift Capacity to Maximum Height at Pivot Pin .....	1480 lbs.
(V) *Lift Capacity to Maximum Height 19.7" Forward of Pivot Pin.....	1100 lbs.
(Y) *Breakout Force at Ground Line at Pivot Pin .....	2810 lbs.
(Z) *Breakout Force at Ground Line 19.7" Forward of Pivot Pin.....	2140 lbs.
*Raising Time .....	4 seconds
*Lower Time.....	2 seconds
*Attachment Dumping Time .....	3 seconds
*Attachment Rollback Time .....	2 seconds

\*Specifications based on ASABE standards S301.3 (Front-End Agricultural Loader Ratings) The above information is based on testing done by Koyker Mfg. Variations in maximum lift height and other specs for different tractors are due to tire sizes, variations in loader mounting locations and hydraulic system efficiency.

Specifications are subject to change without notice and without liability therefore.

# SPECIFICATIONS

## KOYKER 160 LOADER SPECIFICATIONS

### Description of Equipment Rated

Loader Model .....	160
Bucket Size .....	4'
Rated Flow .....	8 GPM
Maximum Pressure .....	2200 PSI
Lift Cylinder Dia. ....	2" Bore
Attachment Cylinder Dia. ....	2" Bore
Tractor Horsepower Range .....	20-45 HP

### Dimensional Specifications

(A) *Maximum Lift Height to Pivot Pin.....	8' 5"
(B) *Lift Height under Level Bucket.....	7' 10"
(C) *Clearance with Bucket Fully Dumped.....	6' 7"
(D) *Reach at Maximum Lift Height.....	1' 10"
(E) Maximum Dump Angle .....	50°
(F) *Reach with Bucket on Ground .....	4' 1"
(G) Maximum Rollback Angle .....	23°
(H) *Digging Depth .....	5"
(J) *Overall Height in Carry Position .....	4' 9"

### Operational Specifications

(U) *Lift Capacity to Maximum Height at Pivot Pin .....	2020 lbs.
(V) *Lift Capacity to Maximum Height 19.7" Forward of Pivot Pin.....	1500 lbs.
(Y) *Breakout Force at Ground Line at Pivot Pin .....	3780 lbs.
(Z) *Breakout Force at Ground Line 19.7" Forward of Pivot Pin.....	2880 lbs.
*Raising Time .....	5 seconds
*Lower Time.....	3 seconds
*Attachment Dumping Time .....	3 seconds
*Attachment Rollback Time .....	2 seconds

\*Specifications based on ASABE standards S301.3 (Front-End Agricultural Loader Ratings) The above information is based on testing done by Koyker Mfg. Variations in maximum lift height and other specs for different tractors are due to tire sizes, variations in loader mounting locations and hydraulic system efficiency.

Specifications are subject to change without notice and without liability therefore.



## LOADER INSPECTION, LUBRICATION, AND MAINTENANCE

Lower the bucket to the ground, shut off tractor engine, and relieve the pressure in the hydraulic system before adjusting, lubricating, or servicing the loader.

Inspect all pins and grease fittings before each use and lubricate with heavy duty grease as indicated in this manual.

Periodically check all bolts for looseness and re-torque if necessary.

Before storage, be certain all hydraulic cylinders are fully collapsed so that the rod will not be exposed to the elements or damaged.

Be certain hydraulic system remains sealed at all times to prevent contamination.

Check and maintain an adequate fluid level in the tractor reservoir prior to use.

Inspect all hydraulic system hoses and fittings. Replace prior to further operation if damaged.



### WARNING:

Escaping hydraulic oil under pressure can penetrate the skin. Never use any part of your body to check for hydraulic leaks. Use cardboard when checking for leaks. See Fig. 14-1. Relieve hydraulic pressure before disconnecting any hydraulic line. Failure to heed may result in serious injury or death.

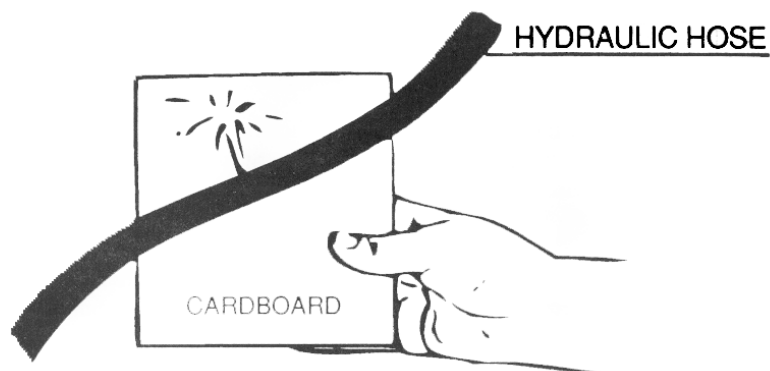


FIG. 14-1


## HYDRAULIC SYSTEM PARTS SCHEDULE

KEY	PART NUMBER	DESCRIPTION	QUANTITY
1.....	659007.....	1st Oil Line (Green) .....	1
2.....	659008.....	2nd Oil Line (Yellow).....	1
3.....	659005.....	3rd Oil Line (Blue).....	1
4 .....	659006.....	4th Oil Line (Red).....	1
5.....	672406.....	2" Lift Cylinder.....	2
6.....	672400.....	2" Bucket Cylinder .....	2
7.....	672288.....	14" Hydraulic Hose.....	2
8 .....	672289.....	21" Hydraulic Hose.....	2
9.....	672287.....	14" Hydraulic Hose.....	4


### OPTIONAL CYLINDERS

10.....	672409.....	1 3/4" Lift Cylinder.....	2
11.....	672403.....	1 3/4" Bucket Cylinder .....	2

# HYDRAULIC SYSTEM PARTS DIAGRAM

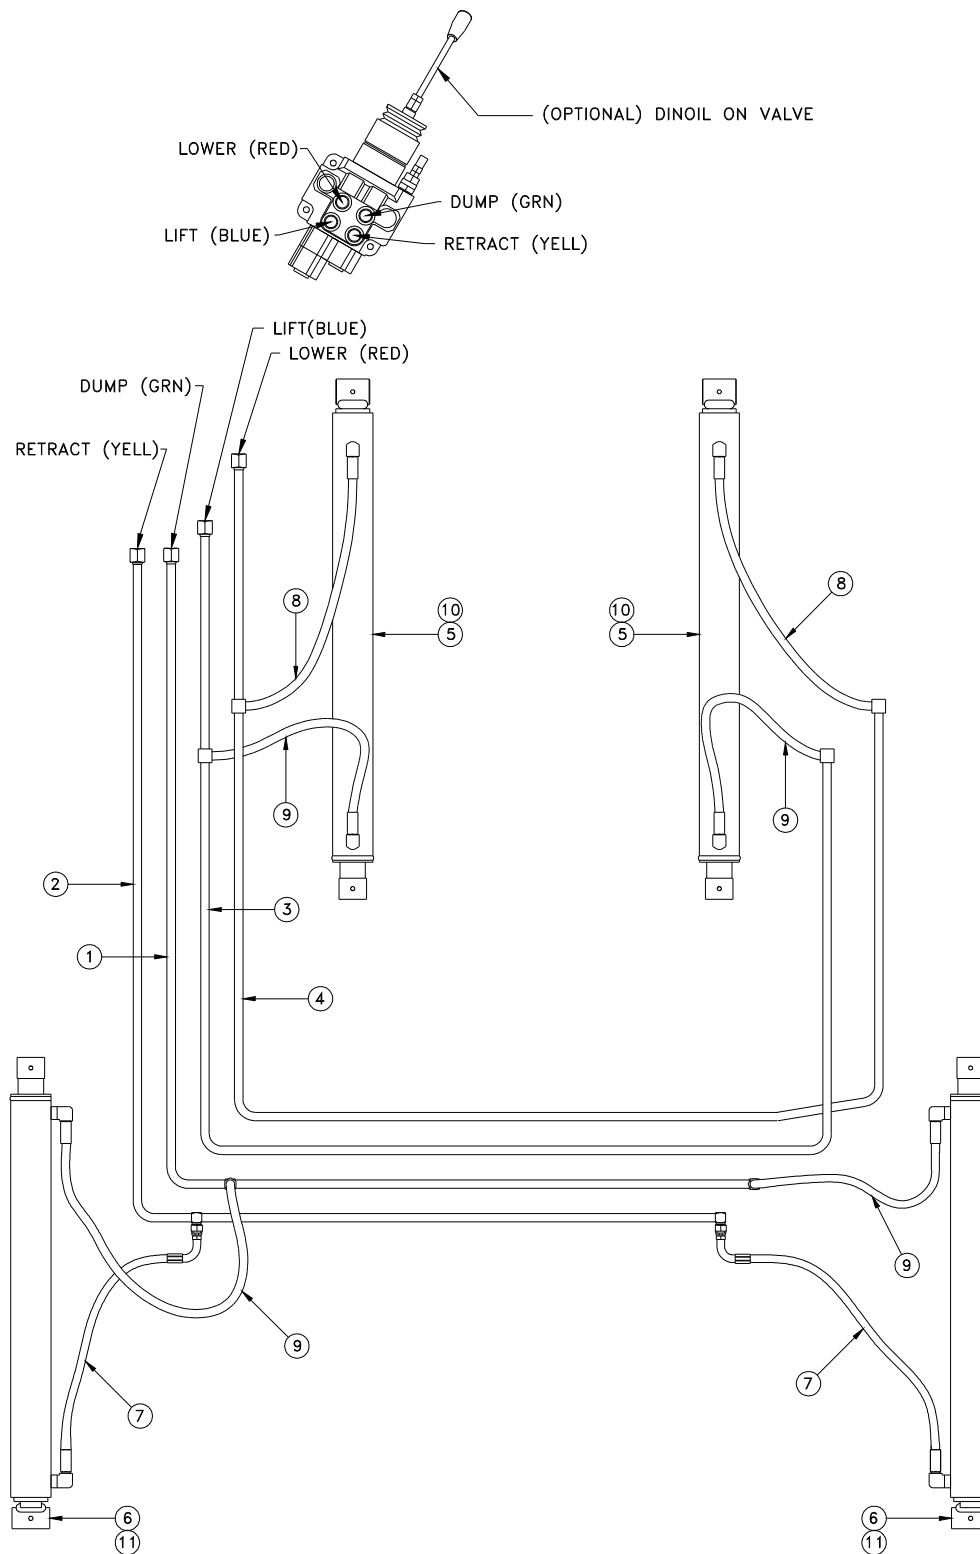

# KOYKER "160" LOADER PARTS DIAGRAM

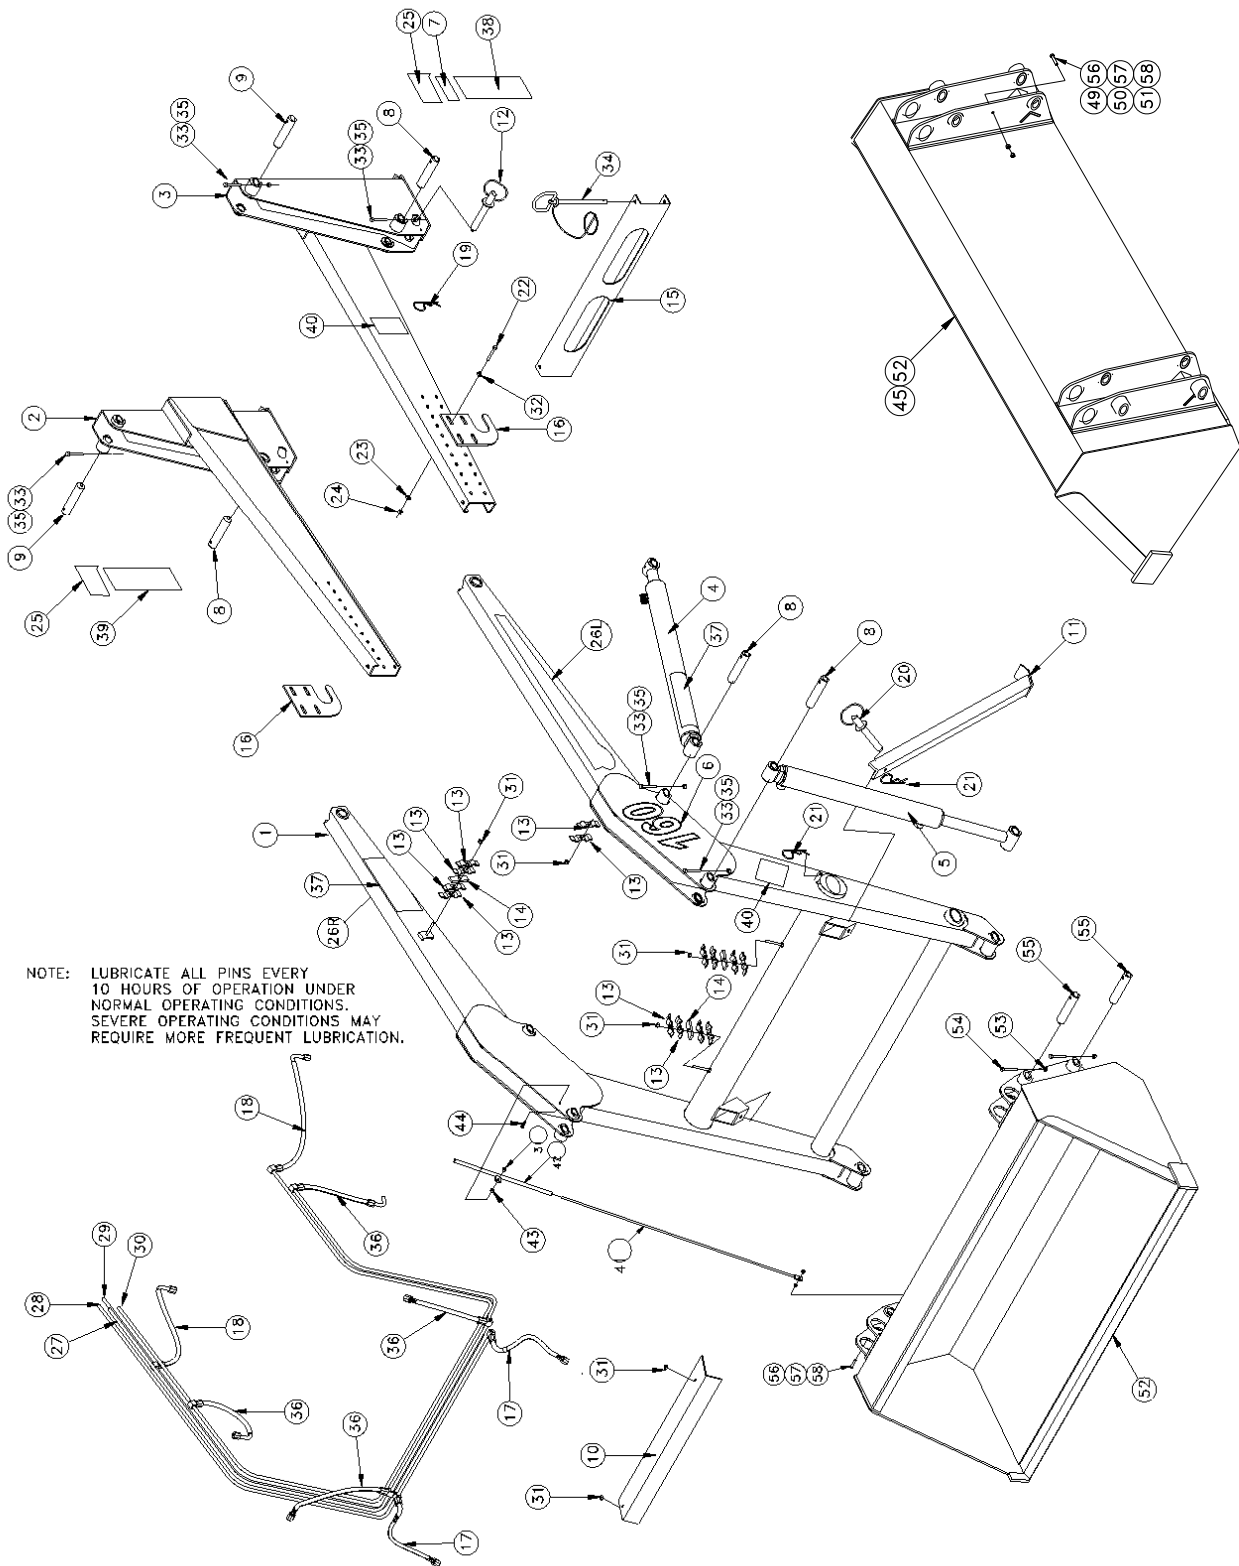

## PARTS IDENTIFICATION SCHEDULE


KEY	PART NUMBER	DESCRIPTION	QUANTITY
1.....	665700.....	Main Frame .....	1
2.....	665701.....	RH Upright.....	1
3.....	665702.....	LH Upright .....	1
4.....	672406.....	2" Lift Cylinder .....	2
5.....	672400.....	2" Bucket Cylinder.....	2
6.....		"160" Decal .....	2
7.....	666941.....	Serial Number Decal .....	1
8.....	660807.....	4 5/8" Pivot Pin .....	6
9.....	660808.....	5 1/4" Pivot Pin .....	2
10.....	659009.....	Oil Line Cover.....	1
11.....	665816.....	Stand.. .....	2
12.....	661983.....	Mount Pin.....	2
13.....	661997.....	Oil Line Clamp.....	14
14.....	661998.....	Oil Line Spacer.....	3
15.....	665705.....	Crossmember.....	1
16.....	662000.....	Wrap Arm Clip.....	2
17.....	672288.....	14" Hydraulic Hose .....	2
18.....	672289.....	21" Hydraulic Hose .....	2
19.....	640246.....	#6 Hitch Pin.....	2
20.....	641119.....	Lock Pin .....	2
21.....	640671.....	#3 Hitch Pin.....	4
22.....	640028.....	HH Cap Screw; 3/8" x 1" .....	8
23.....	640153.....	Lockwasher; 3/8" .....	8
24.....	640132.....	Hex nut; 3/8" .....	8
25.....	654629.....	"American Made" Decal .....	2
26L.....		"KOYKER" Decal Left.....	1
26R.....		"KOYKER" Decal Right.....	1
27.....	659007.....	1st Oil Line .....	1
28.....	659008.....	2nd Oil Line.....	1
29.....	659005.....	3rd Oil Line .....	1
30.....	659006.....	4th Oil Line .....	1
31.....	640128.....	Locknut; 5/16".....	7
32.....	640154.....	Flatwasher; 3/8" .....	8
33.....	651703.....	HH Cap Screw; 1/4" x 2" .....	8
34.....	656515.....	T Pin W/Lynch Pin.....	2
35.....	640126.....	Locknut; 1/4".....	8
36.....	672287.....	14" Hydraulic Hose .....	4
37.....	666943.....	Warning Decal.....	5
38.....	666944.....	Warning Decal.....	1
39.....	666945.....	Danger Decal.....	1
40.....	666946.....	Warning Decal.....	4
41.....	675840.....	Indicator Rod.....	1
42.....	675843.....	Indicator Sleeve.....	1
43.....	652360.....	Hexnut; 5/16" .....	1
44.....	651880.....	HH Cap Screw; 5/16" x 1 1/4" .....	1

## PARTS IDENTIFICATION CONTINUED

### Optional Buckets & Cylinders

KEY	PART NUMBER	DESCRIPTION	QUANTITY
	665804	4' Bucket Bundle	
45.....	665703.....	4' Bucket Weldment .....	1
46.....	640126.....	1/4" Locknut .....	4
47.....	651703.....	HH Cap Screw; 1/4" x 2" .....	4
48.....	660808.....	Pivot Pin.....	4
49.....	651880.....	HH Cap Screw; 5/16" x 1 1/4" .....	1
50.....	652360.....	Hexnut; 5/16" .....	1
51.....	640128.....	Locknut; 5/16" .....	1
	665805	5' Bucket Bundle	
52.....	665704.....	5' Bucket Weldment .....	1
53.....	640126.....	1/4" Locknut .....	4
54.....	651703.....	HH Cap Screw; 1/4" x 2" .....	4
55.....	660808.....	Pivot Pin.....	4
56.....	651880.....	HH Cap Screw; 5/16" x 1 1/4" .....	1
57.....	652360.....	Hexnut; 5/16" .....	1
58.....	640128.....	Locknut; 5/16" .....	1
59.....	672409 .....	1 3/4" Lift Cylinder.....	2
60.....	672403.....	1 3/4" Bucket Cylinder .....	2

## KOYKER “160” SKID STEER ADAPTER DIAGRAM

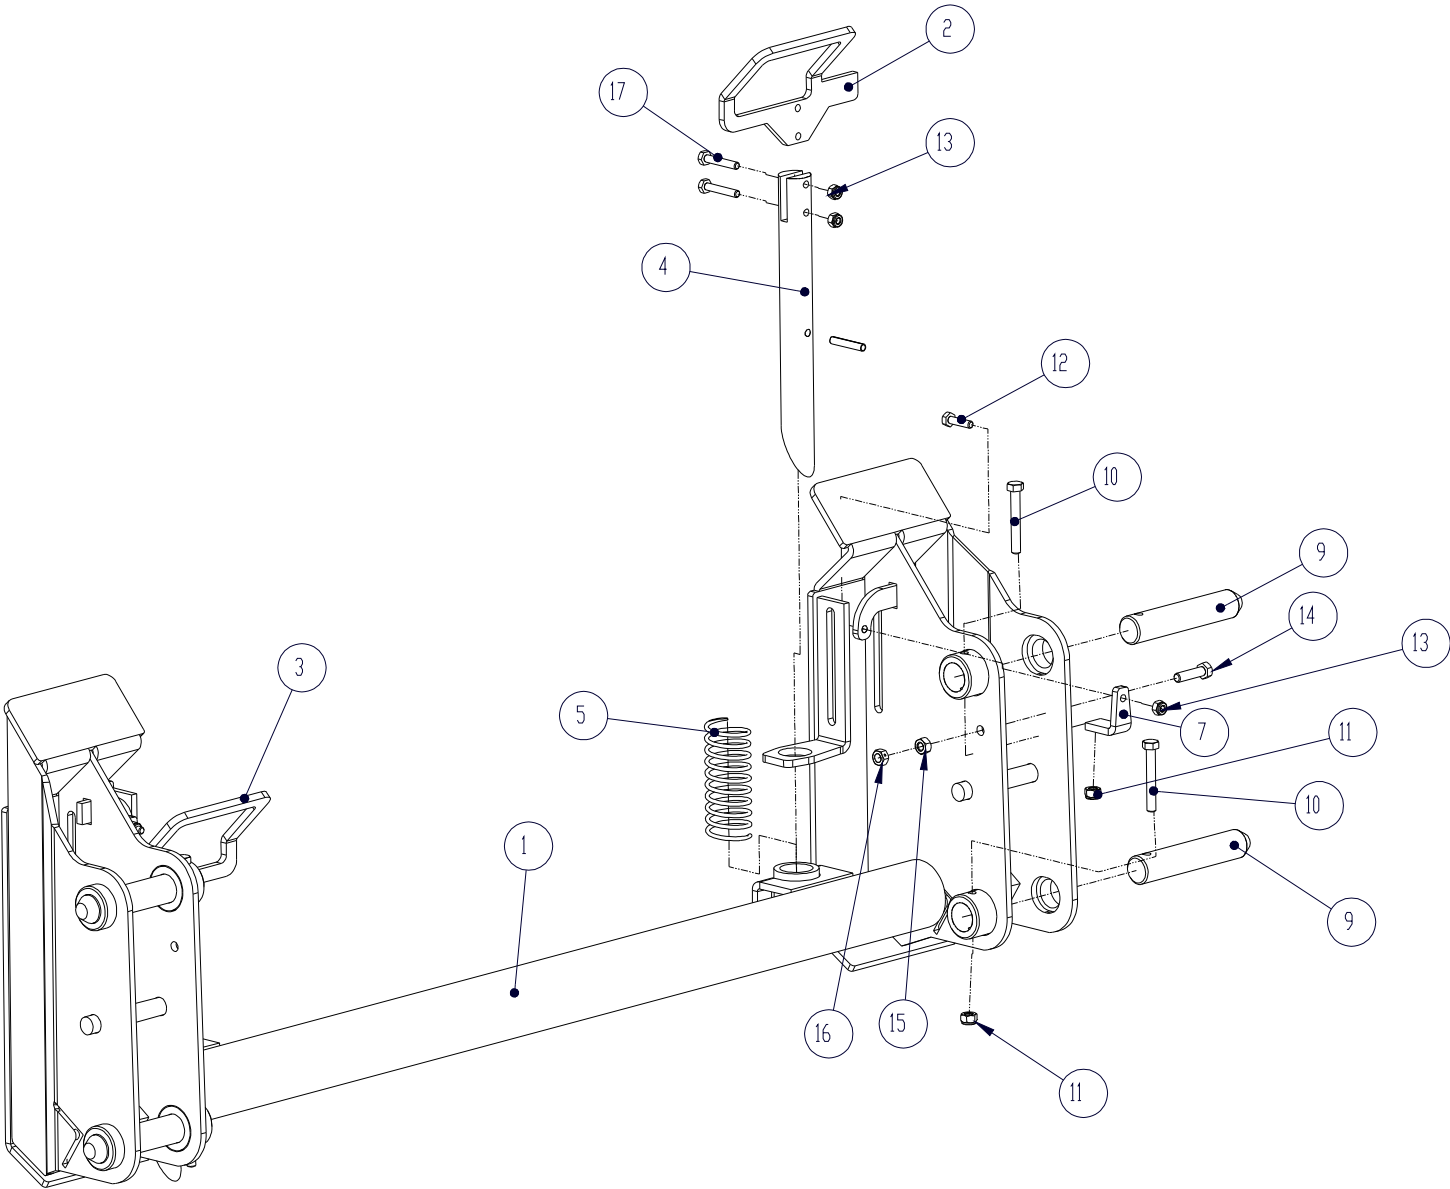

## PARTS IDENTIFICATION CONTINUED

### Optional Skid Steer Bucket & Adapter

Key	Part Number	Description	Quantity	Quantity
1	681892	"160' - "165" ECON SS WLDT		1
2	681889	HANDLE		1
3	680848	HANDLE		1
4	681888	ENGAGEMENT PIN		2
5	650388	SPRING .135 WIRE X 1.460ID X 4		2
6	650389	PIN-ROLL .25 X 1.5		2
7	681898	LATCH		2
8	657632	ZERK-1/4-28 GREASE		2
9	660808	PIVOT PIN (ZINC) 1.000 x 5.250		4
10	640021	SCREW-.3125-18 X 2.25 GR 5 HHC		4
11	654141	NUT - .313 - 18 GR 2 LOCK NYLON INSERT		4
12	640008	SCREW-.250-20 X 1.00 GR 5 HHC		2
13	654453	NUT - .250-20 GR 2 LOCK NYLON INSERT		6
14	651880	SCREW-.3125-18 X 1.25 GR 5 HHC		1
15	652360	NUT - .313-18 GR 2 HEX		1
16	640128	NUT - .313-18 GR 2 CENTER LOCK		1
17	640009	SCREW-.250-20 X 1.50 GR 5 HHC		4



# HYDRAULIC CYLINDERS

## INSPECTION AND MAINTENANCE:

Periodically check all hydraulic system connections to insure a leak-free condition. Also, be certain to maintain proper fluid levels in the tractor hydraulic system as in accordance with the method and frequency recommended in the tractor operator's manual.

Use only hydraulic fluids recommended for your tractor hydraulic system by the manufacturer. Recommended hydraulic fluid for operation of the loader is DTE Light Hydraulic Oil Viscosity 150 SUS at 100 Degrees F (SAE 10W).

Keep hydraulic system clean. Be certain to maintain recommended oil filter service intervals.

All internal surfaces of the hydraulic system on your loader have been factory cleaned, inspected, and plugged with protective caps prior to shipment. Be certain all protective caps are securely in place until hydraulic system assembly is completed.

Care must be taken with your loader cylinders. Nicks, scratches, rust or other shaft damage can cause seal damage resulting in cylinder leakage and poor performance.

## IMPORTANT:

Read these service tips before beginning assembly of cylinder gland or piston.

1. Keep seals clean from the time they are removed from package until they are installed.
2. Clean the groove or bore into which the seal is to be fitted before installing the seal.
3. Never touch the seal lip in handling. Always pick up the seal by its outer member.
4. Inspect each seal lip carefully for nicks, scratches, and dirt at time of installation. If dirty, use a soft, clean cloth and carefully wipe off seal. **DO NOT** wipe seal with fingers as this only imbeds dirt in the seal.

## NOTE:

Seals can be made more pliable and easier to install, if first heated in hydraulic oil to 160 degrees F. Never use direct heat on any seals.

## IMPORTANT:

Never clean rubber related seals with a mineral based solvent! Clean rubber seals in denatured alcohol or non-mineral based solvents only.

## 1 3/4" CYLINDER SERVICE KITS

### KIT NO. 663304:

Complete kit with all seals needed to service one (1) 1 3/4" Cylinder. Consists of:

1 each	1 3/4" Gland "O" Ring
1 each	1 3/4" Backup Ring
1 each	1" U-cup Rod Seal
1 each	1" Rod Wiper
2 each	1 3/4" U-cup Piston Seal
1 each	5/8" Rod "O" Ring
1 each	5/8" Locknut

### KIT NO. 663305:

Complete assembled 1 3/4" Cylinder Gland with all seals. Consists of:

1 each	1 3/4" Aluminum Gland
1 each	1 3/4" Gland "O" Ring
1 each	1 3/4" Backup Ring
1 each	1" U-cup Rod Seal
1 each	1" Rod Wiper
1 each	5/8" Locknut

### KIT NO. 663306:

Complete assembled 1 3/4" Cylinder Piston with all seals. Consists of:

1 each	1 3/4" Aluminum Piston
2 each	1 3/4" U-cup Piston Seal
1 each	5/8" Rod "O" Ring
1 each	5/8" Locknut

### KIT NO. 663307:

All seals needed to service one (1) 1 3/4" Cylinder Gland. Consists of:

1 each	1 3/4" Gland "O" Ring
1 each	1 3/4" Backup Ring
1 each	1" U-cup Rod Seal
1 each	1" Rod Wiper
1 each	5/8" Locknut

### KIT NO. 663308:

All seals needed to service one (1) 1 3/4" Cylinder Piston. Consists of:

2 each	1 3/4" U-cup Piston Seal
1 each	5/8" Rod "O" Ring
1 each	5/8" Locknut

## 2" CYLINDER SERVICE KITS

### KIT NO. 662051:

Complete kit with all seals needed to service one (1) 2" Cylinder. Consists of:

1 each	2" Gland "O" Ring
1 each	2" Backup Ring
1 each	1 1/4" U-cup Rod Seal
1 each	1 1/4" Rod Wiper
2 each	2" U-cup Piston Seal
1 each	3/4" Rod "O" Ring
1 each	3/4" Locknut

### KIT NO. 663310:

Complete assembled 2" Cylinder Gland with all seals. Consists of:

1 each	2" Aluminum Gland
1 each	2" Gland "O" Ring
1 each	2" Backup Ring
1 each	1 1/4" U-cup Rod Seal
1 each	1 1/4" Rod Wiper
1 each	3/4" Locknut

### KIT NO. 663311:

Complete assembled 2" Cylinder Piston with all seals. Consists of:

1 each	2" Aluminum Piston
2 each	2" U-cup Piston Seal
1 each	3/4" Rod "O" Ring
1 each	3/4" Locknut

### KIT NO. 663312:

All seals needed to service one (1) 2" Cylinder Gland. Consists of:

1 each	2" Gland "O" Ring
1 each	2" Backup Ring
1 each	1 1/4" U-cup Rod Seal
1 each	1 1/4" Rod Wiper
1 each	3/4" Locknut

### KIT NO. 663313:

All seals needed to service one (1) 2" Cylinder Piston. Consists of:

2 each	2" U-cup Piston Seal
1 each	3/4" Rod "O" Ring
1 each	3/4" Locknut

# HYDRAULIC CYLINDER PARTS LIST

## 2" CYLINDER PARTS LIST:

### LIFT CYLINDER (Part No. 672406):

Key	Part Number	Description	Quantity
1 .....	672407 .....	Tube Weldment .....	1
2 .....	661076 .....	3/4" Locknut .....	1
3 .....	651548 .....	Piston Assembly .....	1
4 .....	661654 .....	1" "O" Ring .....	1
5 .....	651549 .....	Gland Assembly .....	1
6 .....	665344 .....	Rod Weldment .....	1
- .....	662051 .....	Seal Kit .....	1

### BUCKET CYLINDER (Part No. 672400):

1 .....	672401 .....	Tube Weldment .....	1
2 .....	661076 .....	3/4" Locknut .....	1
3 .....	651548 .....	Piston Assembly .....	1
4 .....	661654 .....	3/4" "O" Ring .....	1
5 .....	651549 .....	Gland Assembly .....	1
6 .....	665350 .....	Rod Weldment .....	1
- .....	662051 .....	Seal Kit .....	1

## 1 3/4" CYLINDER PARTS LIST:


### LIFT CYLINDER (Part No. 672409):

1 .....	672410 .....	Tube Weldment .....	1
2 .....	655022 .....	5/8" Locknut .....	1
3 .....	655004 .....	Piston Assembly .....	1
4 .....	655023 .....	5/8" "O" Ring .....	1
5 .....	655003 .....	Gland Assembly .....	1
6 .....	665581 .....	Rod Weldment .....	1
- .....	663304 .....	Seal Kit .....	1


### BUCKET CYLINDER (Part No. 672403):

1 .....	672404 .....	Tube Weldment .....	1
2 .....	655022 .....	5/8" Locknut .....	1
3 .....	655004 .....	Piston Assembly .....	1
4 .....	655023 .....	5/8" "O" Ring .....	1
5 .....	655003 .....	Gland Assembly .....	1
6 .....	665591 .....	Rod Weldment .....	1
- .....	663304 .....	Seal Kit .....	1

## HYDRAULIC CYLINDER PARTS DIAGRAM

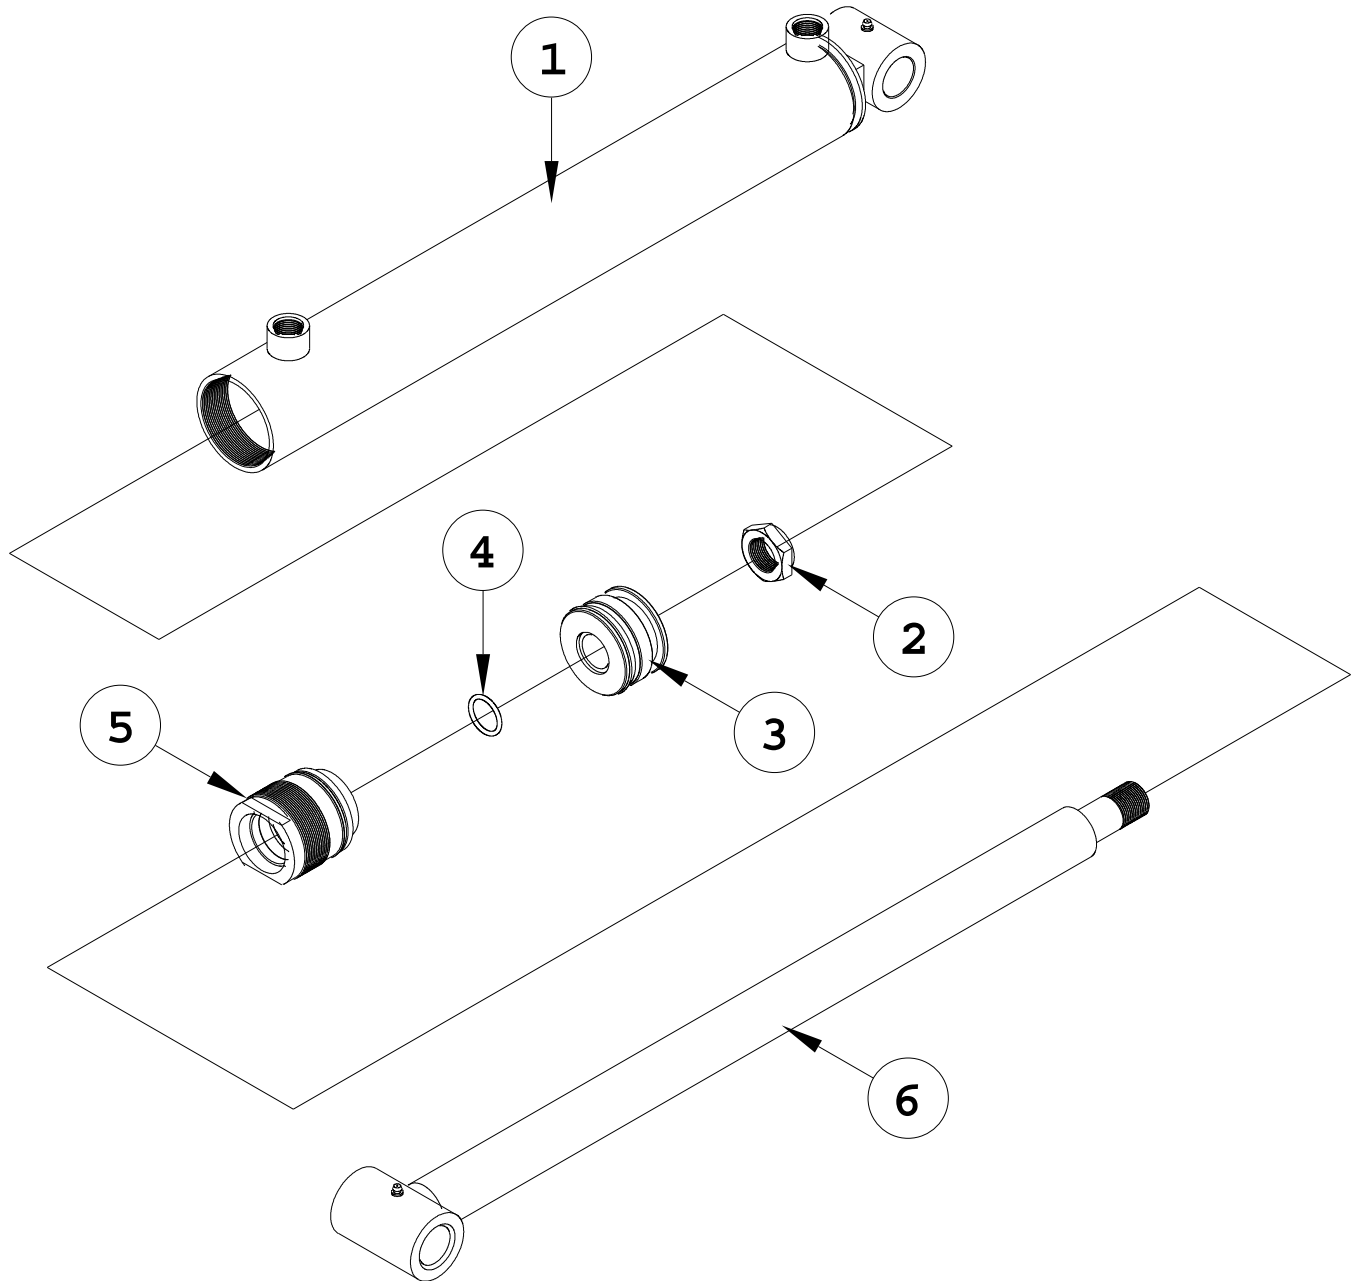


## CYLINDER GLAND SERVICE DIAGRAM

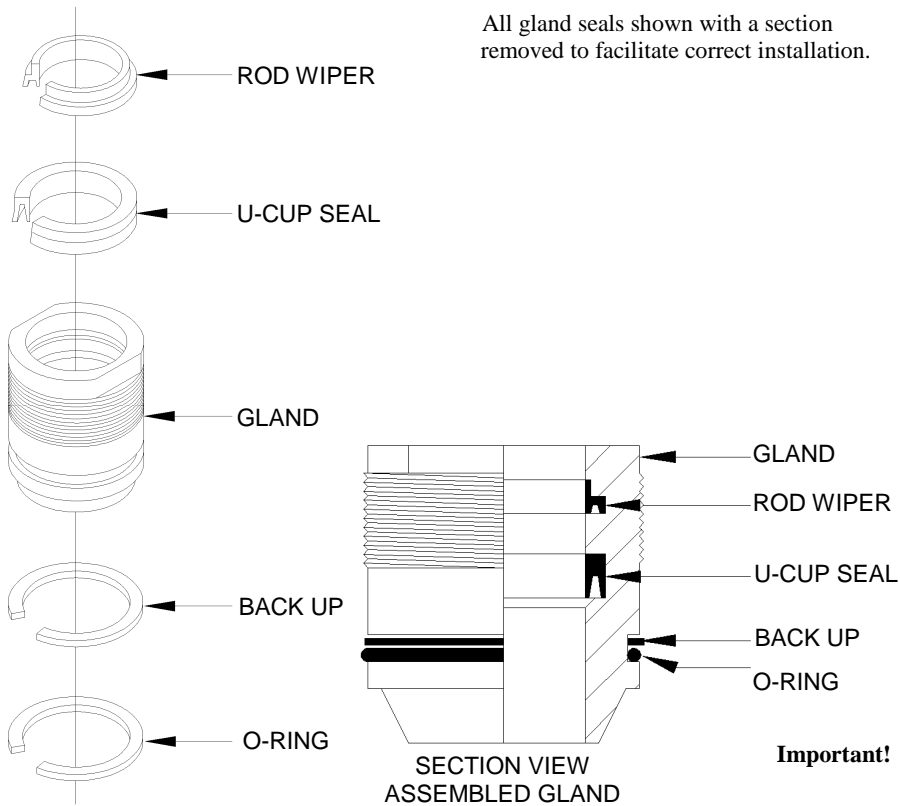

All gland seals shown with a section removed to facilitate correct installation.

Note: To install rod wiper and U-cup seal, fold similar to shape shown below, slip into gland bore and locate each in its respective groove. Tools are used to fold seals, take care not to damage sealing surfaces.

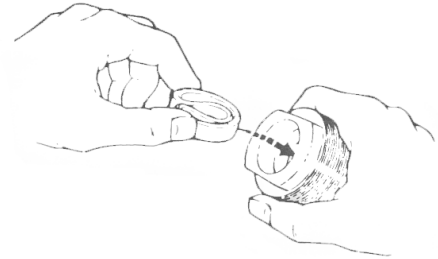


**Important!** Be sure all gland and piston seals have been installed correctly before cylinder is assembled!

## CYLINDER PISTON SERVICE DIAGRAM


### To Remove Seals:

Carefully cut across each seal with a sharp knife. Be sure not to scratch sealing surfaces of aluminum piston. If a sharp knife is not available. An electric soldering gun or hot iron may be used to melt throughout seals.

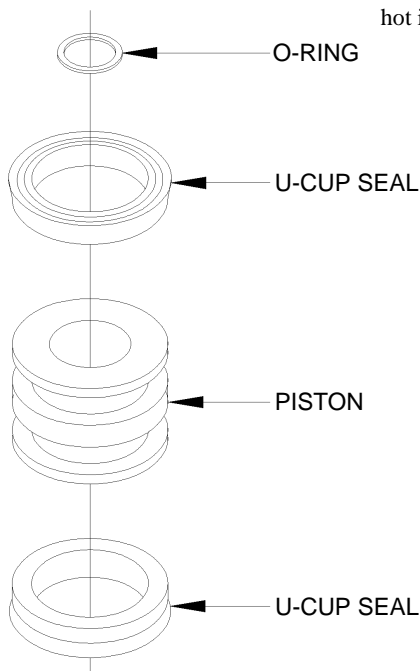


### To Install Seals:

1. Thoroughly clean piston sealing surface of all foreign matter.
2. Heat new seals in hydraulic oil to 160° F. Never use a direct flame or heated water on hydraulic seals.
3. Remove seals from oil, wipe dry and install in piston grooves as shown in illustration at left. Be sure seals have completely seated in piston grooves before allowed to cool.
4. Replace piston on cylinder shaft and assemble cylinder when seals have cooled to room temperature.

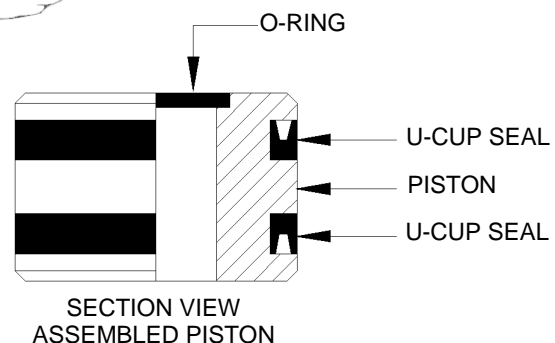


# DINOIL VALVE HOOKUP


NOTE: Valve normally shipped open center. Part No. #673010 W/Joystick

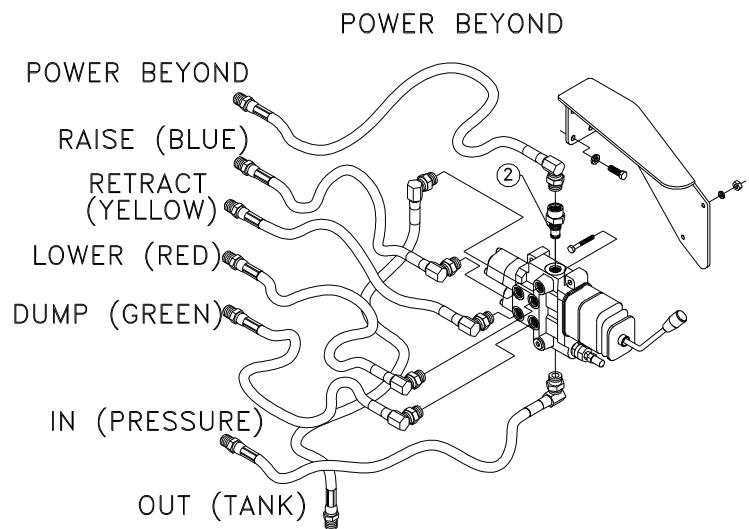

For closed center applications item one (655445) is replaced by item two (673097) and item one is installed in item two.

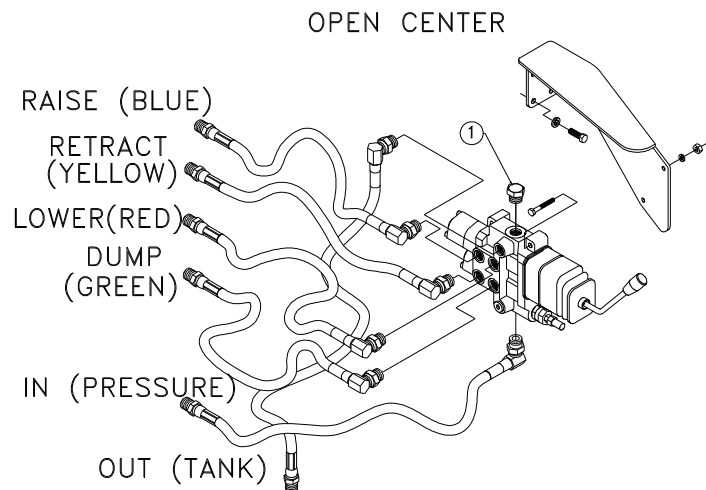

For power beyond applications item one (673096) plug, must be removed and item two (673097) power beyond sleeve must be added.

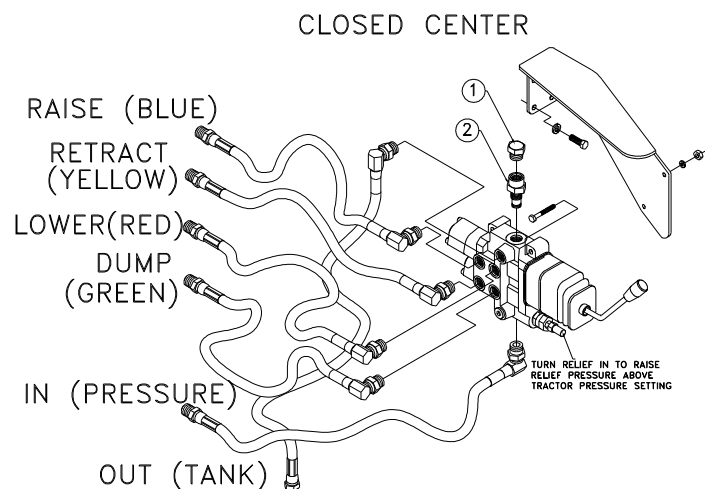



## NEW KOYKER FRONT-END LOADER WARRANTY

LIMITED WARRANTY FOR NEW KOYKER MANUFACTURING COMPANY PRODUCTS		
<p><b>A. GENERAL PROVISIONS.</b> "Koyker" means Koyker Manufacturing Company, 200 N. Cleveland, P.O. Box 409, Lennox, South Dakota 57039. The warranties described below are provided by Koyker to the original purchasers of new products purchased from Koyker or from an authorized Koyker Dealer (the "Products"). Under these warranties, Koyker will, at its option, repair or replace at its factory any Product covered under these warranties which is found to be defective in material and workmanship during the applicable warranty term or refund the purchase price paid for the defective Product. Customer will be responsible for labor charges for removing the defective Product and re-installing the repaired or replacement Product, any premium charge for overtime labor requested of Koyker and shipping charges to and from Koyker's factory. These warranties are not transferrable.</p>		
<p><b>B. WARRANTY PERIOD.</b> Subject to exclusions and limitations set forth herein, each new Product is warranted for the number of years specified below. Each warranty term begins from the date of purchase regardless of delay in receipt of the Product by Customer due to the time required to process, handle, ship, assemble, construct and install the Product. Customer must retain proof of the date of purchase. Replacement parts for and repairs to the Product will be warranted only for the remainder of the original warranty term. The replacement parts for or repairs to the Product will not extend the warranty term beyond the original warranty term. Products include all parts, components and accessories.</p>		
PRODUCTS		
Koyker Front-End Loaders	Consumer Use	2 years
	Commercial or Government Use	1 year
<p><b>C. ITEMS COVERED SEPARATELY.</b> The Koyker warranties do not cover any parts, components or materials that are part of the Product, or used in conjunction with the Product, that are not manufactured by Koyker. Such parts, components and materials will be subject to the warranties provided by the manufacturer, if any.</p>		
<p><b>D. WHAT IS NOT WARRANTED.</b> Koyker does not warrant and is not responsible for the following: (1) used Products; (2) modification or alteration of the Products; (3) Products that have not been properly installed or not installed in accordance with the instruction manual, improper assembly, or improper construction by any persons other than Koyker employees; (4) depreciation, damage or loss caused by the use of parts, components or accessories not provided by Koyker, unauthorized repairs, normal wear, lack of necessary and proper maintenance, a failure to follow operating instructions/recommendations, misuse, lack of proper protection during storage, vandalism or theft, exposure to the elements or corrosive materials, accidents or acts of nature including lightning, flooding, hail, straight winds and tornadoes; and (5) cosmetic damage or damage that does not hinder the functionality of the Products.</p>		
<p><b>E. LIMITATIONS OF WARRANTIES AND CUSTOMER'S REMEDIES.</b> To the extent permitted by law, neither Koyker, the Dealer nor any person or company affiliated with either of them makes any warranties, representations, conditions or promises express or implied as to the quality, performance or freedom from defects of the Products covered by these warranties other than those set forth herein. THERE ARE NO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. NEITHER KOYKER, THE DEALER, NOR ANY PERSON OR COMPANY AFFILIATED WITH EITHER OF THEM WILL BE LIABLE FOR ANY DAMAGES, INCLUDING, BUT NOT LIMITED TO, INCIDENTAL, SPECIAL, EXEMPLARY, CONSEQUENTIAL, LOST PROFITS AND REVENUES, LOST USE OF THE PRODUCTS OR ANY OTHER PROPERTY, BODILY INJURY OR PROPERTY DAMAGE CLAIMS OF ANY PERSON, LOST COMMODITIES, REMOVAL OR STORAGE COSTS FOR THE PRODUCTS, OTHER EQUIPMENT AND COMMODITIES, DAMAGE TO THE ENVIRONMENT ARISING FROM OR IN ANY MANNER RELATED TO ANY RELEASE OF HAZARDOUS MATERIALS, AND REMEDIATION EXPENSES THEREFORE, WHETHER BASED ON CONTRACT, TORT, STRICT LIABILITY OR ANY OTHER LEGAL BASIS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO INSTANCE WILL KOYKER, THE DEALER OR ANY PERSON OR COMPANY AFFILIATED WITH EITHER OF THEM BE LIABLE TO CUSTOMER OR ANY PERSON IN AN AMOUNT IN EXCESS OF THE PURCHASE PRICE PAID BY CUSTOMER FOR THE PRODUCT.</p>		
<p><b>F. NO DEALER WARRANTY.</b> THE DEALER HAS NO AUTHORITY TO MAKE ANY WARRANTY, REPRESENTATION, CONDITION OR PROMISE ON BEHALF OF KOYKER, OR TO MODIFY THE TERMS OR LIMITATIONS OF THIS WARRANTY IN ANY WAY.</p>		
<p><b>G. GOVERNING LAW/VENUE.</b> These warranties, and all terms set forth herein, are governed by the laws of the State of South Dakota and, where applicable, the laws of the United States of America. Any and all disputes arising from these warranties, the purchase and use of the Products, bodily injury and property damage claims or otherwise must be venued in the South Dakota Circuit Court sitting in Minnehaha County, South Dakota. Customer agrees to such venue and waives any challenge to such court's jurisdiction based upon lack of personal jurisdiction or inconvenience.</p>		
<p><b>H. SECURING WARRANTY SERVICE.</b> In order to receive warranty services, customer must give Koyker written notice of a warranty claim within 30 days of the date of discovery of the defective materials or workmanship, and Customer must complete the following steps:</p>		
(1)	Obtain from Koyker a Return Materials Authorization Number ("RMA Number") by calling the <b>Customer Service Department at 1-800-456-1107</b> or <b>e-mail Koyker at koyker@koykermfg.com</b> , and providing the following information:	
	An explanation as to why the Product is being returned.	
	The name of the territory representative, Dealer or Koyker salesperson from whom the Product was purchased.	
	The Dealer's identification number.	
	The invoice number and date of purchase.	
	Customer's name, phone number, fax number, mailing address and email address.	
	The date that the Product will be returned.	
(2)	Pay the shipping charges to ship the Product to Koyker's factory, and the return shipping charges.	
(3)	Ship the Product to Koyker at 200 N. Cleveland, Lennox, South Dakota 57039.	



# TORQUE SPECIFICATIONS

## 1. Tightening Bolts & Nuts

Check all loader bolts and nuts for tightness every 50 working hours. The movement of the loader over rough terrain may cause bolts to come under pressure and over a long period of time some slight stretching of the bolt may occur. The slack created may need to be taken up by tightening. Please refer below for recommended torque settings.

### Metric Recommended Torque Settings

Size	Class 8.8				Class 10.9			
	Lubricated		Dry		Lubricated		Dry	
	N*m	Lb-ft	N*m	Lb-ft	N*m	Lb-ft	N*m	Lb-ft
M6.....	9	6.5	11	8.5	13	9.5	17	12
M8.....	22	16	28	20	32	24	40	30
M10.....	43	32	55	40	63	47	80	60
M12.....	75	55	95	70	110	80	140	105
M14.....	120	88	150	110	175	130	225	165
M16.....	190	140	240	175	275	200	350	225
M18.....	260	195	330	250	375	275	475	350
M20.....	375	275	475	350	530	400	675	500
M22.....	510	375	650	475	725	540	925	675
M24.....	650	475	825	600	925	675	1150	850
M27.....	950	700	1200	875	1350	1000	1700	1250
M30.....	1300	950	1650	1200	1850	1350	2300	1700
M33.....	1750	1300	2200	1650	2500	1850	3150	2350
M36.....	2250	1650	2850	2100	3200	2350	4050	3000

### SAE Recommended Torque Settings

Size	Grade 5				Grade 8			
	Lubricated		Dry		Lubricated		Dry	
	N*m	Lb-ft	N*m	Lb-ft	N*m	Lb-ft	N*m	Lb-ft
1/4 .....	9.5	7	12	9	13.5	10	17	12.5
5/16 .....	20	15	25	18	28	21	35	26
3/8 .....	35	26	44	33	50	36	63	46
7/16 .....	55	41	70	52	80	58	100	75
1/2 .....	85	63	110	80	120	90	150	115
9/16 .....	125	90	155	115	175	130	225	160
5/8 .....	170	125	215	160	215	160	300	225
3/4 .....	300	225	375	280	425	310	550	400
7/8 .....	490	360	625	450	700	500	875	650
1 .....	725	540	925	675	1050	750	1300	975
1-1/8 .....	900	675	1150	1200	2050	1500	2600	1950
1-3/8 .....	1700	1250	2150	1550	2700	2000	3400	2550
1-1/2 .....	2250	1650	2850	2100	3600	2650	4550	3350



DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only and include a +/- 10% variance. Check tightness of fasteners periodically. DO NOT use air powered wrenches. Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.