


Manual No: #679478

11/1/07

OWNERS MANUAL

KOYKER[®]

QUICK-TACH EURO GRAPPLE

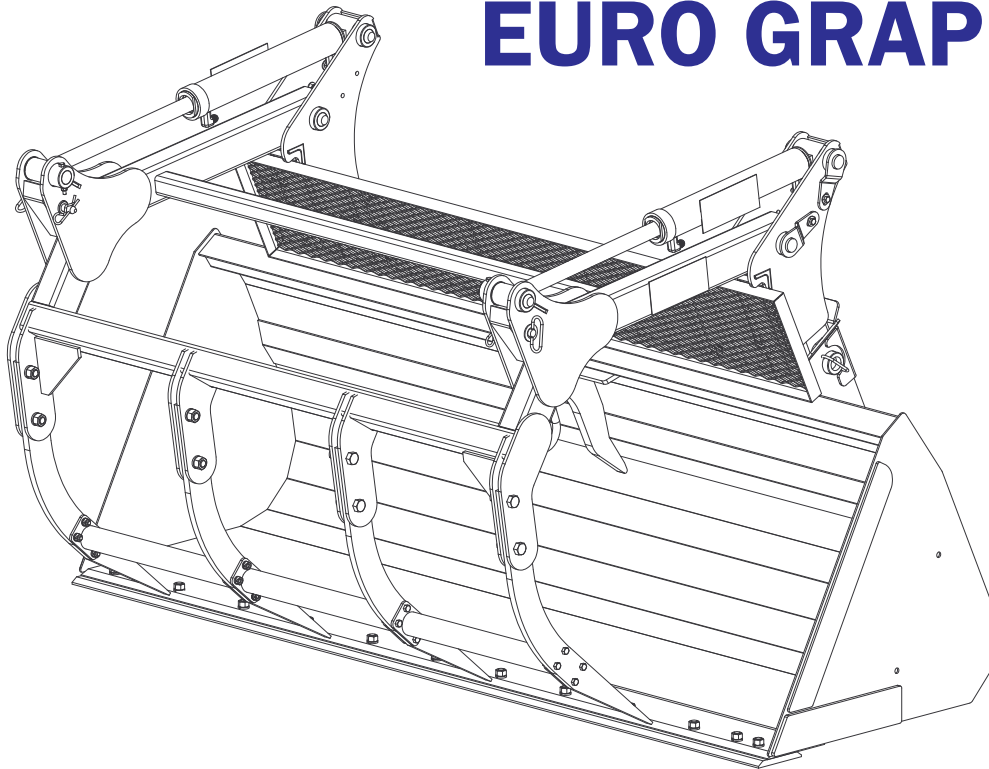

**IMPORTANT-KOYKER DEALER
BE SURE THIS MANUAL IS GIVEN TO THE
PURCHASER FOR FUTURE REFERENCE**

Koyker Manufacturing Co., P.O. Box 409, Lennox, SD 57039

Phone: 1-800-456-1107, Email: koyker@koykermfg.com

Website: koykermfg.com

CONTENTS

| CONTENTS | PAGE |
|--|-------------|
| Introduction..... | 1 |
| SAFETY INFORMATION | |
| Safety Alert Symbol..... | 2 |
| Safety Information | 3-5 |
| Safety Decals | 6 |
| ASSEMBLY / DETACH & ATTACH INSTRUCTIONS | |
| Installation Instructions | 7-8 |
| Quick-tach of the Euro Grapple..... | 9 |
| Quick-detach of the Euro Grapple | 10 |
| OPERATING INSTRUCTIONS | |
| Operation..... | 11 |
| SERVICE AND MAINTENANCE | |
| Inspection, Service, and Maintenance | 12 |
| Euro Grapple Fork Parts Diagram | 13 |
| Euro Grapple Fork Parts Schedule..... | 14-15 |
| Cylinder Information | 16 |
| 2 3/4" Cylinder Service Kit..... | 17 |
| Hydraulic Cylinder Parts Diagram..... | 18 |
| Hydraulic Cylinder Parts Schedule..... | 19 |
| Piston and Gland Service Diagram | 20 |
| LIMITED WARRANTY INFORMATION | |
| Limited Warranty..... | 21-23 |
| TORQUE SPECIFICATIONS | |
| Torque Specifications..... | 24 |

INTRODUCTION

During a considerable period of time, the Koyker Manufacturing Company of Lennox, South Dakota, made a study of the farm loader industry and concluded that the farmer needs a loader that provides fast attachment, quality, dependability, few parts, ruggedness, good delivery, and ease of maintenance, all at a fair price. The Koyker Loader has achieved these goals. With proper care and handling, it will give many years of good service in normal farm operations.

Features such as greaseless pivot connections, flanged grapple teeth, quick-tach capability and a standard hay and forage rack make the Koyker Quick-Tach Grapple Fork one of the most efficient grapple forks ever. With proper care and handling, it will provide many years of dependable service.

This manual is designed to provide you with important information regarding the Grapple Fork. Our sincere intent, in providing this manual, is to help you or those involved better understand the machine and to prevent accidents.

Should you have any questions, comments, improvements, or suggestions regarding the contents of any of the manuals provided, please contact Koyker Manufacturing Company at your earliest convenience.

We care about your safety!

Remember ALL safety decals are no charge from the factory. Please replace all safety decals.

SAFETY ALERT SYMBOL

The symbol shown below is used to call your attention to instructions concerning your personal safety. Watch for this symbol it points out important safety precautions. It means **ATTENTION! Become Alert! Your Personal Safety Is Involved!**

Read the message that follows and be alert to the possibility of personal injury or death.

DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation that, if not avoided may result in minor or moderate injury.



WARNING!

Anyone who will operate or work around a front-end loader should first read this manual.

SAFETY

Improper use of a loader can cause serious injury or death. The following safety precautions, and those given on the tractor mount installation instructions, should be thoroughly understood before attempting to operate this machine.

BEFORE OPERATING:

Carefully study and understand this manual, the specific tractor mount instructions, and the attachment(s) manual(s).

Prior to operation, inspect the loader for system leaks and damaged, missing, or malfunctioning components in an effort to avoid the possibility of a dangerous failure involving structural members or hydraulic system components.

Be certain any repairs necessary are completed prior to loader operation.

Follow recommended maintenance procedures and precautions on Page 11.

Completely familiarize yourself and others involved with the operation of the hydraulic control valve before operating the loader.

Be certain all bystanders are clear of the machine and operation area prior to operation.

It may be necessary to add wheel ballast or rear weights as recommended by the tractor manufacturer to maintain stability of the machine to prevent tipping or upset which could result in serious injury or death. See mounting instructions for specific information.

It is recommended that both front and rear wheel treads be set to the widest recommended width to prevent tipping or upset which could result in serious injury or death.

This loader is designed for farm type operations such as snow removal, barn and feedlot cleaning or light grading and digging. It's design is **NOT** intended for commercial and /or industrial use.

DURING OPERATION:

Never operate the machine other than from the tractor operator's seat.

Be sure operating area is clear of others during machine operations.

Never lift, hoist, or carry humans in the bucket or on any portion of the loader or loader attachments. Failure to heed, may result in serious injury or death.

SAFETY CONTINUED

Transport the machine load at the slowest speed possible and with the loader boom at the lowest transport position to avoid tipping or upsetting, which may result in serious injury or death.

Be extremely careful when working on inclines or near loose fill, rocks, and holes as they can cause tipping or upsetting which may result in serious injury or death.

Be certain to avoid overhead electrical wires when operating loader. Contact with power lines may cause serious injury or death.

Avoid sudden stops when lowering or lifting the loader boom to prevent loss of control over the machine and/or load, which may result in serious injury or death.

Use maximum ballast and the widest recommended wheel setting on your tractor when handling large shiftable loads.

Never attempt to ram with the bucket at high speed or full tractor power. Sudden impact may result in structural failure and possible serious injury or death.

Never adjust or perform maintenance on the loader or tractor with the unit in motion, or without power source locked out.

Never get under bucket or lift arms or reach through the lift arms or bucket linkage when the loader is in operation. Inadvertent movement may cause serious injury or death.

FOLLOWING OPERATION:

Whenever the machine is not in operation, lower the loader boom and set the tractor brakes, disengage drive, shut the engine off, and remove the ignition key before dismounting the tractor.

If loader is to be disengaged from tractor, be sure the loader is securely supported on a hard, level surface and the stand is securely engaged. Be certain all connections between tractor and loader are free before disengaging.

TRANSPORTING:

Use safety lights and SMV emblem in addition to whatever local codes require when equipment is being transported on the road or highway. Check with proper authorities for legal limitations.

Transport all loads at a slow and safe speed.

Carry the load as low as possible and maintain adequate visibility and good round clearance at all times.

SAFETY CONTINUED

PERFORMING MAINTENANCE:

Carefully review, understand, and follow the “maintenance” section in this owners manual before attempting to service loader.

Lower the bucket or attachment to the ground, shut off tractor engine, and relieve pressure in the hydraulic system before adjusting, or servicing the loader.

Escaping hydraulic oil under pressure can penetrate the skin. Never use any part of your body to check for hydraulic leaks. Use cardboard when checking for leaks. See Fig. 5-1. Relieve hydraulic pressure before disconnecting any hydraulic line. Failure to heed may result in serious injury or death.

Before disconnecting hydraulic lines, lower the loader and attachments. Lock out the hydraulic supply and relieve all hydraulic pressure.

REMEMBER:

1. Move Slowly!
2. Always use care and common sense!
3. Be careful for your own sake and for that of others!

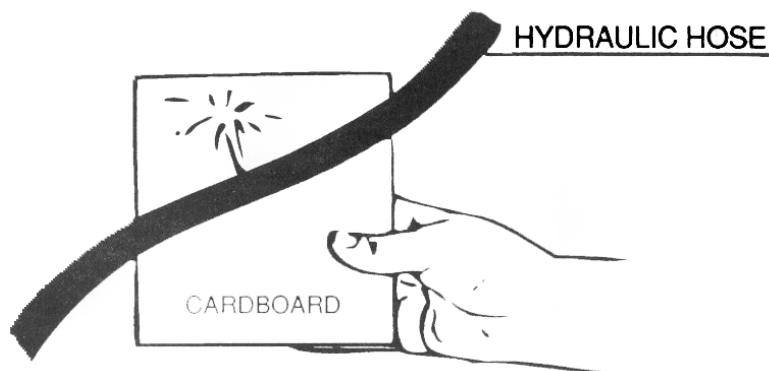
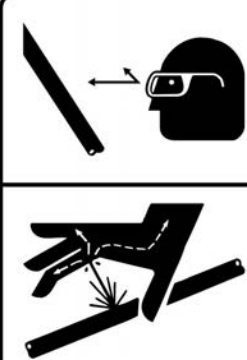



Fig. 5-1

SAFETY DECALS

| | |
|---|---|
|  | ⚠ WARNING |
| | <p style="text-align: center;">HIGH-PRESSURE FLUID HAZARD</p> <p>To prevent serious injury or death:</p> <ul style="list-style-type: none"> • Relieve pressure on hydraulic system before servicing or disconnecting hoses. • Wear proper hand and eye protection when searching for leaks. Use wood or cardboard instead of hands. • Keep all components in good repair. • Refer to owners manual if injury should occur. |
| | 666943 |

| |
|---|
| ⚠ WARNING |
|  |
| <p>To help prevent bodily injury</p> <ul style="list-style-type: none"> • Park and store grapple fork in closed position. • Do not work from or allow riders on loader or its attachments. • Stay clear of grapple fork while in use. • Keep all none operators away from grapple fork during use. • Avoid pinch points. • Stay clear of grapple teeth. • read operators manual • Do not handle bales that exceed bale weight of 900 Kg (2000 lb). <p>KOYKER MFG CO. INCLUDES ALL REASONABLE MEANS FOR ACCIDENT PREVENTION EXCEPT A SAFE AND CAREFUL OPERATOR.</p> |
| 666942 |

INSTALLATION INSTRUCTIONS

INSTALLATION NOTES:

- Install all parts with appropriate fasteners "finger tight" before tightening any bolt.
- The Koyker Quick-Tach Grapple can only be installed on Koyker 7', 8' & 8 1/2' Euro Buckets.

DIRECTIONS:

1. Install the two grapple mast weldments (679649) onto the back of your Koyker Euro Bucket. Secure the masts to the bucket with two 1 3/8" mount pins (659712).
2. With the use of a mechanical lift carefully lower the grapple mainframe (679658) into position. Using two pin weldments (679715) attach the mainframe to the grapple masts. Install each pin weldment with a 3/8" x 1 1/2" bolt, washer and nylock nut.
3. With mast weldments and mainframe installed the two 2 3/4" cylinders (679415) can be installed. Pay special attention that the cylinders are installed with the ports facing downward. This is to protect the ports while in operation. The barrel end of the cylinder is to be attached to the grapple mast with a pin weldment (679715) and a 3/8" x 1 1/2" bolt, washer and nylock nut. The rod end is to be attached to the mainframe at its kneeplate with a 1 3/8" x 6 1/8" mount pin (679753).
4. Attach the four grapple teeth (679699) to grapple mainframe with two 3/4" x 2 1/2" bolts, washers and nylock nuts.
5. Install the three cross-member weldments (679686) in between the four grapple teeth, with four 7/16" x 1 3/4" bolts, washers and nylock nuts at each joint.
6. Mount the hay and forage rack (679697) to the front side of the grapple masts with four 1/2" x 1 1/2" bolts, washers and nylock nuts.
7. Place two oil line clamps (672503) over each of the 5/16" weld studs on the back of the hay & forage rack (679697). Thread into place (loosely) a 5/16" washer and nylock nut on each of the four studs. This will make installation of the hoses later easier.
8. Install four oil line clamps (672503) to the right-hand side of the loader main frame just above the existing clamps with two 5/16" x 2 1/4" bolts. Do not tighten the bolts until after the hoses have been placed into the clamps.

INSTALLATION INSTRUCTIONS

INSTALLATION NOTES CONTINUE:

9. Using a 5/16" x 1" bolt, install the grapple oil line plate (675994) to the oil line cover of the loader.
10. Install two bulkhead adapters (673781) through the oil line plate holes.
11. Install two Quick Couplers (673780) downward on the oil line plate. (These quick couplers can be set up as one line with female and the other with male or both male or both female: however the corresponding male/female fitting needs to go with the appropriate hose) (Koyker feels that this is a users choice and leave the decision up to you)
12. Install the first and second grapple fork oil lines (679756 & 679757) into the clamps installed in step 8 prior. Note: Adjust the oil lines so that they are properly staked on the main frame.
13. Install the remaining quick coupler portions to the appropriate ends of the 66" hoses (676403).
14. Install a 70" hose (679449) to each of the cylinders (rod side). Install a 52" hose (679448) to each end of the cylinders (piston side). Route both sets of hoses through the grapple mast weldment.
15. Join the free ends of the 70" hoses together with a tee (679449) in the middle.
16. Join the free ends of the 52" hoses together with a tee (679448) in the middle.
17. Place the 70" and 52" hoses coming from the cylinders into the oil line clamps on the back of the hay & forage rack and tighten nuts.
18. Connect the appropriate 66' hoses (676403) (left from step 13) to tees joining the cylinder lines.
19. Using the piece of 24" hose wrap (659674) provided, secure the two grapple hoses to each other.
20. With the grapple completely installed and all fasteners tight, gather the two 1/2" adjustment screw(s) (680528) and two 1/2" nut(s) (640139) provided with the grapple kit.
21. With the nut threaded all of the way onto the bolt, thread the bolt into the 1/2" nut that has been welded on the bottom of the grapple mast weldment. (The grapple mast weldments are the two receiver like pockets on the back of the bucket.) With the bolt tight, tighten the jam nut next. The bolt/jam nut assembly will set the height of the grapple masts for future installations.

QUICK-DETACH OF THE EURO GRAPPLE



Fig 8-1

1. With loader on hard level ground, lower the bucket/grapple to the ground and remove the leg stand mount pins (676613). Slide out the leg stand and reinsert the mount pin into the second set of holes. Fig 8-1



Fig 8-2

2. Slowly raise and dump the bucket until the leg stands (now in position) and grapple teeth are each approximately six inches off of the ground. Fig 8-2 Slowly lower the grapple to the ground, allowing it to come to rest with out a downward force.



Fig 8-3

3. Disconnect the grapple (auxiliary) hoses and secure them out of the way. Fig 8-3



Fig 8-4

4. Remove the two 1 3/8" mount pins (659712) from the grapple mast weldments and slowly drive rearward away from the grapple. One may need to adjust the bucket roll angle while retracting from the grapple. Fig 8-4 Once the grapple is free and clear of the bucket replace the two 1 3/8" mount pins back into the grapple mast weldments.

QUICK-TACH OF THE EURO GRAPPLE



Fig 9-1

1. Prior to attachment of the grapple, ensure that the grapple is on hard level ground. Fig 9-1 (Cement pad is preferable)



Fig 9-2

2. While driving up to the grapple, align the tractor as straight as possible with the grapple mast tubes. Failure to do so will make attachment very difficult. Orientate the bucket such that the grapple mast pockets on the back side of the bucket are level with the ground and at the same height as the grapple mast tubes. Slowly drive into the grapple mast tubes until it is fully engaged.

Fig 9-2



Fig 9-3

3. Without the two 1 3/8" mount pins installed. Slowly raise the loader and roll the bucket back. Connect the grapple (auxiliary) lines to the loader. Fig 9-3



Fig 9-4

4. With the grapple lines connected, roll the bucket back until the grapple mast pockets are as vertical as possible. Open the grapple until the rear portion of the mainframe is vertical with the grapple mast pockets. Insert the two 1 3/8" mount pins into grapple mast pocket collars, thereby locking the grapple in place. Fig 9-4 Opening or closing the grapple small increments may be needed to properly align the collars and terminals of the grapple. Once the mount pins are installed close the grapple and store the leg stands into the mainframe.

OPERATION



WARNING:

Never allow anyone to operate the Grapple Fork until they have carefully reviewed and understood this owner's manual.

OPERATING THE GRAPPLE FORK:

With the forks fully opened, approach and enter the pile slowly.

Adjust attachment tilt as necessary.

After entering the pile, slowly close the grapple and roll attachment back.

Raise loader only enough to permit maneuvering

Before moving, carefully check for hazards and/or obstructions.

Never lift off center.



WARNING:

Be certain material cannot fall or spill out on tractor when raised. Keep clear of overhead obstructions such as trees, limbs, or power lines when raising the loader and grapple fork.

Never lift higher than required. Travel with load at lowest position.

NEVER attempt to operate the loader or grapple fork with unauthorized or untrained persons near.

INSPECTION, SERVICE, AND MAINTENANCE

Lower the bucket to the ground, shut off tractor engine, and relieve the pressure in the hydraulic system before adjusting, lubricating, or servicing the loader.

Inspect all pins before each use as indicated in this manual.

Periodically check all bolts for looseness and retorque if necessary.

Before storage, be certain all hydraulic cylinders are fully collapsed so that the rod will not be exposed to the elements or damaged.

Be certain hydraulic system remains sealed at all times to prevent contamination.

Check and maintain an adequate fluid level in the tractor reservoir prior to use.

Inspect all hydraulic system hoses and fittings. Replace prior to further operation if damaged.



WARNING!

part of your
See Fig. 11-1.
to heed may

Escaping hydraulic oil under pressure can penetrate the skin. Never use any body to check for hydraulic leaks. Use cardboard when checking for leaks. Relieve hydraulic pressure before disconnecting any hydraulic line. Failure result in serious injury or death.


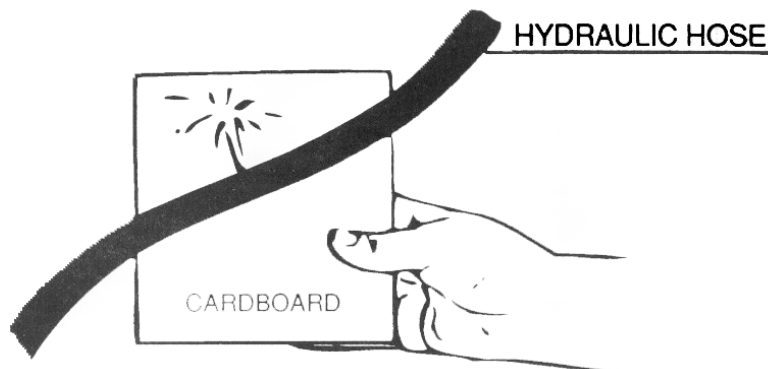


Fig. 11-1

EURO GRAPPLE FORK PARTS DIAGRAM

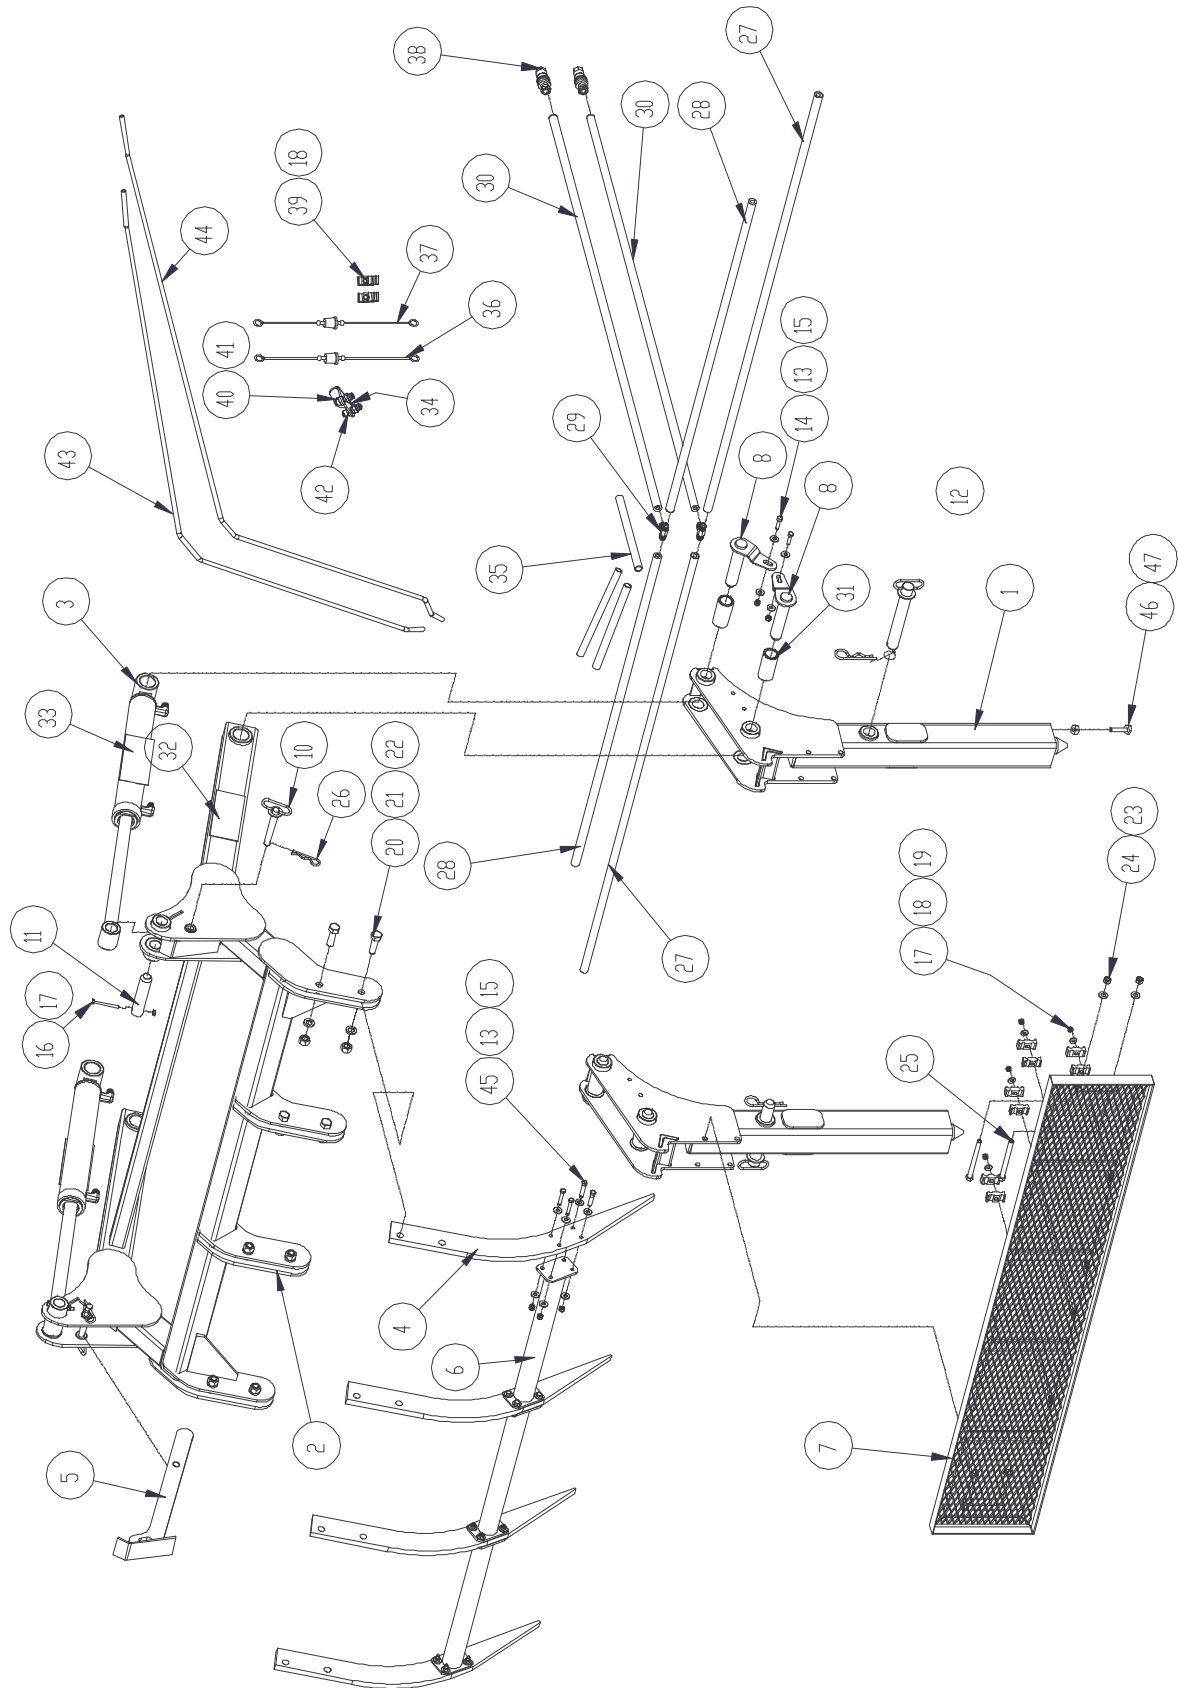

EURO GRAPPLE FORK PARTS SCHEDULE

| ITEM NO. | PART NO. | DESCRIPTION | QTY. |
|----------|----------|--|------|
| 1 | 679649 | GRAPPLE MAST WLDT | 2 |
| 2 | 679658 | GRAPPLE MAINFRAME WLDT | 1 |
| 3 | 679415 | EURO GRAPPLE CYLINDER ASSEMBLY | 2 |
| 4 | 679699 | GRAPPLE FORK TOOTH PLATE | 4 |
| 5 | 679693 | GRAPPLE LEG WLDT | 2 |
| 6 | 679686 | CROSS MEMBER WLDT | 3 |
| 7 | 679697 | HAY & FORAGE RACK WELDMENT | 1 |
| 8 | 679715 | 1 3/8" X 6 7/8" PIN WLDT | 4 |
| 9 | 659712 | MOUNT PIN WLDT | 2 |
| 10 | 676613 | MOUNT PIN WELDMENT | 2 |
| 11 | 679753 | 1.375" x 6.125 PIVOT PIN | 2 |
| 12 | 660006 | HITCH PIN CLIP #6 | 2 |
| 13 | 640154 | WASHER - 3/8" FLAT | 40 |
| 14 | 640034 | SCREW-.375-16 X 1.50 GR 5 HHC | 4 |
| 15 | 654121 | NUT - .375 - 16 GR 2 LOCK NYLON INSERT | 20 |
| 16 | 640714 | SCREW-.3125-18 X 3.00 GR 5 HHC | 2 |
| 17 | 654141 | NUT - .313 - 18 GR 2 LOCK NYLON INSERT | 6 |
| 18 | 672503 | OIL LINE CLAMP | 12 |
| 19 | 640152 | WASHER - 5/16" FLAT | 4 |
| 20 | 640980 | SCREW - .750-10 X 2.50 GR 8 HHC | 8 |
| 21 | 640162 | WASHER - 3/4" SPRING LOCK | 8 |
| 22 | 79147 | NUT - .750-10 GR 8 HEX | 8 |
| 23 | 653098 | WASHER - 1/2" FLAT WASHER N-SERIES | 4 |
| 24 | 640138 | NUT - .500-13 GR 2 CENTER LOCK | 4 |
| 25 | 653226 | SCREW-.50-13 X 6.00 GR 5 HHC | 4 |
| 26 | 640246 | #6 HITCH PIN | 2 |
| 27 | 679449 | HYD HOSE .5-70 8FJX-8FJX | 2 |
| 28 | 679448 | HYD HOSE .5-52 8FJX-8FJX | 2 |
| 29 | 663202 | HYD TEE 8MJX-8MJX-8MJX | 2 |
| 30 | 676403 | HYD HOSE .5-66 8ORM-8FJX | 2 |

EURO GRAPPLE FORK PARTS SCHEDULE

| ITEM NO. | PART NO. | DESCRIPTION | QTY. |
|----------|----------|----------------------------------|------|
| 31 | 679700 | 1.384" X 3.75" NYLATRON BUSHING | 4 |
| 32 | 666942 | GRAPPLE FORK DECAL | 2 |
| 33 | 666943 | HYDRAULIC PRESSURE DECAL | 2 |
| 34 | 675994 | GRAPPLE OIL LINE HOLDER PLATE | 1 |
| 35 | 659674 | HOSE WRAP | 3 |
| 36 | 673960 | HYD PLUG SET #8 ORANGE | 1 |
| 37 | 673961 | HYD PLUG SET #8 BLACK | 1 |
| 38 | 673780 | HYDRAULIC QUICK COUPLER SET | 2 |
| 39 | 676797 | SCREW - .3125-18 X 2.50 HHSLDR | 2 |
| 40 | 640016 | SCREW-.3125-18 X 1.00 GR 5 HHC | 1 |
| 41 | 640128 | NUT - .313-18 GR 2 CENTER LOCK | 1 |
| 42 | 673781 | FITTING - HYD BULKHEAD 8ORM-8MJX | 2 |
| 43 | 679756 | AUXILLIARY FEEDLINE - TOP | 1 |
| 44 | 679757 | AUXILLARY FEEDLINE - LOWER | 1 |
| 45 | 668270 | SCREW-.375-16 X 2.00 GR 8 HHC | 16 |
| 46 | 680528 | SCREW-.500-13 X 2.00 GR 5 HHC | 2 |
| 47 | 640139 | NUT-.500-13 GR 5 HEX | 2 |

CYLINDERS

IMPORTANT: Read these service tips before beginning assembly of cylinder gland or piston.

1. Keep seals clean from the time they are removed from package until they are installed.
2. Clean the groove or bore into which the seal is to be fitted before installing the seal.
3. Never touch the seal lip in handling. Always pick up the seal by its outer member.
4. Inspect each seal lip carefully for nicks, scratches, and dirt at time of installation. If dirty use a soft, clean cloth and carefully wipe off seal. **DO NOT wipe seal with fingers, this only imbeds dirt in the seal.**



NEVER clean rubber related seals with a mineral based solvent! Clean rubber seals in denatured alcohol or non-mineral based solvents only.

NOTE: Seals can be made more pliable and easier to install, if first heated in hydraulic oil to 160°F. Never use direct heat on any seals.

2 3/4" CYLINDER SERVICE KITS WITH 1 1/2" SHAFT

KIT NO. 675682:

Complete kit with all seals needed to service one (1) 2 3/4" Cylinder. Consists of:

| | |
|--------|-------------------------------|
| 1 each | 2 3/4" Gland "O" Ring |
| 1 each | 2 3/4" Backup Ring |
| 1 each | 1 1/2" EZ Squeeze Rod Seal |
| 1 each | 1 1/2" Rod Wiper |
| 2 each | 2 3/4" EZ Squeeze Piston Seal |
| 1 each | 1" Rod "O" Ring |
| 1 each | 1" Locknut |

KIT NO. 675683:

Complete assembled 2 3/4" Cylinder Gland with all seals. Consists of:

| | |
|--------|----------------------------|
| 1 each | 2 3/4" Aluminum Gland |
| 1 each | 2 3/4" Gland "O" Ring |
| 1 each | 2 3/4" Backup Ring |
| 1 each | 1 1/2" EZ Squeeze Rod Seal |
| 1 each | 1 1/2" Rod Wiper |
| 1 each | 1" Locknut |

KIT NO. 672932:

Complete assembled 2 3/4" Cylinder Piston with all seals. Consists of:

| | |
|--------|-------------------------------|
| 1 each | 2 3/4" Aluminum Piston |
| 2 each | 2 3/4" EZ Squeeze Piston Seal |
| 1 each | 1" Rod "O" Ring |
| 1 each | 1" Locknut |

KIT NO. 675684:

All seals needed to service one (1) 2 3/4" Cylinder Gland. Consists of:

| | |
|--------|----------------------------|
| 1 each | 2 3/4" Gland "O" Ring |
| 1 each | 2 3/4" Backup Ring |
| 1 each | 1 1/2" EZ Squeeze Rod Seal |
| 1 each | 1 1/2" Rod Wiper |
| 1 each | 1" Locknut |


KIT NO. 672930:

All seals needed to service one (1) 2 3/4" Cylinder Piston. Consists of:

| | |
|--------|-------------------------------|
| 2 each | 2 3/4" EZ Squeeze Piston Seal |
| 1 each | 1" Rod "O" Ring |
| 1 each | 1" Locknut |

- Parts available in kit only.

HYDRAULIC CYLINDER PARTS DIAGRAM

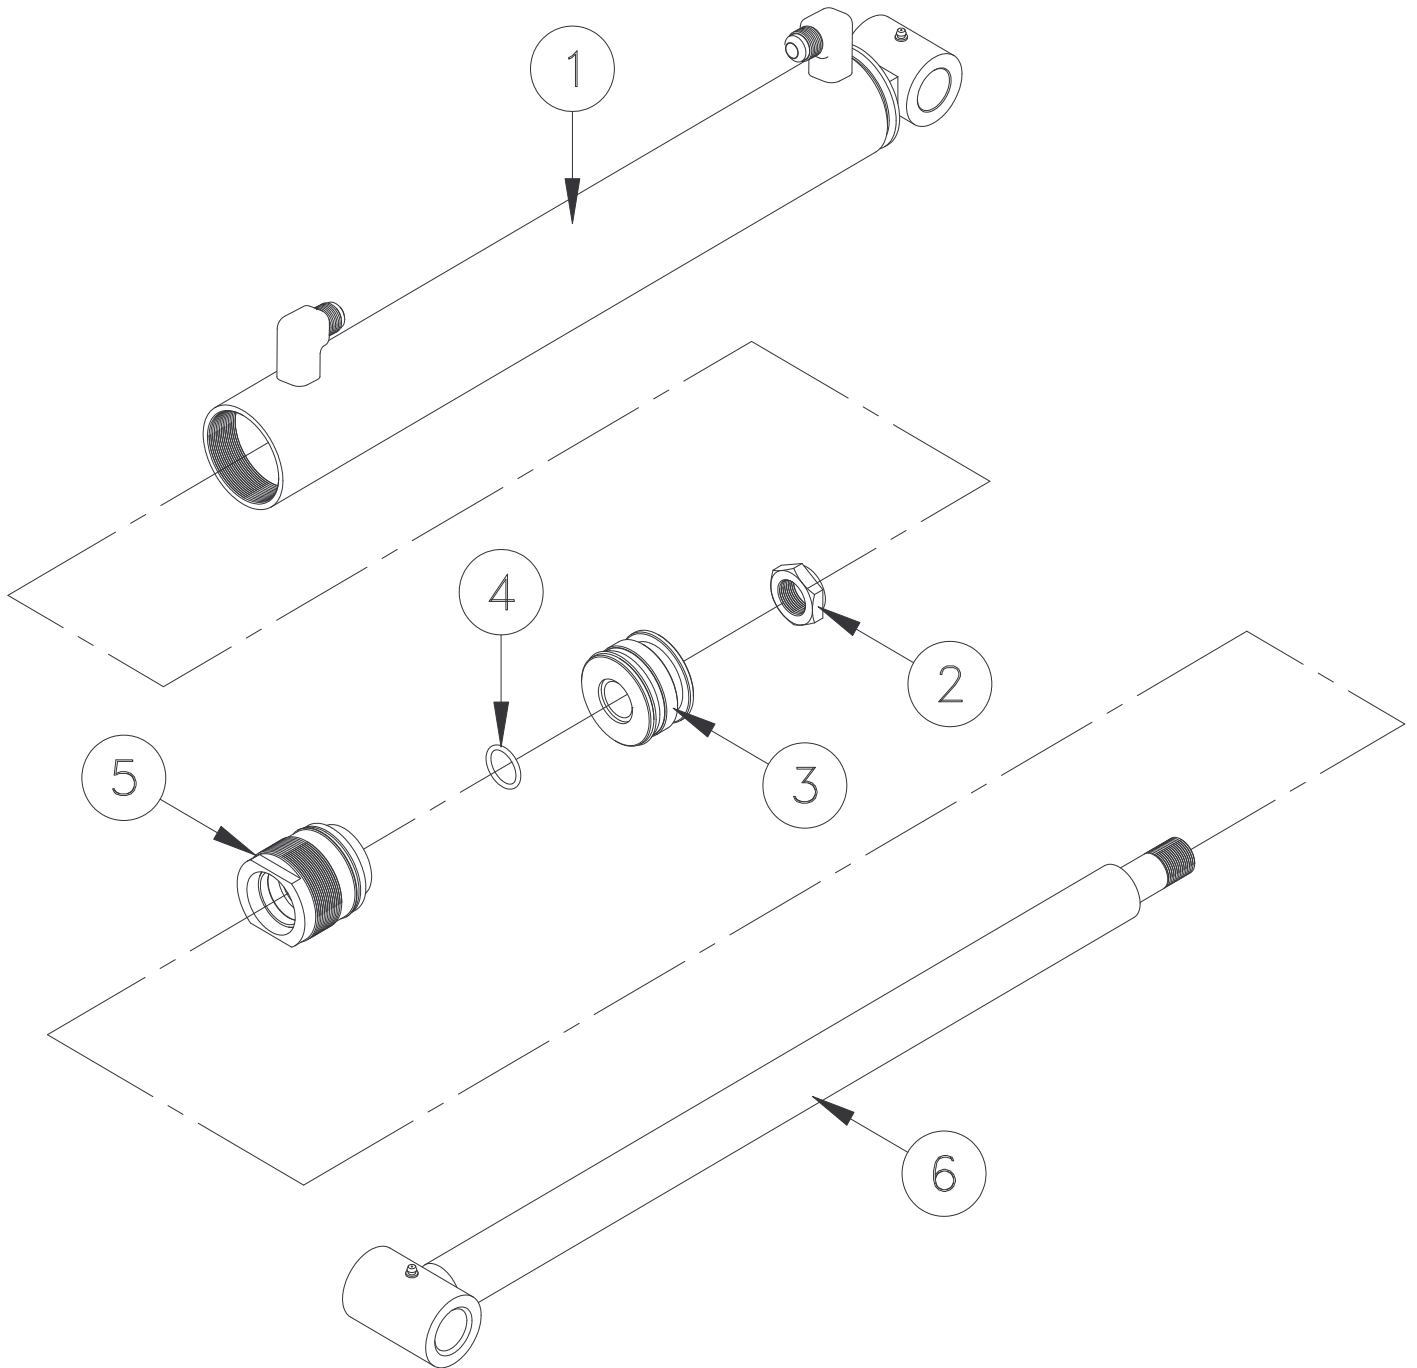


HYDRAULIC CYLINDER PARTS SCHEDULE

2 3/4" CYLINDER PARTS LIST:

GRAPPLE CYLINDER (Part No. 679415):

| Key | Part No. | Description | Quantity |
|--------|-------------|-----------------------|----------|
| 1..... | 679416..... | Tube Weldment | 1 |
| 2..... | 661017..... | Locknut | 1 |
| 3..... | 672904..... | Piston Assembly | 1 |
| 4..... | 640301..... | "O" Ring Seal | 1 |
| 5..... | 672903..... | Gland Assembly..... | 1 |
| 6..... | 679417..... | Rod Weldment | 1 |
| | 675682..... | Seal Kit..... | 1 |

CYLINDER GLAND SERVICE DIAGRAM

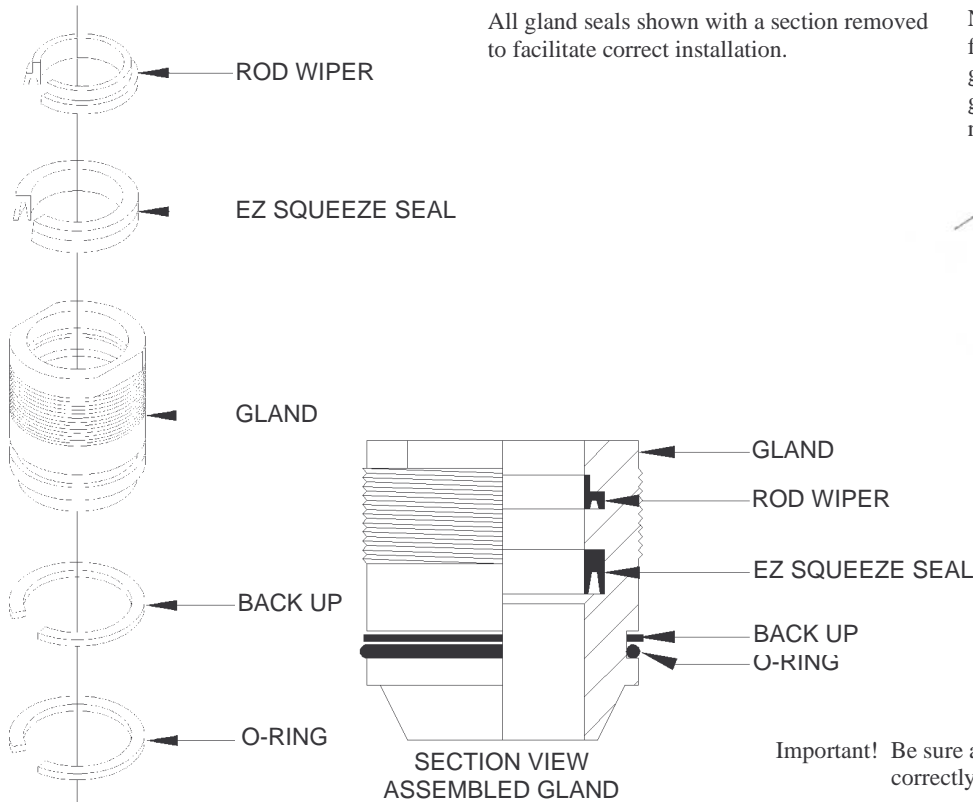

All gland seals shown with a section removed to facilitate correct installation.

Note: To install rod wiper and EZ-squeeze seal, fold similar to shape shown below, slip into gland bore and locate each in its respective groove. Tools are used to fold seals, take care not to damage sealing surfaces.




Important! Be sure all gland and piston seals have been installed correctly before cylinder is assembled!

CYLINDER PISTON SERVICE DIAGRAM


To Remove Seals

Carefully cut across each seal with a sharp knife. Be sure not to scratch sealing surfaces of aluminum piston. If a sharp knife is not available. An electric soldering gun or hot iron may be used to melt throughout seals

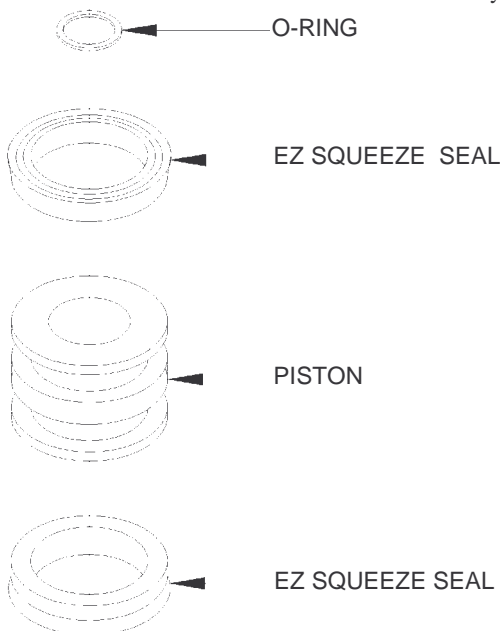

To Install Seals:

1. Thoroughly clean piston sealing surface of all foreign matter.
2. Heat new seals in hydraulic oil to 160° F. Never use a direct flame or heated water on hydraulic seals.
3. Remove seals from oil, wipe dry and install in piston grooves as shown in illustration at left. Be sure seals have completely seated in piston grooves before allowed to cool.
4. Replace piston on cylinder shaft and assemble cylinder when seals have cooled to room temperature.

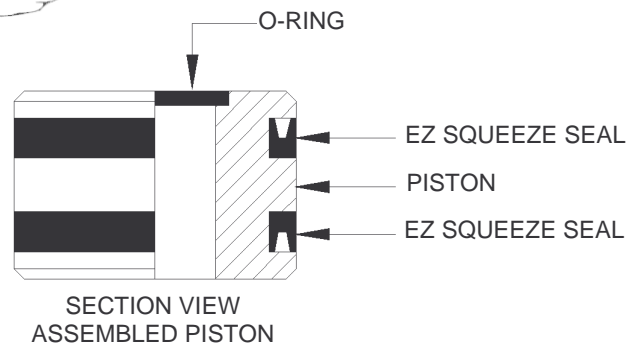

LIMITED WARRANTY

Thank you for purchasing a quality product from Koyker Manufacturing Company (Koyker). Your satisfaction with Koyker's products is very important to us. This manual will help you understand the function, service intervals, and warranty of your new Koyker product(s). It is the retail customer's responsibility to inspect the Koyker product(s) or part(s) before using. Before operating or allowing anyone to operate a Koyker product, please take time to read the manual thoroughly. Failure to do so may result in injury or death and is considered misuse. If your manual has been lost or destroyed, please contact Koyker at (800) 456-1107 or (605) 647-2811 for a new copy.

Koyker Manufacturing Company **Limited Warranty**

Koyker warrants to the retail customer of any new Koyker product, purchased from an authorized Koyker dealer, that the product manufactured by Koyker is free from defects in material and workmanship. This warranty is limited to one (1) year from the date of retail sale to the retail customer for all non-commercial, state, county, or city use. A six (6) month period from the date of retail sale to the retail customer is warranted for all commercial use.

Koyker reserves the right to inspect any products or parts which are claimed to be defective, have defective material, or have less than satisfactory workmanship before Koyker repairs or replaces any products or parts. A retail customer must notify Koyker of a claim by registered or certified mail, return receipt requested, within 30 days after discovery of a problem, or the claim shall be deemed waived. Defective products or parts must be returned to the Koyker factory, at the customer's expense, for inspection by Koyker. Koyker's obligation is limited to repairing or replacing, at its factory, any part or component it determines is defective. Koyker's replacement parts are manufactured with the same precision and skill as its original equipment. All warranted or replacement parts purchased or provided by Koyker will have, at a minimum, a 90-day warranty from the date of installation. If the expiration of the original warranty on a new Koyker product is longer than 90 days, the warranted parts will be covered until the original, new product warranty expiration date.

All cylinder claims shall be handled through Koyker's dealers or distributors. All hydraulic cylinders are thoroughly inspected before shipment from the Koyker factory. Therefore, no claim may be granted where a cylinder has been damaged or abused (including, but not limited to, bent tubes, dents, nicks, abused threads, attempted alterations, or welding), or unless the claim is made to Koyker within one (1) year from the sale to the original purchaser.

Any defective cylinder reported to Koyker within one (1) year from the sale by the dealer to the original purchaser may be repaired or replaced after Koyker's inspection and approval. In such case, notify a Koyker dealer for proper instructions. If after inspection, Koyker finds that the cylinder is not defective and has been abused or otherwise damaged, any transportation charges shall be paid by the original purchaser immediately after receiving notification of Koyker's inspection results.

LIMITED WARRANTY

Cylinders requiring factory repair more than one (1) year after sale to an original purchaser shall be given to a Koyker dealer for return to Koyker with transportation charges prepaid by the purchaser. The purchaser shall be responsible for all service and repair charges. Leaks around the shaft seal and internal bypass leaks may be field repaired. Service kits are available for those repairs.

Warranty Limitations and Exclusions.

THE WARRANTIES SET FORTH ABOVE ARE EXCLUSIVE AND ARE IN LIEU OF, AND PURCHASER HEREBY WAIVES, ALL OTHER CONDITIONS, REPRESENTATIONS AND WARRANTIES, EXPRESS OR IMPLIED BY STATUTE, USAGE, CUSTOM OF TRADE OR OTHERWISE, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NOTWITHSTANDING ANY OTHER OR PRIOR STATEMENT, WRITTEN OR ORAL, KOYKER MAKES NO OTHER WARRANTIES REGARDING THE QUALITY OF THE PRODUCTS OR THE MATERIALS CONTEMPLATED HEREUNDER.

No warranty is given by Koyker for parts, components, or trade accessories furnished by Koyker but not manufactured by it. Those items are covered by the warranty of their manufacturer, if any. No person, firm, or corporation, including the selling dealer, is authorized to assume for Koyker any other liability in connection with the sale of these goods.

KOYKER SHALL NOT BE LIABLE FOR INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES DIRECTLY OR INDIRECTLY ARISING FROM THE DESIGN, CONSTRUCTION, INSTALLATION, MANUFACTURE, OR USE OF KOYKER'S PRODUCTS, PARTS, COMPONENTS, OR TRADE ACCESSORIES. Such incidental and consequential damages shall include, but not be limited to: non-associated taxes or duties; charges for normal maintenance or service; loss of crops, property damage, or any other income loss; freight charges, other than normal freight charges associated with Koyker products or parts; other installation charges not approved by Koyker; rental charges of any substitute equipment; expenses due to lost, damaged, or delayed products or parts resulting from acts beyond the control of Koyker; and personal injury or death of operator or bystanders by misappropriated use of Koyker products or parts.

A user shall notify Koyker in writing within 30 days of any accident or occurrence involving Koyker products resulting in personal injury or property damage and shall cooperate fully with Koyker in investigating and determining the cause of such accident or occurrence. In the event that a user fails to give such notice to Koyker and so cooperate, such user agrees to indemnify and hold Koyker harmless from all loss or damage arising from such accident or occurrence.

LIMITED WARRANTY

Among other conditions, Koyker's warranty will not apply:

1. Products or parts that are subject to misuse, abuse, and/or negligence.
2. For surface wear, scheduled maintenance parts, and other items that Koyker deems expendable.
3. If products or parts not manufactured by Koyker or approved by Koyker are connected to or used in conjunction with the Koyker products or parts and if Koyker deems the non-Koyker products or parts affect the performance, safety, reliability, or life of the Koyker products or parts.
4. If products or parts sold by, but not manufactured by Koyker, have their own vendor warranties.

Koyker reserves the right to implement new designs for the continual improvement of their products. These product improvements will be ongoing, and Koyker will not be responsible for incurring cost or obligation for installations or upgrades to previously sold products.

No employee or representative of Koyker may change or amend any part of this limited warranty or make exceptions to this limited warranty, unless such changes are made in writing by Koyker's legal counsel.

All goods being returned to the Koyker factory must have a Returned Goods Authorization (RGA) number from Koyker. To obtain an RGA number, call (800) 456-1107 or e-mail Koyker at koyker@koykermfg.com.

Returned parts will not be accepted without an RGA number written on the outside of the box of the returned goods. 30 days are allowed for shipping, from the day the RGA number was issued by Koyker. If the return item(s) is not received into the Koyker system within 30 days, no credit will be issued. Upon request only, a second RGA number will be issued and an additional 30 days may be allowed. No credit will be issued if the return item(s) are not received into the Koyker system 30 days after the second RGA number was issued.

Should you require additional information or assistance, please contact Koyker Manufacturing Company at (800) 456-1107, (605) 647-2811, or e-mail Koyker at koyker@koykermfg.com.

TORQUE SPECIFICATIONS

1. Tightening Bolts & Nuts

Check all loader bolts and nuts for tightness every 50 working hours. The movement of the loader over rough terrain may cause bolts to come under pressure and over a long period of time some slight stretching of the bolt may occur. The slack created may need to be taken up by tightening. Please refer below for recommended torque settings.

Metric Recommended Torque Settings

| Size | Class 8.8 | | | | Class 10.9 | | | |
|----------|------------|-------|------|-----------|------------|-------|------|-------|
| | Lubricated | | Dry | | Lubricated | | Dry | |
| | N*m | Lb-ft | N*m | Lb-ft | N*m | Lb-ft | N*m | Lb-ft |
| M6..... | 9 | 6.5 | 11 | 8.5..... | 13 | 9.5 | 17 | 12 |
| M8..... | 22 | 16 | 28 | 20..... | 32 | 24 | 40 | 30 |
| M10..... | 43 | 32 | 55 | 40..... | 63 | 47 | 80 | 60 |
| M12..... | 75 | 55 | 95 | 70..... | 110 | 80 | 140 | 105 |
| M14..... | 120 | 88 | 150 | 110..... | 175 | 130 | 225 | 165 |
| M16..... | 190 | 140 | 240 | 175..... | 275 | 200 | 350 | 225 |
| M18..... | 260 | 195 | 330 | 250..... | 375 | 275 | 475 | 350 |
| M20..... | 375 | 275 | 475 | 350..... | 530 | 400 | 675 | 500 |
| M22..... | 510 | 375 | 650 | 475..... | 725 | 540 | 925 | 675 |
| M24..... | 650 | 475 | 825 | 600..... | 925 | 675 | 1150 | 850 |
| M27..... | 950 | 700 | 1200 | 875..... | 1350 | 1000 | 1700 | 1250 |
| M30..... | 1300 | 950 | 1650 | 1200..... | 1850 | 1350 | 2300 | 1700 |
| M33..... | 1750 | 1300 | 2200 | 1650..... | 2500 | 1850 | 3150 | 2350 |
| M36..... | 2250 | 1650 | 2850 | 2100..... | 3200 | 2350 | 4050 | 3000 |

SAE Recommended Torque Settings

| Size | Grade 5 | | | | Grade 8 | | | |
|------------|------------|-------|------|-----------|------------|-------|------|-------|
| | Lubricated | | Dry | | Lubricated | | Dry | |
| | N*m | Lb-ft | N*m | Lb-ft | N*m | Lb-ft | N*m | Lb-ft |
| 1/4..... | 9.5 | 7 | 12 | 9..... | 13.5 | 10 | 17 | 12.5 |
| 5/16..... | 20 | 15 | 25 | 18..... | 28 | 21 | 35 | 26 |
| 3/8..... | 35 | 26 | 44 | 33..... | 50 | 36 | 63 | 46 |
| 7/16..... | 55 | 41 | 70 | 52..... | 80 | 58 | 100 | 75 |
| 1/2..... | 85 | 63 | 110 | 80..... | 120 | 90 | 150 | 115 |
| 9/16..... | 125 | 90 | 155 | 115..... | 175 | 130 | 225 | 160 |
| 5/8..... | 170 | 125 | 215 | 160..... | 215 | 160 | 300 | 225 |
| 3/4..... | 300 | 225 | 375 | 280..... | 425 | 310 | 550 | 400 |
| 7/8..... | 490 | 360 | 625 | 450..... | 700 | 500 | 875 | 650 |
| 1..... | 725 | 540 | 925 | 675..... | 1050 | 750 | 1300 | 975 |
| 1-1/8..... | 900 | 675 | 1150 | 1200..... | 2050 | 1500 | 2600 | 1950 |
| 1-3/8..... | 1700 | 1250 | 2150 | 1550..... | 2700 | 2000 | 3400 | 2550 |
| 1-1/2..... | 2250 | 1650 | 2850 | 2100..... | 3600 | 2650 | 4550 | 3350 |



DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only and include a +/- 10% variance. Check tightness of fasteners periodically. DO NOT use air powered wrenches. Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.